

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BLACK+DECKER](#) /

› [BLACK+DECKER DC1005-QS Kettle User Manual](#)

BLACK+DECKER DC1005-QS

BLACK+DECKER DC1005-QS Kettle User Manual

Model: DC1005-QS

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the kettle, power base, or cord in water or other liquids.
- Always ensure the lid is securely closed during operation.
- Do not operate the kettle if the cord or plug is damaged.
- Keep out of reach of children.
- Use only with the provided power base.
- Avoid contact with hot surfaces. Use handles or knobs.
- Unplug from outlet when not in use and before cleaning.
- Do not fill above the MAX level indicator to prevent boiling water overflow.
- This appliance is intended for household use only.

PRODUCT OVERVIEW

The BLACK+DECKER DC1005-QS is a compact and efficient corded kettle designed for quick heating of water. It features a 0.5-liter capacity, 1000W power, an LED indicator, and a safety lock system on the lid.



Front view of the BLACK+DECKER DC1005-QS kettle, showing the water level indicator and the brand logo.



A person pouring hot water from the kettle into a glass mug, demonstrating its use.



A hand opening the lid of the kettle, showing the internal heating element area.



The kettle placed on a wooden table next to a glass mug and a water bottle, illustrating its compact size.

SETUP

- Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future storage or transport.
- Initial Cleaning:** Before first use, fill the kettle with clean water up to the MAX level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
- Placement:** Place the kettle on a flat, stable, heat-resistant surface, away from the edge of the countertop and out of reach of children. Ensure there is adequate ventilation around the kettle.
- Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the rating on the kettle's label (240V).

OPERATING INSTRUCTIONS

- Filling the Kettle:** Open the lid and fill the kettle with the desired amount of water. Do not fill below the MIN mark or above the MAX mark (0.5 Liters). The transparent window allows for easy visibility of the water level.

- Closing the Lid:** Close the lid securely until it clicks into place. The safety lock system ensures the lid remains closed during boiling.
- Switching On:** Place the kettle firmly on its power base. Flip the ON/OFF switch located at the base of the kettle to the 'ON' position. The LED indicator light will illuminate, signaling that the kettle is heating.



A hand pressing the power switch to activate the kettle.

- Boiling Process:** The kettle will begin to heat the water. Due to its 1000W power, water heats quickly.
- Automatic Shut-off:** This model does not feature an automatic shut-off function. Users must manually switch off the kettle once the water has boiled or reached the desired temperature. Monitor the boiling process to prevent dry boiling.
- Pouring Water:** Carefully lift the kettle from its base using the handle. Pour the hot water slowly and steadily. Be cautious of steam escaping from the spout.
- Switching Off:** After use, flip the ON/OFF switch to the 'OFF' position and unplug the kettle from the power outlet.

MAINTENANCE

Cleaning

- Exterior:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- Interior:** The hidden heating element ensures maximum hygiene. For general cleaning, rinse the interior with clean water.

- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
 - Fill the kettle with a mixture of one part white vinegar and two parts water.
 - Bring the mixture to a boil and let it stand for at least 30 minutes, or longer for heavy buildup.
 - Discard the mixture and rinse the kettle thoroughly several times with fresh water.
 - Alternatively, use a commercial descaling solution following the product's instructions.

Storage

When not in use, ensure the kettle is clean, dry, and unplugged. Store it in a cool, dry place, away from direct sunlight and moisture. The compact design makes it ideal for travel or storage in small spaces.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat.	Not plugged in; power switch is off; no power at outlet.	Ensure kettle is plugged in and switch is ON. Check power outlet.
Water tastes like plastic.	New appliance residue.	Perform initial cleaning (boil and discard water 2-3 times) as described in the Setup section.
Kettle boils slowly.	Limescale buildup.	Descale the kettle as described in the Maintenance section.
Water overflows during boiling.	Kettle overfilled.	Do not fill water above the MAX level indicator.

SPECIFICATIONS

Model: DC1005-QS

Brand: BLACK+DECKER

Power: 1000 W

Voltage: 240 V

Capacity: 0.5 Liters (500 ml)

Material: Plastic

Dimensions (L x W x H): 14.4 x 11.99 x 18.49 cm (approx. 5.67 x 4.72 x 7.28 inches)

Weight: 600 g (approx. 1.32 lbs)

Special Features: LED operation indicator, Safety lock system on lid, Hidden heating element, Transparent water level window, Anti-slip feet.

Automatic Shut-off: No

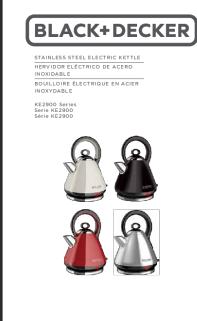
WARRANTY AND SUPPORT

For warranty information, technical support, or spare parts availability, please contact BLACK+DECKER customer service or visit their official website. Keep your purchase receipt as proof of purchase.

Manufacturer: Stanley Black & Decker France

Note: Information regarding spare parts availability is not provided in the product specifications.

Related Documents - DC1005-QS

	<p>BLACK+DECKER MM2000 20-inch Corded Electric Lawn Mower Instruction Manual</p> <p>This instruction manual provides comprehensive safety guidelines, assembly instructions, operation procedures, and maintenance tips for the BLACK+DECKER MM2000 20-inch (508mm) corded electric lawn mower. Learn how to safely operate, clean, sharpen blades, and store your mower for optimal performance and longevity. Includes important warnings and troubleshooting information.</p>
	<p>Black+Decker 1.7L SmartBoil Plus Programmable Kettle - Use and Care Manual</p> <p>Detailed use and care instructions for the Black+Decker 1.7L SmartBoil Plus Programmable Kettle (Model KE5000SC), including safety precautions, operating instructions, and warranty information.</p>
	<p>BLACK+DECKER KE2900 Series Stainless Steel Electric Kettle User Manual and Safety Guide</p> <p>Comprehensive guide for the BLACK+DECKER KE2900 Series Stainless Steel Electric Kettle, covering important safeguards, usage instructions, care and cleaning, and warranty information.</p>
	<p>BLACK+DECKER 1.7 L Electric Kettle (KE1500 Series) - User Manual & Guide</p> <p>Comprehensive user manual and guide for the BLACK+DECKER 1.7 L Electric Kettle (KE1500, KE1550, KE1555 Series), covering safety, operation, cleaning, and warranty information.</p>
	<p>BLACK+DECKER BEBL750 Corded Electric Blower Instruction Manual</p> <p>This is the official instruction manual for the BLACK+DECKER BEBL750 corded electric blower, providing safety guidelines, assembly instructions, operation details, and maintenance information.</p>
	<p>BLACK+DECKER Bagless Corded HEPA Filter Carpet Vacuum FAQs and Support</p> <p>Find answers to frequently asked questions and support information for the BLACK+DECKER Bagless Corded HEPA Filter Carpet Vacuum, model BDXCAV217G.</p>

