

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Philips](#) /

› [Philips Norelco Electric Shaver 5700 Wet & Dry \(S5370/84\) Instruction Manual](#)

Philips S5370/84

Philips Norelco Electric Shaver 5700 Wet & Dry (S5370/84) Instruction Manual

[Introduction](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

The Philips Norelco Electric Shaver 5700 Wet & Dry, model S5370/84, is engineered to provide a fast and close shave. This shaver incorporates advanced features such as a Turbo mode for enhanced power and a SmartClean system for convenient maintenance. Its design allows for both comfortable dry shaving and refreshing wet shaving with foam or gel.

Key Features:

- **Turbo-powered shave:** Provides 10% more power for efficient shaving through dense beard areas.
- **MultiPrecision Blade System:** Blades are designed to raise and cut both long and short hairs effectively.
- **5-direction Flex Heads:** Shaving heads independently flex in 5 directions to maintain close skin contact for a thorough shave.
- **Aquatec Wet and Dry:** Allows for a comfortable dry shave or a refreshing wet shave with gel or foam.
- **Smart Clean System:** Automatically cleans, lubricates, and charges the shaver, ensuring optimal performance.

2. SETUP

2.1 Initial Charging

Before using the shaver for the first time, it is recommended to fully charge the device. Connect the power cord to the shaver and plug it into a wall outlet. A full charge takes approximately one hour and provides up to 45 minutes of cordless shaving time. The battery indicator on the shaver will show the charging status.



Image: Philips Norelco Shaver 5700 connected to its charging cable, indicating the charging process.

2.2 Attaching Accessories

The shaver comes with a SmartClick Precision trimmer. To attach, simply pull off the shaving head and click the trimmer attachment into place until you hear a click. To remove, pull the trimmer off and reattach the shaving head.

2.3 SmartClean System Setup (Optional)

If your package includes the SmartClean system, place the cleaning cartridge into the system base. Ensure the system is plugged in. The SmartClean system will automatically clean, lubricate, and charge your shaver when docked.



Image: The Philips Norelco SmartClean system dock, designed for automatic cleaning, lubrication, and charging.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off

Press the power button once to turn the shaver on or off.

3.2 Dry Shaving

For a dry shave, ensure your face is clean and completely dry. Move the shaver in gentle, circular motions over your skin. Apply light pressure to achieve a close shave.



Image: A man using the Philips Norelco Shaver 5700 for a dry shave on his face, demonstrating proper technique.

3.3 Wet Shaving

The Aquatec Wet & Dry seal allows for a refreshing wet shave. You can use the shaver with shaving gel or foam, or even in the shower. Apply your preferred shaving product to your face and then shave in circular motions. Rinse the shaver head under water during and after shaving to prevent clogging.



Image: A man using the Philips Norelco Shaver 5700 on his neck and jawline, highlighting the shaver's ability to adapt to facial contours.

3.4 Using Turbo Mode

For areas with denser hair, activate the Turbo mode by pressing the 'T' button on the shaver. This provides

an extra 10% power boost for a faster and more efficient shave.

3.5 Using the SmartClick Precision Trimmer

Once the precision trimmer is attached, turn on the shaver. Use the trimmer to shape sideburns, mustaches, or to pre-trim longer hairs before shaving.

3.6 Travel Lock

To prevent accidental activation during travel, activate the travel lock. Press and hold the power button for 3 seconds until the lock symbol appears on the display. To deactivate, press and hold the power button again for 3 seconds.

4. MAINTENANCE

4.1 Daily Cleaning

After each use, especially after dry shaving, rinse the shaver head thoroughly under warm running water. You can open the shaver head by pressing the release button to allow water to flow through the internal components. Shake off excess water and allow it to air dry.



Image: A hand holding the Philips Norelco Shaver 5700 head under running water, demonstrating the recommended cleaning method.

4.2 SmartClean System Cleaning (If applicable)

If you have the SmartClean system, simply place the shaver upside down into the system after use. The system will automatically clean, lubricate, and charge the shaver. Follow the SmartClean system's instructions for replacing the cleaning cartridge.

4.3 Replacing Shaving Heads

For optimal shaving performance, it is recommended to replace the shaving heads every 12 months. Compatible replacement heads are the Philips Norelco SH50 series. To replace, twist the retaining ring counter-clockwise, remove the old heads, and insert the new ones, then twist the retaining ring clockwise to secure.

SH50 replacement shaver head*

Fits Series 4000, 5000 Shavers

Remember to replace your shaving head every 12 months for optimal performance.



*SH50 replacement head not included, **sold separately**

Image: Packaging for Philips Norelco SH50 replacement shaving heads, indicating compatibility with Series 4000 and 5000 shavers.

5. TROUBLESHOOTING

5.1 Shaver Not Turning On

- Ensure the shaver is fully charged.
- Check if the travel lock is activated. Deactivate by pressing and holding the power button for 3 seconds.

5.2 Poor Shaving Performance / Not Shaving Closely

- The shaving heads may be worn. Replace them every 12 months with SH50 replacement heads.
- Ensure the shaver heads are clean and free from hair or debris.
- Apply gentle pressure and move the shaver in circular motions.
- For dense areas, activate Turbo mode.

5.3 Skin Irritation

- Ensure your skin is clean before shaving.
- Try wet shaving with a shaving gel or foam to reduce friction.

- Allow your skin to adapt to the new shaver for a few weeks.

5.4 SmartClean System Not Functioning

- Ensure the SmartClean system is properly plugged into a power outlet.
- Check if the cleaning cartridge needs replacement.
- Ensure the shaver is correctly docked in the system.

6. SPECIFICATIONS

Model Number	S5370/84
Brand	Philips Norelco
Power Source	Battery Powered (1 Lithium Ion battery included)
Charging Time	1 hour
Shaving Time	Up to 45 minutes cordless
Special Features	Wet & Dry, MultiPrecision Blade System, 5-direction Flex Heads, Turbo Mode, SmartClean System compatible, SmartClick Precision Trimmer
Recommended Uses	Beard, Face
Product Dimensions	7.87 x 6.3 x 10.16 inches; 1.05 Pounds
Included Components	Shaver, SmartClick Precision trimmer, SmartClean system, power cord, travel case, cleaning brush, protective cap
UPC / GTIN	075020056214



Image: The Philips Norelco Shaver 5700, illustrating its approximate height of 6.7 inches (17 cm).

7. WARRANTY & SUPPORT

7.1 Warranty Information

This Philips Norelco Shaver 5700 comes with a standard 2-year manufacturer's warranty. For an extended warranty of an additional 6 months, please register your product online on the official Philips Norelco website.

7.2 Customer Support

For further assistance, product registration, or to access detailed FAQs and support resources, please visit the official Philips Norelco website or contact their customer service department. Refer to the product packaging or the official website for the most current contact information.