

HP N3R88AT#ABA

HP Business Slim Wireless Keyboard and Mouse Set User Manual

Model: N3R88AT#ABA

INTRODUCTION

This manual provides detailed instructions for setting up, operating, and maintaining your HP Business Slim Wireless Keyboard and Mouse Set. This wireless combo offers a reliable 2.4 GHz connection, designed for business environments and compatible with various HP systems.

WHAT'S IN THE BOX

Verify that all items are present in your product packaging:

- HP Business Slim Wireless Keyboard
- HP Wireless Mouse
- USB Wireless Receiver
- Installation Guide
- Software Media (if applicable)
- Warranty Card



Figure 1: HP Business Slim Wireless Keyboard, Mouse, and USB Receiver. This image displays the full-sized black wireless keyboard, the compact black wireless mouse, and the small USB receiver, all components of the set.

SETUP INSTRUCTIONS

1. Install Batteries:

- **Keyboard:** Locate the battery compartment on the underside of the keyboard. Insert two (2) AAA batteries, ensuring correct polarity.
- **Mouse:** Locate the battery compartment on the underside of the mouse. Insert two (2) AA batteries, ensuring correct polarity.
- *Note:* This set typically requires two AAA batteries for the keyboard and two AA batteries for the mouse.

2. Connect USB Receiver:

Plug the USB wireless receiver into an available USB port on your computer. The system should automatically detect and install the necessary drivers. No additional software installation is typically required for basic functionality.

3. Power On:

Ensure the keyboard and mouse are powered on (if they have an on/off switch). The devices should connect automatically to the receiver.

OPERATING INSTRUCTIONS

Wireless Connectivity

The HP Business Slim Wireless Keyboard and Mouse Set operates on a 2.4 GHz wireless frequency, providing a stable connection up to 30 feet (10 meters) from your PC. This allows for flexible placement of your input devices.

Battery Status Indicator

The keyboard features a convenient LED indicator that alerts you when the batteries are low and require replacement. This helps prevent unexpected power loss during use.

Keyboard Features

- Full-size layout with numeric keypad.
- Standard function keys (F1-F12).
- Dedicated media control keys (if present).

Mouse Features

- Standard left and right click buttons.
- Scroll wheel for navigation.
- Optical tracking for precise movement.

MAINTENANCE

Battery Replacement

When the battery indicator LED on the keyboard illuminates, or if the mouse performance degrades, replace the batteries. Refer to the "Install Batteries" section under Setup for correct battery types and installation.

Cleaning

To clean the keyboard and mouse, use a soft, lint-free cloth lightly dampened with water or a mild cleaning solution. Avoid using harsh chemicals or abrasive materials. Ensure devices are powered off before cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard or mouse not responding.	<ul style="list-style-type: none"> • Low or dead batteries. • USB receiver not properly connected. • Out of wireless range. • Interference from other wireless devices. 	<ul style="list-style-type: none"> • Replace batteries in both devices. • Ensure USB receiver is firmly plugged into a working USB port. Try a different port. • Move devices closer to the USB receiver (within 30 feet/10 meters). • Move other 2.4 GHz wireless devices away from the receiver.
Mouse cursor erratic or unresponsive.	<ul style="list-style-type: none"> • Dirty optical sensor. • Using the mouse on an unsuitable surface. • Low battery. 	<ul style="list-style-type: none"> • Clean the optical sensor on the underside of the mouse with a soft cloth. • Use the mouse on a clean, opaque, non-reflective surface or a mouse pad. • Replace mouse batteries.
Keyboard keys not registering or repeating.	<ul style="list-style-type: none"> • Low battery. • Key mechanism obstruction. 	<ul style="list-style-type: none"> • Replace keyboard batteries. • Gently clean around the affected keys to remove debris.
No Caps Lock/Num Lock/Scroll Lock indicator light.	<ul style="list-style-type: none"> • This model may not feature dedicated indicator lights for these functions. 	<ul style="list-style-type: none"> • Refer to your operating system's on-screen indicators for these statuses.

SPECIFICATIONS

Brand	HP
Model Number	N3R88AT#ABA
Connectivity Technology	Wireless (2.4 GHz Radio Frequency)
Color	Black
Hardware Platform	PC
Operating System Compatibility	Windows
Keyboard Dimensions (LxWxH)	Approximately 22.35 x 8 x 1.9 inches
Item Weight	Approximately 2.45 pounds (combined)
Power Source	Battery Powered
Batteries Required	4 AA batteries required.
Wireless Range	Up to 30 ft (10 M)
Compatible Devices	EliteDesk 800 G2, EliteOne 1000 G1, 705 G2, 800 G2, ProDesk, ProOne, Retail System MP9 G2, Workstation Z238, Z8 G4, and more.

WARRANTY AND SUPPORT

Limited Warranty

This HP Business Slim Wireless Keyboard and Mouse Set comes with a one-year limited warranty. Please refer to the included warranty card for specific terms and conditions.

Customer Support

For additional support, product information, or to explore other HP products, please visit the official HP Store online. You can find more information at: [HP Official Store](#).