

[manuals.plus](#) /› [Gastroback](#) /› [Gastroback 41029 Micro Blender Smoothie Maker Instruction Manual](#)

Gastroback 41029

Gastroback 41029 Micro Blender Smoothie Maker

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Gastroback 41029 Micro Blender Smoothie Maker. This powerful 1000-watt appliance is designed for quick and efficient preparation of smoothies, fitness drinks, crushed ice, baby food, and desserts. Its compact design and durable components make it an ideal addition to any kitchen. Please read this manual carefully before first use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Always unplug the appliance from the power outlet before cleaning, assembling, or disassembling parts.
- Avoid contact with moving parts. Blades are sharp; handle with extreme care.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Ensure the cup and blade assembly are securely attached to the motor base before operation.
- Never blend hot liquids as pressure buildup can cause the cup to burst.
- Do not overfill the blending cups. Refer to the maximum fill line.

3. PRODUCT COMPONENTS

The Gastroback 41029 Micro Blender includes the following main components:

- **Motor Base:** The main unit housing the 1000-watt motor.
- **Blade Assembly:** Features 6 stainless steel blades for efficient blending.
- **Blending Cups:** Two BPA-free Tritan cups (800 ml and 1000 ml capacity). These are shock-proof, unbreakable, and dishwasher-safe.
- **Lids:** One lid for keeping contents fresh and one 'to-go' lid with a drink opening.

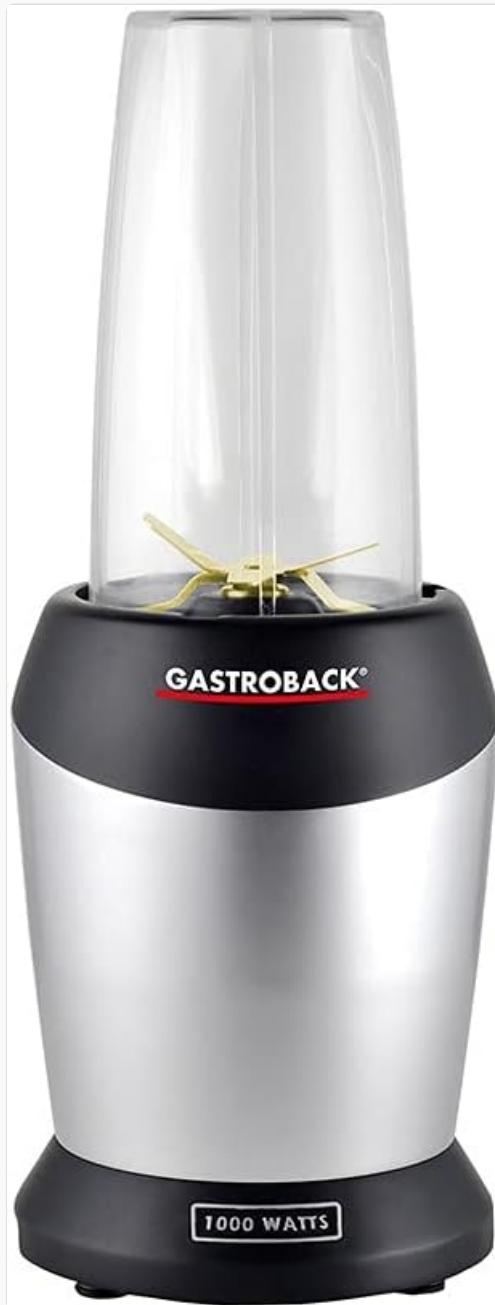


Image 3.1: The Gastroback 41029 Micro Blender motor base with a blending cup attached.



Image 3.2: The two BPA-free Tritan blending cups and the 6-blade assembly.



Image 3.3: The two blending cups shown with their respective lids, including a 'to-go' lid.

4. SETUP

- 1. Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- 2. Initial Cleaning:** Before first use, wash the blending cups, lids, and blade assembly in warm, soapy water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth.
- 3. Placement:** Place the motor base on a clean, dry, and stable surface. Ensure it is near a power outlet and away from water sources.

5. OPERATING INSTRUCTIONS

Follow these steps to prepare your desired beverages or food items:

- 1. Prepare Ingredients:** Cut ingredients into small pieces (approximately 1-2 cm) to ensure optimal blending. For best results, add liquids first, then soft ingredients, and finally harder ingredients or ice. Do not exceed the maximum fill line indicated on the blending cup.



Image 5.1: Preparing and adding ingredients to the blending cup.

2. **Attach Blade Assembly:** Screw the blade assembly firmly onto the open end of the filled blending cup. Ensure it is tightly sealed to prevent leaks.
3. **Place on Motor Base:** Invert the blending cup with the attached blade assembly and place it onto the motor base. Align the tabs on the cup with the slots on the base and twist clockwise until it locks into place.



Image 5.2: Securely placing the blending cup with blade assembly onto the motor base.

4. **Start Blending:** Plug the appliance into a suitable power outlet. The blender will start automatically once the cup is locked into position. For continuous blending, keep the cup locked. For pulse blending, twist the cup counter-clockwise to stop, then twist clockwise again to restart. Blend until desired consistency is achieved. The 1000-watt motor and 6 stainless steel blades ensure perfect mixing results for smoothies, fitness drinks, and ice crushing.
5. **Finish Blending:** Once blending is complete, twist the cup counter-clockwise to unlock and lift it off the motor base. Unplug the appliance.
6. **Serve:** Unscrew the blade assembly from the cup. You can then attach the fresh-keeping lid or the 'to-go' lid for immediate consumption or storage.



Image 5.3: A freshly prepared smoothie ready for consumption with the 'to-go' lid.



Image 5.4: Close-up view of the two types of lids provided: a storage lid and a 'to-go' lid with a drinking spout.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your blender. The cups and blade assembly are dishwasher-

safe for fast and easy cleaning.

- Unplug:** Always ensure the blender is unplugged from the power outlet before cleaning.
- Disassemble:** Remove the blending cup and unscrew the blade assembly.
- Clean Cups and Lids:** Wash the blending cups and lids with warm, soapy water or place them on the top rack of your dishwasher.
- Clean Blade Assembly:** Rinse the blade assembly under running water immediately after use. For thorough cleaning, you can wash it with warm, soapy water. Use a brush to safely clean around the blades. Exercise extreme caution as blades are sharp.
- Clean Motor Base:** Wipe the motor base with a damp cloth. Do not immerse it in water or any other liquid.
- Dry:** Ensure all parts are completely dry before reassembling or storing.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; cup not properly locked; power outage.	Ensure power cord is securely plugged in. Twist cup clockwise until it locks into place. Check power supply.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients too large.	Add more liquid. Reduce the amount of ingredients. Cut ingredients into smaller pieces. Use pulse function.
Leakage from the cup.	Blade assembly not tightened; cup overfilled.	Ensure blade assembly is screwed on tightly. Do not fill past the maximum fill line.
Motor smells or overheats.	Overloading; continuous operation for too long.	Reduce load. Allow the blender to cool down for at least 15 minutes before next use. Do not operate continuously for more than 1 minute.

8. SPECIFICATIONS

Feature	Specification
Brand	Gastroback
Model Number	41029
Power / Wattage	1000 watts
Voltage	230.00 V
Capacity	1 Liters (includes 800ml and 1000ml cups)
Material	Stainless Steel (blades), BPA-free Tritan (cups)
Product Dimensions	3.8 x 14.3 x 38 cm
Item Weight	2.6 Kilograms
Special Features	Portable

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Gastroback website. If you encounter any issues not covered in this manual, please contact Gastroback customer service for assistance.

© 2024 Gastroback. All rights reserved.