

Nintendo RVLAPNWE

Nintendo Wii Remote Plus, Toad - Instruction Manual

1. INTRODUCTION AND OVERVIEW

The Nintendo Wii Remote Plus is a unique controller designed for use with the Wii and Wii U video game systems. This manual provides essential information for setting up, operating, and maintaining your controller. The Wii Remote Plus integrates Wii MotionPlus technology, offering enhanced sensitivity and precise motion tracking for an immersive gaming experience. This specific model features a Toad-themed design.

2. PRODUCT FEATURES

- **Integrated Wii MotionPlus:** Provides increased sensitivity and accurate motion tracking, replacing traditional button presses with natural hand movements.
- **Enhanced Immersion:** The controller senses your actions, making you feel more connected to the game.
- **Broad Compatibility:** Fully compatible with both Wii and Wii U video game systems.
- **Themed Design:** Features a distinctive Toad character design.

3. SETUP

3.1 Battery Installation

The Wii Remote Plus requires two (2) AAA batteries for operation. To install or replace batteries:

1. Locate the battery cover on the back of the Wii Remote Plus.
2. Slide the battery cover downwards to remove it.
3. Insert two fresh AAA batteries, ensuring correct polarity (+/-) as indicated inside the battery compartment.
4. Replace the battery cover by sliding it upwards until it clicks into place.

3.2 Controller Syncing

To connect your Wii Remote Plus to your Wii or Wii U console:

1. Ensure your console is powered on.

2. Open the SD card slot cover on the front of the Wii console or the sync button cover on the Wii U console to access the red SYNC button.
3. Press and release the SYNC button on the console. The player indicator lights on the console will flash.
4. On the Wii Remote Plus, open the battery cover. Locate the small red SYNC button inside the battery compartment. Press and release this button. Note: The design allows for easy access to the sync button without fully removing the battery cover, often using a small tool or the wrist strap's pin.
5. The player indicator lights on the bottom of the Wii Remote Plus will flash and then remain lit on the assigned player number (1-4) once syncing is complete.



Image: A blue Nintendo Wii Remote Plus controller. Please note that the product described in this manual is the Toad-themed version, which may differ in color and specific aesthetic details from the image shown.

4. OPERATING INSTRUCTIONS

The Wii Remote Plus is designed for intuitive motion-based gameplay. Hold the controller firmly and use the wrist strap to prevent accidental drops.

- **A Button:** The primary action button, typically used for selection, confirmation, or main in-game actions.
- **D-Pad (Directional Pad):** Used for directional input, menu navigation, and specific in-game movements.
- **Home Button:** Press to access the Home Menu, allowing you to adjust settings, return to the console menu, or exit a game.
- **Plus (+) and Minus (-) Buttons:** Often used for zooming, adjusting volume, or secondary in-game functions.
- **1 and 2 Buttons:** Used for various in-game actions, depending on the specific game.
- **B Trigger:** Located on the underside of the remote, typically used for grabbing, firing, or other interactive actions.
- **Motion Control:** Tilt, swing, and point the remote to interact with on-screen elements and perform actions in games that support motion sensing.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Wii Remote Plus:

- **Cleaning:** Wipe the controller regularly with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if the controller will not be used for an extended period to prevent leakage.
- **Handling:** Always use the included wrist strap during gameplay to prevent accidental drops and potential damage to the controller or surrounding objects.

6. TROUBLESHOOTING

6.1 Controller Not Responding or Syncing

- **Check Batteries:** Ensure the batteries are correctly installed and have sufficient charge. Replace with fresh AAA batteries if necessary.
- **Re-sync:** Follow the syncing instructions in Section 3.2 to re-establish the connection between the controller and the console.
- **Interference:** Ensure there are no obstructions or strong electromagnetic interference between the controller and the console.
- **Console Compatibility:** Verify that the game you are playing supports the Wii Remote Plus and does not require additional accessories.

7. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	RVLAPNWE
Manufacturer	Nintendo
Product Dimensions	2.52 x 2.05 x 8.47 inches
Item Weight	8 ounces
Batteries Required	2 AAA batteries (included)
Release Date	January 15, 2016
First Available	November 25, 2015
Language	English
Rated	Everyone

8. WARRANTY AND SUPPORT

For detailed warranty information, technical support, and additional resources, please visit the official Nintendo website or contact Nintendo customer service. Keep your proof of purchase for warranty claims.

Official Nintendo Website: www.nintendo.com