

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [4moms](#) /

› [4moms High Chair Instruction Manual - Model 2000776](#)

4moms 2000776

4moms High Chair Instruction Manual

Brand: 4moms | Model: 2000776

INTRODUCTION

This manual provides essential instructions for the safe and proper use, assembly, and maintenance of your 4moms High Chair. Designed for infants and toddlers, this high chair features a magnetic, one-handed tray attachment and an easy-to-clean design to simplify mealtime.



Figure 1: Front view of the 4moms High Chair.

SAFETY INFORMATION

Always ensure the safety of your child by following these guidelines:

- Never leave your child unattended in the high chair.
- Always secure your child with the harness system.
- Ensure the high chair is placed on a flat, stable surface.
- Do not use the high chair if any parts are damaged or missing.
- Keep children away from the high chair during assembly and disassembly.

SETUP

The 4moms High Chair requires minimal assembly. Refer to the detailed assembly instructions included in the product packaging for step-by-step guidance. Ensure all components are securely fastened before first use.



Figure 2: Side view of the assembled high chair.

OPERATING INSTRUCTIONS

Tray Attachment and Removal

The high chair features a magnetic tray that can be attached and removed with one hand. Simply align the tray with the chair's attachment points, and the magnets will guide it into place. To remove, press the release button (if applicable) and lift the tray.



Figure 3: One-handed tray removal.

Magnetic Feeding Accessories

The high chair's tray top is magnetic, designed to securely hold compatible magnetic bowls and plates (sold separately). This feature helps prevent spills and assists with self-feeding.



Figure 4: Child using magnetic feeding accessories.

Height and Tray Positions

The high chair offers 3 height positions and 2 tray positions to accommodate your growing child. Adjust the height by pressing the release buttons on the side of the chair and sliding the seat to the desired level. The tray can also be adjusted forward or backward for optimal fit.



Figure 5: High chair height adjustment.

Harness Usage

The high chair is equipped with a shoulder strap harness system, which can be configured as either a 5-point or 3-point harness. Always ensure the harness is properly adjusted and securely fastened around your child before use.

MAINTENANCE AND CLEANING

General Cleaning

The entire high chair can be wiped clean with warm water and mild soap. Avoid harsh chemicals or abrasive cleaners.

Removable Foam Seat Insert

The foam seat insert is removable for thorough cleaning. Gently pull the insert away from the chair frame to detach. Wipe clean with warm water and mild soap, then allow to air dry completely before reattaching.

Tray Liner

The tray liner is top-rack dishwasher safe for convenient cleaning.

Tray

The main tray should not be placed in the dishwasher or submerged in water. It can be wiped clean with warm water and mild soap.

Harness Straps

The shoulder straps can be removed for cleaning. The nylon straps are easily wiped clean with warm water and mild soap. The shoulder straps can also be machine washed.

TROUBLESHOOTING

If you encounter any issues with your 4moms High Chair, please refer to the comprehensive troubleshooting guide in the full product manual or contact 4moms customer support for assistance.

SPECIFICATIONS

- **Product Dimensions:** 22 x 38 x 28 inches
- **Item Model Number:** 2000776
- **Maximum Weight Recommendation:** 60 Pounds
- **Material Type:** Removable foam insert (easy to wipe clean)
- **Harness Type:** Shoulder Straps (5-point or 3-point convertible)
- **Item Weight:** 15 pounds
- **Portability:** Yes

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please visit the official 4moms website or refer to the warranty card included with your product. You can also contact 4moms customer service directly for any product-related inquiries.