

## Kichler 300239NI

# Kichler Ellys 56-inch Ceiling Fan with Light & Wall Control

Model: 300239NI

## INTRODUCTION

Welcome to your new Kichler Ellys 56-inch Ceiling Fan. This manual provides detailed instructions for the safe installation, operation, and maintenance of your ceiling fan. Please read all instructions carefully before beginning installation and retain this manual for future reference. Proper installation and adherence to safety guidelines are crucial for optimal performance and user safety.

## IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when installing and operating electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Electrical Safety:** Ensure the power is turned off at the circuit breaker or fuse box before beginning installation. All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with electrical wiring, consult a qualified electrician.
- **Mounting:** The ceiling fan must be mounted to a structurally sound ceiling joist or an outlet box marked "Acceptable for Fan Support of 35 lbs (15.9 kg) or less."
- **Blade Clearance:** Ensure there is adequate clearance from the fan blades to any walls or obstructions. A minimum of 7 feet (2.13 meters) from the floor to the bottom of the blades is recommended.
- **Light Kit:** Do not attempt to service the light kit while power is connected. Allow the light to cool completely before handling.
- **Cleaning:** Use a soft, damp cloth for cleaning. Never use abrasive cleaners or solvents.

## PACKAGE CONTENTS

Carefully unpack your ceiling fan and inspect the contents to ensure all parts are present and undamaged. If any parts are missing or damaged, contact Kichler customer support immediately.

- Motor Housing Assembly
- Fan Blades (6)
- Blade Holders

- Light Kit Assembly
- Wall Control Unit
- Mounting Bracket
- Downrod and Canopy
- Hardware Pack (screws, washers, wire nuts)



Image: The Kichler Ellys 56-inch Ceiling Fan, showcasing the brushed nickel motor housing, six dark wood-finish blades, and integrated LED light kit.

## SETUP AND INSTALLATION

Follow these steps for proper installation of your Kichler Ellys ceiling fan. It is recommended to have two people for installation.

1. **Turn Off Power:** Before starting, ensure the power supply to the outlet box is turned off at the circuit breaker or fuse box.
2. **Install Mounting Bracket:** Secure the mounting bracket to the ceiling outlet box. Ensure the outlet box is securely fastened to the building structure and can support the fan's weight.



Image: A close-up view of a ceiling fan mounting bracket being secured to an electrical box on the ceiling.

3. **Assemble Downrod:** Insert the downrod through the canopy and motor housing. Secure with the provided pin and clip.
4. **Hang Fan Assembly:** Carefully lift the fan assembly and hang it on the mounting bracket.
5. **Perform Wiring Connections:** Connect the fan's electrical wires to the household supply wires according to the wiring diagram provided in the full instruction manual. Use the supplied wire nuts.



Image: Detailed view of electrical wiring connections being made inside a ceiling fan canopy, showing color-coded wires joined with wire nuts.

6. **Secure Canopy:** Slide the canopy up and secure it to the mounting bracket with the screws.
7. **Attach Fan Blades:** Attach the fan blades to the blade holders, then secure the blade holders to the motor housing.
8. **Install Light Kit:** Connect the light kit wiring and attach the light kit assembly to the bottom of the fan motor housing. Install the light cover.
9. **Install Wall Control:** Follow the separate instructions provided with the wall control unit for its installation and wiring.
10. **Restore Power:** Once all steps are complete and connections are secure, restore power at the circuit breaker.

## OPERATING INSTRUCTIONS

---

Your Kichler Ellys ceiling fan is controlled by the included wall control unit. Familiarize yourself with its functions for optimal use.

### Wall Control Functions:

- **Fan Speed Control:** Use the designated buttons to cycle through multiple fan speeds (typically 3-6 speeds).
- **Light On/Off:** Press the light button to turn the light on or off.
- **Light Dimming:** Hold the light button to dim or brighten the light output.
- **Fan Direction (Reverse Switch):** A slide switch on the fan motor housing (or sometimes on the wall control) allows you to change the direction of blade rotation. Use downdraft for cooling in summer and updraft for circulating warm air in winter. Ensure the fan is off before changing direction.



Image: A Kichler wall control unit, featuring buttons for fan speed adjustment and light control.

## MAINTENANCE

---

Regular maintenance ensures the longevity and efficient operation of your Kichler ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, lint-free cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Do not use abrasive cleaners or solvents.

- **Blade Inspection:** Check blade screws for tightness annually. Loose blades can cause wobbling and noise.
- **Light Kit:** The integrated LED light source is designed for long life and typically does not require replacement. If issues arise, contact customer support.
- **General Inspection:** Annually check all connections and mounting hardware for tightness.

## TROUBLESHOOTING

Before contacting customer support, review the following common issues and their solutions.

| Problem             | Possible Cause  | Solution   |
|---------------------|---|--|
| Fan does not start  | No power to the fan; Loose wire connections; Incorrect wall control wiring. | Check circuit breaker/fuse; Ensure all wire connections are secure; Verify wall control wiring per instructions.         |
| Fan wobbles         | Loose blade screws; Unbalanced blades; Loose mounting bracket.              | Tighten all blade screws; Use a balancing kit (not included) if necessary; Ensure mounting bracket is securely fastened. |
| Light does not work | Loose wire connections; Faulty light kit wiring; Power off to light.        | Check light kit wiring connections; Ensure power is on to the light circuit; Contact support if LED is faulty.           |
| Noisy operation     | Loose screws; Motor hum; Blades hitting an obstruction.                     | Check all screws on fan and mounting bracket; Ensure blades are not hitting anything; Some motor hum is normal.          |

## SPECIFICATIONS

Detailed technical specifications for the Kichler Ellys 56-inch Ceiling Fan, Model 300239NI.

| Feature             | Specification      |
|---------------------|--------------------|
| Brand               | Kichler            |
| Model Name          | 300239NI           |
| Color               | Brushed Nickel     |
| Electric Fan Design | Ceiling Fan        |
| Power Source        | Corded Electric    |
| Style               | Modern             |
| Product Dimensions  | 56"D x 56"W x 56"H |
| Room Type           | Living Room        |
| Special Feature     | Heavy Duty         |

| Feature              | Specification              |
|----------------------|----------------------------|
| Recommended Uses     | Air Circulation            |
| Wattage              | 17 watts                   |
| Finish Type          | Brushed                    |
| Air Flow Capacity    | 5964 Cubic Feet Per Minute |
| Voltage              | 120 Volts                  |
| Item Weight          | 10 Pounds                  |
| Indoor/Outdoor Usage | Indoor                     |
| Specification Met    | Energy Star                |
| Control Method       | Wall Control               |
| Efficiency           | High Efficiency            |
| Type of Bulb         | LED                        |

## WARRANTY INFORMATION

---

Your Kichler Ellys 56-inch Ceiling Fan (Model 300239NI) is covered by a **1 Year Manufacturer Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your original purchase receipt as proof of purchase for any warranty claims. The warranty does not cover damage resulting from improper installation, misuse, abuse, or natural disasters.

## CUSTOMER SUPPORT

---

For technical assistance, replacement parts, or to inquire about warranty services, please visit the official Kichler website or contact their customer service department. You can find more information and contact details on the [Kichler Store Page](#).

---