

[Manuals.plus](#) /

> [iball](#) /

> iBall Tarang Mini Tower 2.1 Bluetooth Speakers User Manual

iball Tarang Mini tower

iBall Tarang Mini Tower 2.1 Bluetooth Speakers User Manual

Model: Tarang Mini tower

INTRODUCTION

Thank you for choosing the iBall Tarang Mini Tower 2.1 Bluetooth Speakers. This manual provides essential information for setting up, operating, and maintaining your speaker system. Please read it carefully before use to ensure optimal performance and longevity of your device.

PRODUCT OVERVIEW

The iBall Tarang Mini Tower 2.1 Bluetooth Speakers offer versatile audio playback options including Bluetooth, USB, FM Radio, and AUX input, all controllable via a remote. Its compact tower design includes a handle for portability.



Key Features:

- 2.1 Channel Audio Output
- Bluetooth Connectivity for wireless audio streaming
- USB Playback for media files
- Built-in FM Radio
- AUX Input for wired connections
- Full-function Remote Control
- Integrated Handle for easy portability
- Waterproof design

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove the speaker system and all accessories from the packaging. Ensure all components are present: main speaker unit, remote control, and power adapter.
2. **Placement:** Place the speaker on a stable, flat surface. For optimal sound, position it in a way that does not obstruct the sound output.
3. **Power Connection:** Connect the power adapter to the speaker's power input port, then plug the adapter into a standard electrical outlet.
4. **Initial Power On:** Press the Power button on the speaker or the remote control to turn on the device.

OPERATING INSTRUCTIONS

1. Bluetooth Mode

1. **Activate Bluetooth:** Turn on the speaker. Press the "Mode" button on the speaker or remote control until "Bluetooth" mode is selected. The speaker will indicate it is ready for pairing (e.g., a blinking LED or an audible prompt).
2. **Pairing:** On your mobile device (smartphone, tablet), enable Bluetooth and search for available devices. Select "iBall Tarang Mini" (or similar name) from the list.
3. **Connection:** Once paired, the speaker will confirm the connection (e.g., a solid LED or an audible prompt). You can now play audio from your device wirelessly through the speaker.

2. USB Playback Mode

1. **Insert USB Drive:** Insert a USB flash drive containing MP3 audio files into the USB port on the speaker.
2. **Select USB Mode:** Press the "Mode" button on the speaker or remote control until "USB" mode is selected. The speaker will automatically begin playing audio files from the USB drive.
3. **Control Playback:** Use the remote control to play/pause, skip tracks (forward/backward), and adjust volume.

3. FM Radio Mode

1. **Select FM Mode:** Press the "Mode" button on the speaker or remote control until "FM" mode is selected.
2. **Auto Scan:** Press and hold the "Play/Pause" button on the remote or speaker to initiate an automatic scan for FM stations. The speaker will scan and save available stations.
3. **Tune Stations:** Use the "Previous/Next Track" buttons on the remote or speaker to navigate through the saved FM stations.

4. AUX Input Mode

1. **Connect Device:** Use a 3.5mm audio cable (not included) to connect the AUX input port on the speaker to the audio output jack of your external device (e.g., MP3 player, computer).
2. **Select AUX Mode:** Press the "Mode" button on the speaker or remote control until "AUX" mode is selected.
3. **Play Audio:** Play audio from your connected device. Adjust volume using the speaker's controls or the remote.

5. Remote Control Functions

The remote control provides convenient access to all speaker functions:

- **Power:** Turn the speaker On/Off.
- **Mode:** Switch between Bluetooth, USB, FM, and AUX modes.
- **Volume +/-:** Increase or decrease the master volume.
- **Play/Pause:** Play or pause audio playback.
- **Previous/Next:** Skip to the previous or next track/station.
- **Bass/Treble:** Adjust bass and treble levels (if available on remote).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** While the speaker is waterproof, avoid submerging it in water or exposing it to heavy splashes for prolonged periods. Ensure all ports are dry before connecting cables.

TROUBLESHOOTING

Problem	Possible Solution
No Power	Ensure the power adapter is securely connected to both the speaker and a working electrical outlet. Check if the power outlet is functional. Verify the power button on the speaker or remote is pressed.
No Sound	Increase the volume on both the speaker and the connected audio source. Ensure the correct input mode (Bluetooth, USB, FM, AUX) is selected. Check audio cables for secure connection in AUX mode. For Bluetooth, ensure the device is properly paired and connected.
Bluetooth Not Connecting	Ensure the speaker is in Bluetooth pairing mode. Disable and re-enable Bluetooth on your mobile device. Move your device closer to the speaker. Remove "iBall Tarang Mini" from your device's Bluetooth list and try pairing again.
FM Radio Poor Reception	Ensure the speaker is placed in an open area, away from obstructions or other electronic devices that may cause interference. Perform an auto-scan again to find stronger signals.

SPECIFICATIONS

Brand	iball
Model Name	Tarang Mini tower
Audio Channels	2.1
Connectivity Technology	Bluetooth, USB
Audio Output Mode	Surround
Mounting Type	Floor Standing
Material	Plastic
Speaker Type	Tower
Control Method	Remote
Speaker Size	37.2 Centimetres
Tweeter Driver Diameter	1 Inch
Water Resistance Level	Waterproof
Power Source	Battery Powered
Compatible Devices	Smartphone, Tablet

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official iBall website. Keep your purchase receipt as proof of purchase for warranty claims.

iBall Official Website: www.iball.co.in (Note: This is a general placeholder link, please refer to your product documentation for the exact support contact or website.)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0183RJ1JW>

More documents and user manuals: <https://manuals.plus/>