

Philips Norelco S1150/81

Philips Norelco Corded Electric Shaver 1100 (S1150/81) User Manual

Model: S1150/81

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Philips Norelco Corded Electric Shaver 1100 (Model S1150/81). Please read these instructions carefully before using the appliance and retain them for future reference.

2. IMPORTANT SAFETY INFORMATION

Warning: To reduce the risk of electric shock, injury, or damage to the appliance, always follow these basic safety precautions:

- Avoid water exposure while the shaver is operating.
- Exercise caution around the power cord to prevent electric shock.
- Use caution to avoid cuts or skin irritation during operation.
- This appliance is designed for dry shaving only.

3. PRODUCT OVERVIEW

3.1 Key Features

- **CloseCut Blade System:** Durable, self-sharpening blades designed for a close shave.
- **4-Direction Flex Heads:** Shaver heads flex in 4 directions to easily adjust to the curves of your face and neck.
- **Corded Operation:** Provides constant power for reliable performance.
- **One-Touch Open:** Shaver head can be easily opened for rinsing under tap water.
- **Ergonomic Grip:** Designed for comfortable handling.

3.2 Components

The Philips Norelco Shaver 1100 consists of the main shaver body, three rotary shaving heads, and a power cord for operation.







Figure 1: Front view of the Philips Norelco Shaver 1100, highlighting its ergonomic design and three rotary shaving heads.



Figure 2: Side profile of the Philips Norelco Shaver 1100, showing its contoured body for comfortable grip.



Figure 3: Close-up view of the three CloseCut Blade System rotary heads on the Philips Norelco Shaver 1100, designed for a close shave.

4. SETUP

Before first use, ensure the shaver is clean and dry.

1. Insert the small plug of the power cord into the shaver's socket.
2. Plug the adapter into a wall outlet. The shaver is now ready for use.

5. OPERATING INSTRUCTIONS

For optimal shaving results, follow these steps:

1. Ensure the shaver is connected to a power source.
2. Press the on/off button to turn on the shaver.
3. Move the shaver in small circular motions over your skin. The 4-direction Flex Heads will adjust to the contours of your face and neck.
4. Apply gentle pressure for a close and comfortable shave.
5. After shaving, press the on/off button to turn off the shaver.

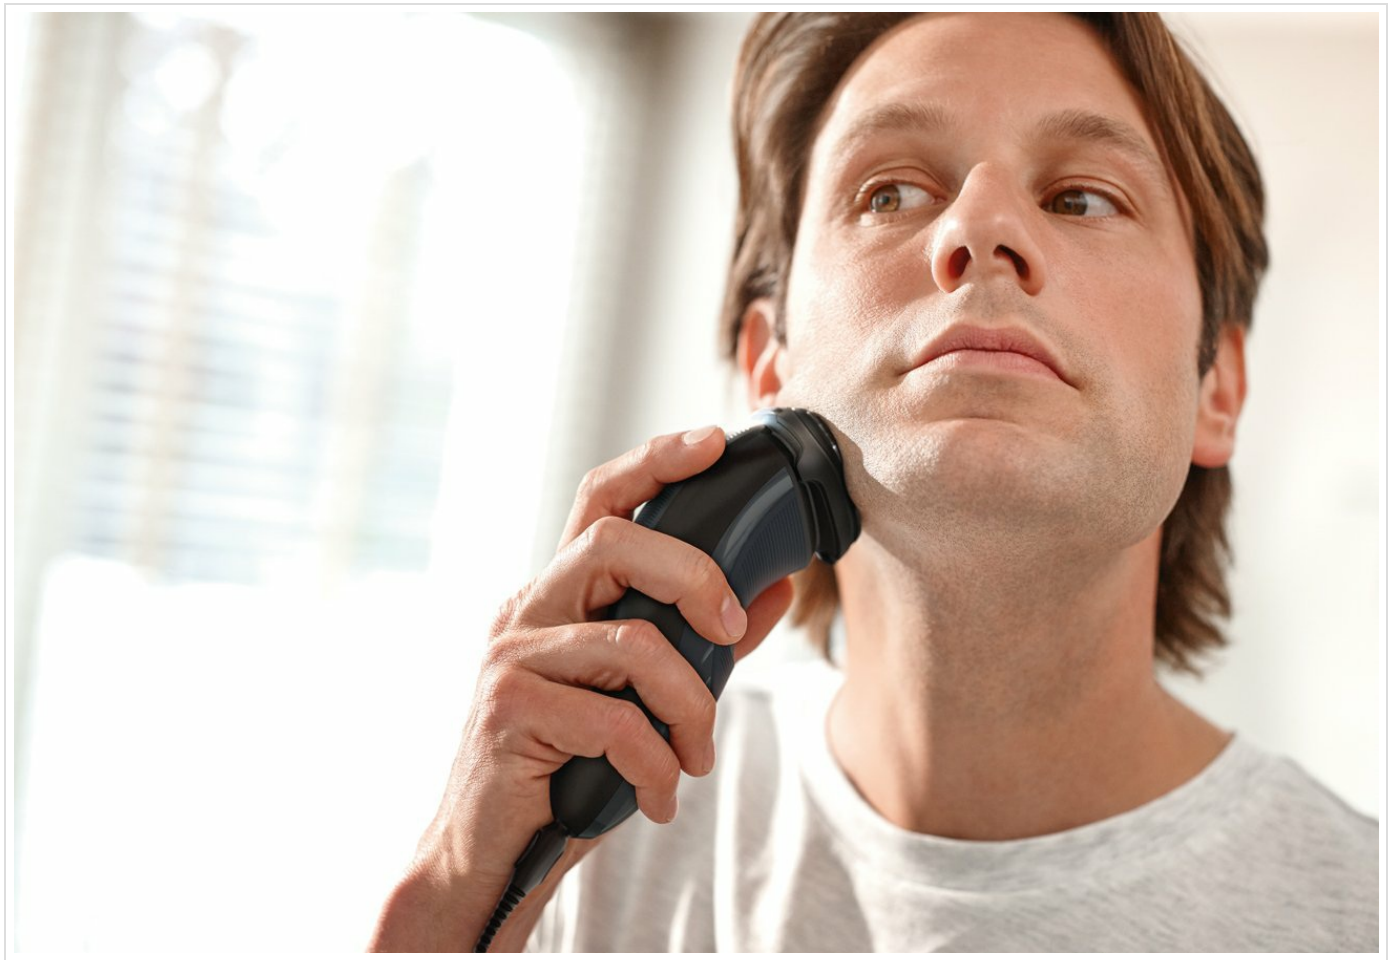


Figure 4: A person using the Philips Norelco Shaver 1100 to shave their face, demonstrating the shaver's application.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene.

6.1 Daily Cleaning

1. Turn off and unplug the shaver.
2. Press the release button to open the shaver head unit.
3. Rinse the shaver head unit thoroughly under warm running tap water.
4. Shake off excess water and allow the shaver head unit to air dry before closing.



Figure 5: A hand holding the Philips Norelco Shaver 1100 with its head open, being rinsed under running tap water for easy cleaning.

6.2 Replacement Shaver Heads

For continued optimal performance, it is recommended to replace the shaver heads approximately every 12 months. Compatible replacement heads are the SH30 series.

SH30 replacement shaver head*

**Fits Series
1000, 2000,
3000 and
Click and Style
Shavers**

Remember to
replace your
shaving head
every 12 months
for optimal
performance.



***SH30 replacement head not included,
sold separately**

Figure 6: Packaging for SH30 replacement shaver heads, compatible with Philips Norelco Series 1000, 2000, 3000 shavers. Note: Replacement heads are sold separately.

7. TROUBLESHOOTING

If you encounter issues with your shaver, consider the following:

- **Shaver not turning on:** Ensure the power cord is securely plugged into both the shaver and a working wall outlet.
- **Reduced shaving performance:** Clean the shaver heads thoroughly. If performance does not improve, consider replacing the shaver heads (SH30).
- **Skin irritation:** Ensure you are using the shaver on clean, dry skin. Allow your skin a few weeks to adjust to a new electric shaver.

For further assistance, please contact Philips Norelco customer support.

8. SPECIFICATIONS

Model Number	S1150/81
Power Source	Corded Electric
Blade System	CloseCut Blade System
Flex Heads	4-Direction Flex Heads
Recommended Use	Face
Product Dimensions	3.47 x 5 x 9.65 inches (8.8 x 12.7 x 24.5 cm)
Weight	13.4 ounces (380 grams)
Stand-by Power	0.2 W



Figure 7: An image illustrating the dimensions of the Philips Norelco Shaver 1100, showing a height of 6.4 inches (16 cm).

9. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Philips Norelco website or contact their customer service directly. Warranty periods and terms may vary by region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question