

Philips 915005193701

Philips myGarden Arbour LED Outdoor Wall Light Instruction Manual

Model: 915005193701

1. INTRODUCTION

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your Philips myGarden Arbour LED Outdoor Wall Light. Please read these instructions carefully before installation and retain them for future reference.

The Philips myGarden Arbour LED outdoor wall light, model 915005193701, is designed to provide upward and downward illumination for outdoor spaces such as gardens and patios. It features integrated LED technology for optimal light output and energy efficiency.



Image 1: Philips myGarden Arbour LED Outdoor Wall Light. This image displays the anthracite grey wall light, highlighting its design for both upward and downward light projection.

2. SAFETY INFORMATION

WARNING: Always disconnect power before installation, maintenance, or bulb replacement to prevent electric shock.

- Installation must be performed by a qualified electrician in accordance with local wiring regulations.
- Ensure the mounting surface can support the weight of the fixture.
- Do not modify the product in any way. Modifications may void the warranty and create safety hazards.
- This product is designed for outdoor use and is rated IP44, providing protection against splashing water.
- Do not look directly into the LED light source when illuminated.
- Keep packaging materials out of reach of children.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- Philips myGarden Arbour LED Outdoor Wall Light fixture
- Integrated LED module (non-replaceable)
- Mounting Hardware (screws, wall plugs)
- Instruction Manual

4. SETUP AND INSTALLATION

Follow these steps for proper installation of your outdoor wall light.

1. **Prepare the Installation Area:** Choose a suitable outdoor location on a wall. Ensure the power supply is turned off at the main circuit breaker before starting.
2. **Mark Drilling Points:** Use the mounting bracket (if separate) or the fixture itself as a template to mark the drilling points on the wall.
3. **Drill Holes:** Drill holes at the marked points using an appropriate drill bit for your wall material. Insert wall plugs if necessary.
4. **Connect Wiring:** Carefully connect the household electrical wires to the fixture's wiring. Ensure correct polarity (Live, Neutral, Earth) according to local electrical codes. Use appropriate waterproof connectors for outdoor installations.
5. **Mount the Fixture:** Secure the light fixture to the wall using the provided mounting hardware. Ensure it is firmly attached and stable.
6. **Restore Power:** Once installation is complete and all connections are secure, restore power at the main circuit breaker.

Note: This fixture is designed for direct wiring. No assembly of the LED module is required as it is integrated.

5. OPERATING INSTRUCTIONS

The Philips myGarden Arbour LED Outdoor Wall Light operates via your standard outdoor lighting circuit switch.

- To turn the light **ON**, activate the wall switch connected to the fixture.
- To turn the light **OFF**, deactivate the wall switch connected to the fixture.

This model does not include a motion sensor or dimming capabilities unless specified in a variant. Refer to your specific product packaging for additional features.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your light fixture.

- **Cleaning:** Clean the fixture periodically with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electrical components.
- **Inspection:** Periodically inspect the fixture for any signs of damage, loose connections, or wear. If any issues are found, disconnect power and consult a qualified electrician.
- **LED Module:** The LED module in this fixture is integrated and not user-replaceable. Its lifespan is rated for up to 25,000 hours.

7. TROUBLESHOOTING

If you encounter issues with your Philips myGarden Arbour LED Outdoor Wall Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply; faulty wiring; switch off.	Check circuit breaker and wall switch. Verify wiring connections (consult electrician if unsure).
Light flickers.	Loose wiring connection; unstable power supply.	Ensure all wiring connections are secure. Check household power supply stability.
Reduced light output.	Dirt or debris on the light surface.	Clean the light fixture with a soft, damp cloth.

If the problem persists after attempting these solutions, contact Philips customer support or a qualified electrician.

8. SPECIFICATIONS

Feature	Detail
Brand	Philips
Model Number	915005193701
Product Dimensions	13L x 12.7W x 13H cm
Item Weight	0.53 Kilograms
Color	Grey (Anthracite)
Material	Aluminum
Finish Type	Powder Coated
Light Fixture Form	Wall
Room Type	Patio, Garden
Specific Uses	Outdoor use, Wall wash effect
Indoor/Outdoor Use	Outdoor
Power Source	Electricity (wired)
Batteries Required	No
IP Rating	IP44 (Protected against splashing water)
LED Lifespan	Up to 25,000 hours

9. WARRANTY AND SUPPORT

Philips offers a comprehensive warranty for this product:

- **Standard Warranty:** 2-year warranty on the entire lamp.
- **LED System Warranty:** An extended 5-year warranty specifically covers the LED module and its driver.

For technical support, warranty claims, or further assistance, please visit the official Philips website or contact their customer service department. Retain your proof of purchase for warranty validation.

You can find more information and support at the [Philips Store on Amazon](#).