

[Manuals.plus](#) /

› [Pure Acoustics](#) /

› Pure Acoustics MCP-75 Suono Karaoke Machine User Manual

Pure Acoustics MCP-75BY

Pure Acoustics MCP-75 Suono Karaoke Machine User Manual

Model: MCP-75BY

INTRODUCTION

The Pure Acoustics MCP-75 Suono is a versatile portable PA sound system designed for karaoke and music playback. It combines the qualities of a professional speaker with the convenience of a portable music device, featuring wireless microphones, multiple audio inputs, and a rechargeable battery for extended use.



Front view of the Pure Acoustics MCP-75 Suono Karaoke Machine, showcasing its speaker grille and two wireless microphones attached to the sides.

WHAT'S IN THE BOX

- MCP-75 Suono Speaker Unit
- 2 Wireless Microphones
- Power Supply Adaptor
- Remote Control

SETUP

1. **Charging the Unit:** Before first use, fully charge the MCP-75 Suono using the provided power supply adaptor. Connect the adaptor to the DC 12V input port on the back of the unit and plug it into a standard AC outlet. The unit features a rechargeable battery for up to 10 hours of listening pleasure.
2. **Microphone Batteries:** Insert appropriate batteries into the two wireless microphones. Ensure correct polarity.
3. **Placement:** Place the speaker on a stable, flat surface. The unit is designed for easy mobility with built-in wheels and a retractable handle.



Detail of the speaker's base, highlighting the integrated wheels for easy transport and the DC power input port.



Close-up view of the retractable handle on top of the speaker, designed for comfortable carrying.

OPERATING INSTRUCTIONS

The MCP-75 Suono features a 1.5" LCD display that indicates the current mode and relevant track information.

Power On/Off

Locate the power switch on the control panel and toggle it to the 'ON' position to power on the unit. Toggle to 'OFF' to power down.

Audio Input Modes

The unit supports various audio input methods. Use the 'Mode' button on the control panel or remote control to switch between them.

- **Bluetooth:** Select Bluetooth mode. On your smartphone, tablet, or MP3 player, search for 'MCP-75 Suono' in your Bluetooth settings and pair.
- **USB Input:** Insert a USB memory stick into the USB port. The unit will automatically detect and play compatible audio files.

- **Micro SD Card Slot:** Insert an SD memory card into the Micro SD slot. The unit will automatically detect and play compatible audio files.
- **Auxiliary Input:** Connect your smartphone, tablet, or MP3 player using a 3.5mm audio cable to the AUX input port.
- **Wired Microphone Input:** Connect an additional wired microphone to the dedicated input port.

Microphone Usage

The two included wireless microphones will automatically connect to the unit when powered on. Adjust their individual volume using the dedicated microphone volume controls on the control panel.

Recording Function

The MCP-75 Suono allows you to record audio directly onto a connected USB flash drive. Refer to the control panel for recording buttons (typically labeled 'REC').

Volume and Tone Control

Adjust the master volume, bass, and treble using the respective knobs on the control panel to customize your sound experience.



Detailed view of the control panel, showing the LCD display, USB/SD card slots, various input ports, and control knobs for volume, bass, treble, and microphone levels.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the unit frequently. If storing for an extended period, charge the battery to approximately 50% and recharge every few months.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **No Power:** Ensure the power adaptor is securely connected and plugged into a working outlet. Check if the battery is charged.
- **No Sound:** Check the master volume level. Ensure the correct input mode is selected. If using external devices, verify their volume and connection.
- **Microphones Not Working:** Check microphone batteries and ensure they are inserted correctly. Verify microphone volume controls are not set to minimum.
- **Bluetooth Connectivity Issues:** Ensure the unit is in Bluetooth mode and within range of your device. Try unpairing and re-pairing the device.
- **Distorted Sound:** Reduce the volume level. Check audio source quality.

TECHNICAL SPECIFICATIONS

Feature	Specification
Power Output	45 Watts
Frequency Response	40Hz-22 KHz +/- 3dB
S/N Ratio	> 70dB +/- 3dB
Primary Power Source	DC 12V 2.6mAh
Alternate Power Source	AC 100-230V / 50-60Hz 35W
Rechargeable Battery	Up to 10 hours playback
Wireless MIC Frequency (Mic A)	202.2 MHz
Wireless MIC Frequency (Mic B)	185.15 MHz
Product Dimensions	250 x 235 x 410 mm (9.8 x 9.3 x 16.2 inches)
Item Weight	12.87 pounds
Connector Type	Aux
Audio Input	Auxiliary, Microphone, USB, Micro SD card slot
Number of Channels	2
Impedance	8 Ohm
Compatible Devices	Smartphone, Tablet

WARRANTY AND SUPPORT

For warranty information and technical support, please contact Pure Acoustics customer service. Details can typically be

found on the manufacturer's official website or the product packaging.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question