

[manuals.plus](#) /

- › [Rowenta](#) /
- › [Rowenta Turbo Silence Extreme Pedestal Fan VU5640F2 Instruction Manual](#)

Rowenta VU5640

Rowenta Turbo Silence Extreme Pedestal Fan VU5640F2 Instruction Manual

1. PRODUCT OVERVIEW

The Rowenta Turbo Silence Extreme Pedestal Fan VU5640F2 is engineered to provide powerful and discreet cooling. This fan delivers an intense and instant cooling sensation with a low sound level of only 45 dB(A) at minimum speed, making it suitable for various environments such as bedrooms, living rooms, or offices. It features customizable cooling options including a Silent Night mode for quiet operation and a Turbo Boost function for maximum airflow. The fan also offers wide-angle automatic oscillation and adjustable orientation to ensure efficient air distribution throughout any room. All this is presented in a modern and elegant design, coupled with adjustable height, allowing it to integrate seamlessly into any living space.



Figure 1: Rowenta Turbo Silence Extreme Pedestal Fan VU5640F2. This image shows the complete fan assembly, highlighting its sleek design and five-blade propeller behind a protective grille.

2. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Ensure the voltage indicated on the appliance's rating label matches your mains supply voltage.
- Do not operate the fan with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Always unplug the fan from the power outlet before cleaning, disassembling, or moving it.
- Do not insert fingers or any objects through the grille when the fan is operating.
- Keep the fan away from water or other liquids. Do not use it in damp or wet locations.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- Do not block air openings. Ensure adequate ventilation around the fan.
- Place the fan on a stable, flat surface to prevent it from tipping over.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged.

- Fan Motor Unit with Control Panel
- Front Grille
- Rear Grille
- Fan Blades (5-blade propeller)
- Pedestal Pole (adjustable height)
- Base
- Grille Fixing Nut
- Blade Fixing Nut
- Base Fixing Screw/Nut
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Rowenta Turbo Silence Extreme Pedestal Fan. Assembly is typically straightforward and takes approximately 5 minutes.

- 1. Attach the Base:** Secure the pedestal pole to the base using the provided screw/nut. Ensure it is firmly tightened for stability.
- 2. Mount the Motor Unit:** Place the fan motor unit onto the top of the pedestal pole.
- 3. Install the Rear Grille:** Position the rear grille onto the motor unit, aligning the notches. Secure it with the grille fixing nut.
- 4. Attach the Fan Blades:** Slide the fan blades onto the motor shaft. Secure them with the blade fixing nut, ensuring it is tightened in the correct direction (often counter-clockwise).
- 5. Install the Front Grille:** Align the front grille with the rear grille and snap or clip it into place. Ensure all clips are securely fastened to prevent accidental opening.
- 6. Adjust Height:** Loosen the height adjustment knob on the pedestal pole, set the desired height (between 110 cm and 140 cm), and tighten the knob securely.



Figure 2: Fan dimensions. The fan's height is adjustable from 110 cm to 140 cm, with a base width of approximately 46 cm.

5. OPERATING INSTRUCTIONS

Once assembled, plug the fan into a suitable power outlet.

Power On/Off and Speed Selection

- The fan features a control panel, typically with a rotary selector or buttons.
- Turn the fan on by selecting one of the **4 available speeds**.
- To turn off the fan, select the '0' or 'Off' position.

Special Modes

- **Silent Night Mode:** Activate this mode for ultra-quiet operation, ideal for sleeping or environments requiring minimal noise. In this mode, the fan operates at its lowest sound level (45 dB(A)).
- **Turbo Boost Function:** Select this mode for maximum airflow and intense cooling, delivering up to 72 m³/min of air.

Airflow Customization

- **Automatic Oscillation:** Engage the oscillation function to allow the fan head to sweep from side to side, distributing air across a wide 120° angle.
- **Adjustable Orientation:** Manually tilt the fan head up or down to direct the airflow precisely where needed.
- **Adjustable Height:** The fan's height can be adjusted to suit different room setups and user preferences. Refer to the assembly section for height adjustment.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your fan. Always unplug the fan before cleaning.

- **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Grille and Blades Cleaning:** To clean the fan blades and inside the grilles, carefully remove the front grille (and potentially the blades if necessary, following reverse assembly steps). Wipe the blades and grilles with a damp cloth. Ensure all parts are completely dry before reassembling.
- **Storage:** If storing the fan for an extended period, clean it thoroughly, disassemble if desired, and store it in a dry, dust-free location.
- Do not immerse the motor unit in water or any other liquid.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; power outlet issue; fan switch off.	Ensure the fan is securely plugged into a working outlet. Check the power switch/selector.
Weak airflow.	Fan speed too low; grilles or blades are dirty.	Increase the fan speed. Clean the grilles and blades as per maintenance instructions.
Unusual noise or vibration.	Loose parts; fan not on a stable surface; obstruction.	Check for loose screws or components. Ensure the fan is on a flat, stable surface. Inspect for any objects obstructing the blades.
Oscillation not working.	Oscillation function not activated; mechanism obstructed.	Activate the oscillation function. Check for any obstructions around the fan head.

8. SPECIFICATIONS

Feature	Detail
Brand	Rowenta
Model Number	VU5640
Product Dimensions (L x W x H)	50 x 60 x 140 cm (adjustable height)
Weight	8.85 Kilograms
Power	70 Watts
Voltage	220 Volts
Material	Plastic
Number of Speeds	4
Sound Level	45 Decibels (at minimum speed)
Special Features	Powerful Airflow, Turbo Boost Function, Silent Operation, Adjustable Height, 5-Blade Propeller, Wide Air Spectrum, Adjustable Orientation and Automatic Oscillation, Carry Handle, Silent Night Position
Recommended Uses	Air Circulation, Ventilation
Mounting Type	Floor Mount

9. WARRANTY AND SUPPORT

Rowenta is committed to providing durable and reliable products.

- **Repairability:** Rowenta commits to making spare parts available for **15 years** after purchase at a fair price. This commitment is supported by a global network of 6200 repair centers, aiming to contribute to environmental protection and waste reduction.
- **Spare Parts Availability:** Spare parts are available for a period of **2 years**.
- For further assistance, product registration, or to locate a service center, please visit the official Rowenta website or contact customer support.