

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [De'Longhi](#) /

› [De'Longhi Nespresso EN520 Lattissima Plus Water Tank Instruction Manual](#)

## De'Longhi EN520

# De'Longhi Nespresso EN520 Lattissima Plus Water Tank Instruction Manual

Model: EN520 Lattissima Plus | Part No. 7313222461

## INTRODUCTION

This instruction manual provides essential information for the proper installation, use, and maintenance of your De'Longhi Nespresso EN520 Lattissima Plus Water Tank. Please read this manual thoroughly before installation and retain it for future reference.

## PRODUCT COMPATIBILITY

This water tank (De'Longhi Part No. 7313222461) is specifically designed for the **De'Longhi Nespresso EN520 Lattissima Plus** espresso and cappuccino machine.

**Important:** This water tank *will not fit* the EN750 Lattissima Pro (Part No. 7313234671) or any other Nespresso machine model not explicitly listed as compatible. Verify your machine's model number before installation.

## PARTS INCLUDED

Your purchase includes the following components:

- Water Tank (Part No. 7313222461)
- O-Ring (Part No. 5332111600)
- Spring (Part No. 6113210921)
- Insert (Part No. 5313226741)



Image: The De'Longhi Nespresso EN520 Lattissima Plus Water Tank, showing its transparent construction and the connection point for the machine. This image represents the complete assembly of the water tank and its internal components.

## SETUP AND INSTALLATION

1. **Unpack:** Carefully remove the new water tank and its components from the packaging. Inspect for any damage.
2. **Remove Old Tank (if applicable):** If replacing an existing tank, ensure your Nespresso machine is turned off and unplugged. Gently lift and remove the old water tank from its housing on the machine.
3. **Prepare New Tank:** Ensure the O-ring, spring, and insert are correctly seated within the new water tank's connection port. These parts are pre-installed in a new tank.
4. **Install New Tank:** Align the new water tank with the designated slot on your De'Longhi Nespresso EN520 Lattissima Plus machine. Gently push the tank down until it is securely seated. You should feel a slight click or resistance, indicating it is properly connected.
5. **Fill with Water:** Open the lid of the water tank and fill it with fresh, potable water up to the MAX fill line. Close the lid securely.
6. **Power On:** Plug in and turn on your Nespresso machine.



Image: A top-down view of the transparent water tank, illustrating its shape and the opening for filling. This view helps in understanding how to orient the tank for installation and filling.

## OPERATING THE WATER TANK

The water tank is an integral part of your Nespresso machine's operation. Proper use ensures optimal performance and longevity.

- **Filling:** Always fill the tank with fresh, cold, potable water. Do not use sparkling water, milk, or any other liquids, as this can damage the machine.
- **Placement:** Ensure the water tank is always securely placed in its designated position on the machine before operating. An improperly seated tank can lead to leaks or prevent the machine from functioning.
- **Water Level:** Monitor the water level regularly. Refill the tank before it becomes completely empty to avoid air entering the system, which may require priming.

## MAINTENANCE

Regular cleaning of the water tank is crucial for hygiene and to prevent mineral buildup.

1. **Daily Cleaning:** Empty any remaining water from the tank daily. Rinse the tank thoroughly with fresh water.
2. **Weekly Cleaning:** Wash the water tank with warm soapy water. Use a soft brush or sponge to clean the interior. Rinse thoroughly to remove all soap residue.
3. **Descaling:** While the water tank itself does not require descaling, it is important to follow your Nespresso machine's descaling instructions regularly to prevent mineral buildup in the machine's internal components.
4. **Drying:** Allow the water tank to air dry completely before reattaching it to the machine, or wipe it dry with a clean cloth.



Image: A side view of the transparent water tank, highlighting its overall dimensions and the integrated handle or grip points for easy removal and cleaning.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Water leak from tank base	Tank not seated correctly; damaged O-ring or insert.	Ensure tank is fully pushed down. Inspect O-ring and insert for damage; replace if necessary.
Machine not drawing water	Tank empty; tank not seated correctly; air in system.	Refill tank. Re-seat tank firmly. Refer to your machine's manual for priming instructions.
Tank does not fit	Incorrect model tank purchased.	Verify your machine is a De'Longhi Nespresso EN520 Lattissima Plus. This tank is not compatible with EN750 Lattissima Pro.

## SPECIFICATIONS

- **Product Name:** Water Tank for De'Longhi Nespresso EN520 Lattissima Plus

- **De'Longhi Part No.:** 7313222461
- **Item Model Number:** 93105
- **Product Dimensions:** Approximately 6.42 x 2.01 x 7.8 inches (16.3 x 5.1 x 19.8 cm)
- **Item Weight:** Approximately 10.2 ounces (289 grams)
- **Material:** Transparent Plastic
- **Compatibility:** De'Longhi Nespresso EN520 Lattissima Plus series only

## WARRANTY AND SUPPORT

---

For warranty information or technical support regarding your De'Longhi Nespresso EN520 Lattissima Plus Water Tank, please refer to the documentation provided with your original Nespresso machine or contact De'Longhi customer service directly. Keep your proof of purchase for any warranty claims.

You can often find support contact details on the official De'Longhi website or through your regional Nespresso service center.

