

manuals.plus /

› [Lasko](#) /

› [Lasko 20 Inch Box Fan Model 3733 Instruction Manual](#)

Lasko 3733

Lasko 20 Inch Box Fan Model 3733 Instruction Manual

For Models: 3733

INTRODUCTION

Thank you for purchasing the Lasko 20 Inch Box Fan, Model 3733. This manual provides important information for the assembly, operation, maintenance, and troubleshooting of your fan. Please read all instructions carefully before use and retain this manual for future reference.

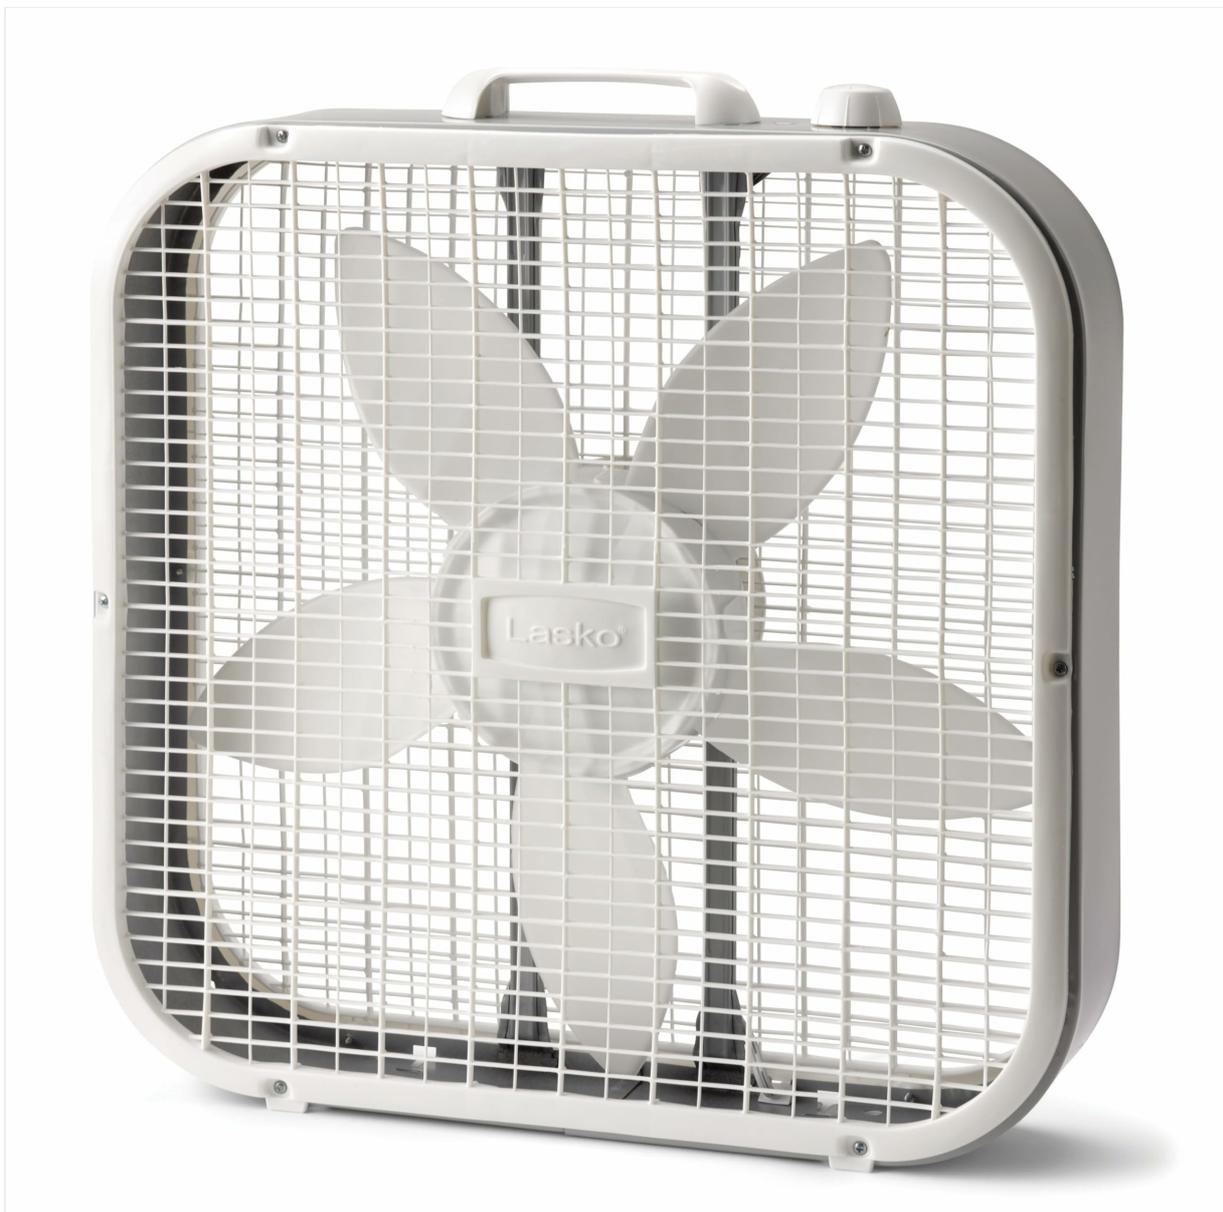


Figure 1: Lasko 20 Inch Box Fan, Model 3733

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electrical shock, or injury to persons, observe the following:

1. Read all instructions before using this fan.
2. This fan is intended for indoor, household use only. Do not use outdoors or for commercial purposes.
3. Always unplug the fan from the power outlet before cleaning, servicing, or moving.
4. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
5. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
6. Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fan.
7. Do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
8. Always place the fan on a stable, flat surface to prevent tipping.

9. Do not use this fan in wet or moist locations, such as bathrooms or laundry areas.

SETUP

Unpacking

Carefully remove the fan from its packaging. Inspect the fan for any signs of damage. If any damage is observed, do not operate the fan and contact customer support.

Placement

Place the fan on a firm, level surface. Ensure there is adequate space around the fan for proper airflow. Avoid placing the fan near curtains, loose papers, or other objects that could be drawn into the fan blades. The fan is equipped with plastic feet for stability; ensure these are properly positioned to prevent tipping.

OPERATING INSTRUCTIONS

Power Connection

Plug the fan directly into a 120V AC wall outlet. Do not use extension cords or power strips with this fan.

Speed Settings

The Lasko 20 Inch Box Fan features a rotary control dial located on the top of the unit. This dial allows you to select from three different speed settings:

- **Setting 1 (Low):** For gentle air circulation and minimal noise.
- **Setting 2 (Medium):** For moderate airflow.
- **Setting 3 (High):** For maximum airflow and cooling.

To turn the fan ON, rotate the dial from the '0' (OFF) position to your desired speed setting (1, 2, or 3). To turn the fan OFF, rotate the dial back to the '0' position.

MAINTENANCE

Always unplug the fan before cleaning or performing any maintenance.

Cleaning

- Use a soft cloth to gently wipe the exterior surfaces of the fan.
- To clean the fan blades, use a vacuum cleaner with a brush attachment to remove dust from the grilles. For deeper cleaning, the front grille may be removed by unscrewing the retaining screws. Exercise caution when handling the blades.
- Do not immerse the fan in water or allow water to drip into the motor housing.
- Do not use gasoline, benzene, thinner, harsh cleaners, or other solvents, as these will damage the fan.

Storage

When storing the fan, keep it in its original carton in a cool, dry place. Protect the power cord from damage by wrapping it loosely around the fan or securing it with a twist tie.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not operate.	No power to the fan.	Ensure the fan is plugged into a working 120V AC outlet. Check if the circuit breaker has tripped.
Reduced airflow.	Dust accumulation on blades or grilles.	Unplug the fan and clean the blades and grilles as described in the Maintenance section.
Unusual noise or rattling.	Fan not on a stable surface; foreign object in fan.	Place the fan on a flat, stable surface. Unplug the fan and inspect for any foreign objects.

SPECIFICATIONS

Feature	Detail
Brand	Lasko
Model Name	3733
Product Dimensions	21.25"D x 22.88"W x 4.5"H
Item Weight	7 Pounds
Color	White
Power Source	Corded Electric
Wattage	110 watts
Voltage	120 Volts
Number of Power Levels	3
Switch Type	Push Button or Toggle
Indoor/Outdoor Usage	Indoor, Outdoor
Special Feature	Manual
Assembly Required	No

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official Lasko website. Keep your purchase receipt as proof of purchase for any warranty claims.

Lasko Customer Service: For assistance with your product, please contact Lasko customer service. Contact details can typically be found on the product packaging or the official Lasko website (www.lasko.com).

