

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [RCA](#) /

> [RCA Cambio 10.1 W101 V2 Windows 10 Tablet PC User Manual](#)

RCA W101 V2

RCA Cambio 10.1 W101 V2 Windows 10 Tablet PC User Manual

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your RCA Cambio 10.1 W101 V2 Windows 10 2-in-1 Tablet PC. Please read these instructions thoroughly before using your device to ensure optimal performance and longevity.

The RCA Cambio 10.1 W101 V2 is a versatile 10-inch tablet powered by an Intel quad-core processor and preloaded with Windows 10. It features a detachable keyboard, allowing for flexible use as both a tablet and a laptop. Key features include Bluetooth connectivity, front and rear 2MP cameras, and 32GB of internal storage.

SETUP

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Ensure the following items are present:

- RCA Cambio 10.1 W101 V2 Tablet
- Detachable Keyboard
- Power Adapter

Inspect the device for any visible damage. If any components are missing or damaged, contact customer support.

2. Charging the Device

Before first use, fully charge the tablet. Connect the power adapter to the charging port on the tablet and then to a power outlet. The charging indicator will illuminate. A full charge may take several hours.

3. Attaching the Detachable Keyboard

Align the tablet with the magnetic connector on the detachable keyboard. Gently push the tablet down until it securely clicks into place. The keyboard does not require separate power or pairing.



Image: Rear view of the RCA Cambio 10.1 W101 V2 tablet with the detachable keyboard attached, illustrating the connection point and available ports.

4. Initial Power On and Windows 10 Setup

Press and hold the power button located on the side of the tablet until the screen illuminates. Follow the on-screen prompts to complete the initial Windows 10 setup, including language selection, network connection, and user account creation.



Image: The RCA Cambio 10.1 W101 V2 tablet in laptop mode, showcasing the Windows 10 operating system interface.

OPERATING INSTRUCTIONS

1. Basic Navigation

Touchscreen:

The tablet features a multi-touch display. Use gestures such as tap, swipe, pinch-to-zoom, and press-and-hold to interact with the interface.

Keyboard and Touchpad:

When the detachable keyboard is connected, you can use the physical keys for typing and the integrated touchpad for cursor control. The touchpad supports multi-touch gestures similar to a laptop touchpad.



Image: The RCA Cambio 10.1 W101 V2 tablet in portrait orientation, showing the Windows 10 Start screen with application tiles.

2. Connecting to Wi-Fi

1. Open the **Start Menu** and click on **Settings**.
2. Select **Network & Internet**.
3. Choose **Wi-Fi** from the left-hand menu.
4. Toggle Wi-Fi **On** if it is off.
5. Select your desired network from the list and click **Connect**.
6. Enter the network password if prompted.

3. Bluetooth Pairing

1. Open the **Start Menu** and click on **Settings**.
2. Select **Devices**.
3. Choose **Bluetooth & other devices** from the left-hand menu.
4. Toggle Bluetooth **On**.
5. Click **Add Bluetooth or other device** and follow the instructions to pair with your desired device.

4. Using the Cameras

The tablet is equipped with front and rear 2MP cameras. To access the camera, open the **Camera** application from the Start Menu or search bar. You can switch between front and rear cameras within the application interface.

5. Productivity with Microsoft Office 365

The device comes preloaded with Windows 10, which supports Microsoft Office 365 applications. You can create and edit documents, spreadsheets, and presentations. An active subscription to Microsoft Office 365 may be required for full functionality.

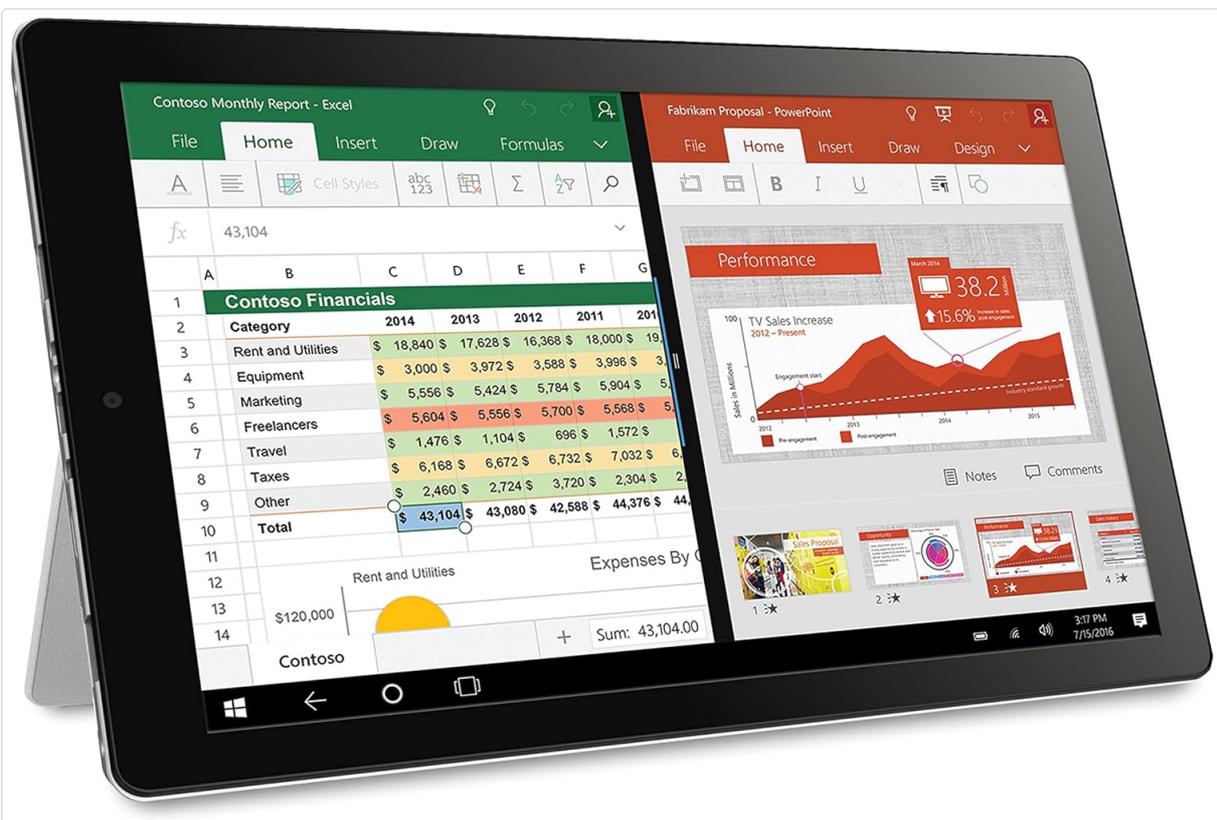


Image: The RCA Cambio 10.1 W101 V2 tablet running Microsoft Office applications, highlighting its use for productivity tasks.

6. Storage Management

The tablet includes 32GB of internal storage. To manage your storage, go to **Settings > System > Storage**. You can view storage usage, free up space, and change where new content is saved. Consider using cloud storage or an external microSD card (not included) for additional space.

MAINTENANCE

1. Cleaning the Device

Use a soft, lint-free cloth to clean the screen and exterior surfaces. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.

2. Software Updates

Regularly check for and install Windows updates to ensure your system has the latest security patches and features. Go to **Settings > Update & Security > Windows Update** to check for updates.

3. Battery Care

To prolong battery life:

- Avoid fully discharging the battery frequently.
- Do not expose the device to extreme temperatures.
- Unplug the charger once the battery is fully charged, especially during extended periods of non-use.

4. Data Backup

Regularly back up important data to an external drive or cloud storage to prevent data loss in case of device malfunction.

TROUBLESHOOTING

This section addresses common issues you might encounter with your RCA Cambio 10.1 W101 V2.

Device Not Powering On:

- Ensure the device is fully charged. Connect the power adapter and wait a few minutes before attempting to power on again.
- Press and hold the power button for at least 10-15 seconds to perform a hard reset.

Slow Performance or Freezing:

- Close unnecessary applications running in the background.
- Check for and install any pending Windows updates.
- Ensure sufficient free storage space. Delete unnecessary files or move them to external storage.
- Restart the device.

Wi-Fi Connectivity Issues:

- Ensure Wi-Fi is enabled in **Settings > Network & Internet > Wi-Fi**
- Restart your Wi-Fi router and the tablet.
- Forget the network and reconnect by entering the password again.
- Ensure you are within range of the Wi-Fi signal.

Bluetooth Pairing Problems:

- Ensure Bluetooth is enabled on both the tablet and the device you are trying to pair.
- Make sure both devices are in pairing mode and within close proximity.

- Remove previously paired devices from the tablet's Bluetooth settings if you are experiencing conflicts.

Keyboard Not Responding:

- Ensure the keyboard is securely attached to the tablet's magnetic connector.
- Detach and reattach the keyboard.
- Restart the tablet.

Battery Drains Quickly:

- Adjust screen brightness to a lower setting.
- Close background applications and disable unnecessary features like Bluetooth or Wi-Fi when not in use.
- Check battery usage in **Settings > System > Battery** to identify power-consuming applications.

Factory Reset (Last Resort):

If issues persist, you may consider performing a factory reset. This will erase all data and reinstall Windows 10. **Backup all important data before proceeding.** Go to **Settings > Update & Security > Recovery > Reset this PC** and follow the on-screen instructions.

SPECIFICATIONS

Feature	Specification
Model Number	W101 V2
Operating System	Windows 10
Screen Size	10.1 Inches
Screen Resolution	1280 x 800
Processor	Intel Quad-Core (1.83 GHz)
RAM	2 GB DDR3 SDRAM
Internal Storage	32 GB Flash Memory
Wireless Connectivity	802.11b Wi-Fi, Bluetooth
Cameras	Front and Rear (2 MP)
Battery	1 Lithium Ion battery (included)
Dimensions (LxWxH)	12.2 x 8.5 x 3.15 inches
Item Weight	2.75 pounds

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official RCA support website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact RCA customer service. Contact details are typically available on the manufacturer's website.

