

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Norpro](#) /

› [Norpro Deluxe Cordless Mini Mixer Blender Whipper Whisk \(Model 2273\) Instruction Manual](#)

Norpro 2273

Norpro Deluxe Cordless Mini Mixer Blender Whipper Whisk (Model 2273) Instruction Manual

Your guide to operating and maintaining your Norpro cordless mini mixer.

1. INTRODUCTION

The Norpro Deluxe Cordless Mini Mixer is a versatile, portable, and efficient kitchen tool designed for various mixing tasks. Its compact size and battery operation make it ideal for use at home, work, while traveling, camping, in an RV, or in a dorm room. This manual provides essential information for safe and effective use of your mini mixer.



Image: Norpro Deluxe Cordless Mini Mixer with a whisk attachment, ready for use.

2. PRODUCT FEATURES

- **Cordless and Portable:** Designed for convenience and ease of use anywhere.
- **Multiple Attachments:** Includes 4 interchangeable attachments for various mixing needs:
 - Beating/Whipping
 - Mixing
 - Blending/Stirring
 - Frothing

- **Variable Speed Settings:** Features Low, Medium, and High speed options for precise control.
- **Battery Operated:** Powered by 2 AA batteries (not included).
- **Compact Design:** Measures approximately 4" x 1.5" x 1" (10cm x 4cm x 2.5cm) for easy storage.

3. PACKAGE CONTENTS

Your Norpro Deluxe Cordless Mini Mixer package should include:

- 1 x Norpro Deluxe Cordless Mini Mixer unit
- 4 x Interchangeable mixing attachments (for beating/whipping, mixing, blending/stirring, and frothing)
- Instruction Manual (this document)

Note: 2 AA batteries are required for operation and are not included in the package.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment cover on the mixer unit.
2. Carefully remove the cover.
3. Insert 2 AA size batteries (not included) into the compartment, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

4.2 Attaching Mixing Attachments

1. Select the desired mixing attachment for your task.
2. Align the attachment with the opening at the bottom of the mixer unit.
3. Gently push and twist the attachment until it clicks securely into place.
4. To remove an attachment, pull it firmly while twisting slightly.

5. OPERATING INSTRUCTIONS

5.1 General Mixing

1. Ensure batteries are installed and the desired attachment is securely in place.
2. Submerge the mixing attachment into the liquid or ingredients you wish to mix.
3. Press the power button to turn on the mixer. The mixer typically starts at a low speed.
4. Press the speed selection buttons (Low, Medium, High) to adjust the mixing intensity as needed.
5. Mix until the desired consistency is achieved.
6. Turn off the mixer by pressing the power button or cycling through the speeds until it stops.
7. Remove the mixer from the liquid.

5.2 Specific Applications

- **Beating Eggs:** Use the whisk attachment on a medium to high setting for fluffy eggs.
- **Whipping Cream:** Use the whisk attachment on a high setting for best results.
- **Blending Drinks:** Use the frother or blending attachment on a low to medium setting to smoothly combine ingredients like protein powder or chocolate syrup into milk or coffee.

- **Frothing Milk:** Use the frothing attachment. Submerge the frother just below the surface of the milk and turn it on. Move it up and down gently to create foam.

6. MAINTENANCE AND CLEANING

6.1 Cleaning the Attachments

- After each use, remove the mixing attachment from the mixer unit.
- Wash the attachments in warm, soapy water.
- Rinse thoroughly and allow to air dry completely before storing.
- **Note:** The attachments are not dishwasher safe.

6.2 Cleaning the Mixer Unit

- Ensure the mixer unit is turned off and no attachment is connected.
- Wipe the mixer unit with a damp cloth.
- Do not submerge the main mixer unit in water or any other liquid.
- If water gets inside the battery compartment, remove batteries immediately and allow the unit to dry completely to prevent rust and damage.

7. TROUBLESHOOTING

- **Mixer not turning on:** Check if the batteries are inserted correctly and are not depleted. Replace batteries if necessary.
- **Attachments not spinning effectively:** Ensure the attachment is securely fastened to the mixer unit. Check battery level.
- **Attachments are too big:** Some users have reported that attachments can sometimes be too large for certain containers. Ensure you are using the appropriate attachment for your mixing vessel.

8. SPECIFICATIONS

Attribute	Detail
Brand	Norpro
Model Name	Deluxe Cordless Mini Mixer Blender Whipper Whisk Battery Operated Norpro 2273
Item Model Number	AX-AY-ABHI-100093
UPC	786377187857
Product Dimensions	1.5"D x 1.5"W x 1"H (approximately 4cm x 4cm x 2.5cm)
Item Weight	2.56 ounces (0.16 Pounds)
Material	Plastic with Stainless Steel/Plastic Beaters
Power Source	2 AA Batteries (not included)
Controls Type	Push Button
Special Feature	Cordless, Portable
Is Dishwasher Safe	No (for attachments and main unit)
Voltage	1.5 Volts

Wattage	1 watts
----------------	---------

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the packaging or contact Norpro customer service directly. Keep your purchase receipt for any warranty claims.

© 2026 Norpro. All rights reserved.