

HONEYSEW XB0563001 X77683001

HONEYSEW Overlock Knife Instruction Manual

Models: XB0563001 (Upper Knife) & X77683001 (Lower Knife)

1. PRODUCT OVERVIEW

The HONEYSEW Overlock Knife set includes both the upper knife (XB0563001) and lower knife (X77683001), designed for precise fabric cutting in compatible serger machines. Replacing both knives simultaneously ensures optimal cutting performance and a professional finish.

Compatibility:

- **Brother Serger Models:** PL1500, PL2000, 925D, 935D, 929D, 1034D, 1134DW
- **Husqvarna Viking Serger Machine Models:** 660CD, 680CD



Figure 1: HONEYSEW Upper and Lower Overlock Knives. This image displays the two metal blades, the upper knife with a hook-like shape and the lower knife as a straight blade with an angled cutting edge.

2. SETUP AND INSTALLATION

Replacing the overlock knives requires careful attention to detail. Always refer to your serger machine's specific instruction manual for detailed steps and safety precautions before proceeding. The general procedure involves:

1. **Safety First:** Disconnect the serger machine from the power supply before beginning any maintenance or installation.
2. **Access the Knife Area:** Open the front cover of your serger to expose the knife mechanism.
3. **Remove Old Knives:** Using appropriate tools (e.g., screwdriver, tweezers, often supplied with your serger), carefully loosen the screws holding the old upper and lower knives in place. Remove the dull or damaged knives. Note their orientation for correct installation of the new knives.
4. **Install New Knives:** Position the new HONEYSEW upper knife (XB0563001) and lower knife (X77683001) into their respective slots. Ensure they are correctly aligned according to your serger's manual.
5. **Secure Knives:** Gently tighten the screws to hold the new knives firmly. Do not overtighten.
6. **Test Alignment:** Manually turn the handwheel to ensure the knives move freely and engage correctly without obstruction. The upper knife should pass closely by the lower knife for a clean cut.
7. **Close Cover:** Once confirmed, close the serger's front cover.

For visual guidance, many online video tutorials are available for replacing serger knives on specific Brother models. Searching for "[Your Serger Model] knife replacement" can provide helpful demonstrations.



Figure 2: Close-up view of HONEYSEW Overlock Knives. This image provides a detailed look at the cutting edges and mounting holes of both the upper and lower knives, essential for correct installation.

3. OPERATING INSTRUCTIONS

Once the new HONEYSEW overlock knives are correctly installed, your serger machine is ready for operation. Sharp knives are crucial for achieving clean, precise cuts and preventing fabric damage or skipped stitches.

- **Fabric Placement:** Ensure fabric is fed smoothly into the serger, allowing the knives to trim the edge evenly before

the stitches are formed.

- **Cutting Performance:** With new, sharp knives, you should observe a clean, crisp cut edge on your fabric. If the fabric edge appears frayed or uneven, re-check knife installation and alignment.
- **Avoid Obstructions:** Always ensure there are no pins, clips, or other hard objects in the path of the knives, as these can dull or damage the blades.

4. MAINTENANCE

Proper maintenance extends the life of your serger and ensures consistent cutting quality. The primary maintenance for overlock knives involves regular inspection and timely replacement.

- **Regular Inspection:** Periodically inspect the knife edges for signs of dullness, nicks, or damage. A dull knife can lead to poor cutting, frayed edges, and strain on your machine.
- **Cleaning:** After each use, use a small brush to remove lint and fabric debris from around the knife area. This prevents buildup that can interfere with knife movement and cutting performance.
- **Replacement Schedule:** The lifespan of serger knives varies depending on usage and fabric types. If you notice a decline in cutting quality, such as ragged edges or difficulty cutting certain fabrics, it is time to replace both the upper and lower knives.
- **Storage:** If the serger is to be stored for an extended period, ensure the knives are clean and dry to prevent rust.

5. TROUBLESHOOTING

Most cutting-related issues on a serger can be resolved by addressing the condition of the knives.

Problem	Possible Cause	Solution
Fabric edges are frayed or uneven.	Dull or damaged knives.	Replace both upper and lower knives.
Serger struggles to cut fabric.	Knives are dull or misaligned.	Replace knives; ensure correct installation and alignment.
Knives make a grinding noise or do not move freely.	Incorrect installation, loose screws, or debris.	Disconnect power, inspect for debris, re-install knives ensuring proper alignment and secure screws.
Knife breaks during operation.	Impact with a hard object (e.g., pin, clip).	Immediately disconnect power. Carefully remove broken pieces and replace both knives. Always ensure no hard objects are in the cutting path.

6. SPECIFICATIONS

- **Brand:** HONEYSEW
- **Item Model Numbers:** XB0563001 (Upper Knife), X77683001 (Lower Knife)
- **Material:** Stainless Steel
- **Item Weight:** Approximately 0.317 ounces (0.01 Kilograms)
- **Package Dimensions:** 3.8 x 2.6 x 0.3 inches
- **Power Source:** Manual (as part of a manual serger operation)
- **UPC:** 601420038743

7. WARRANTY INFORMATION

Specific warranty details for this product are not provided in the available information. Please refer to the retailer or manufacturer's official website for any applicable warranty policies.

8. SUPPORT

For further assistance, technical support, or inquiries regarding the HONEYSEW Overlock Knives, please contact the seller or HONEYSEW directly. You may find contact information on the HONEYSEW brand store page or through your purchase platform.

HONEYSEW Store: [Visit the HONEYSEW Store on Amazon](#)

© 2026 HONEYSEW. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B018K3C0WY>

More documents and user manuals: <https://manuals.plus/>