

NERF N-Strike Mega Mastodon Blaster Instruction Manual

Model: B5575F07

INTRODUCTION

Welcome to the world of NERF N-Strike Mega action! This manual provides essential information for the safe and effective use of your new NERF N-Strike Mega Mastodon Blaster. The Mastodon is the first-ever motorized NERF Mega blaster, designed for rapid-fire dart launching. Please read all instructions carefully before use.



Figure 1: The NERF N-Strike Mega Mastodon Blaster with included darts.

IMPORTANT SAFETY INFORMATION

- **WARNING:** Do not aim at eyes or face. Use only official NERF darts. Other darts may not meet safety standards. Do not modify darts or blaster.
- **CAUTION:** Always use under adult supervision.
- **BATTERY SAFETY:** Requires 6 D batteries (not included). Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the product is not used for an extended period.

WHAT'S IN THE BOX

Your NERF N-Strike Mega Mastodon Blaster package includes:

- 1x NERF N-Strike Mega Mastodon Blaster
- 24x Mega Whistler Darts
- 1x Shoulder Strap



Figure 2: Contents of the NERF N-Strike Mega Mastodon Blaster package.

SETUP

1. Battery Installation

1. Locate the battery compartment on the side of the blaster.
2. Using a Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 6 D batteries (not included) according to the polarity indicators (+/-) inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

2. Attaching the Shoulder Strap

1. Locate the attachment points for the shoulder strap on the blaster. There is one near the front barrel and one near the rear handle.
2. Attach each end of the shoulder strap to the designated points. Ensure the clips are securely fastened.



Figure 3: Proper way to hold the blaster with the shoulder strap for support.

LOADING DARTS

The NERF N-Strike Mega Mastodon Blaster features a 24-dart rotating drum. To load the darts:

1. Insert one Mega Whistler Dart into each of the 24 openings in the rotating drum.
2. Ensure each dart is fully seated in its slot to prevent jamming.



Figure 4: Loading Mega darts into the rotating drum.

OPERATING INSTRUCTIONS

To operate your motorized NERF N-Strike Mega Mastodon Blaster:

1. Hold the blaster firmly using the main handle and the front grip. The shoulder strap can assist in supporting the blaster's weight.
2. Press and hold the acceleration button (usually located below the main trigger) to power up the motor. You will hear the motor whirring.
3. While holding the acceleration button, pull the trigger to launch Mega Whistler darts. The drum will automatically rotate, firing darts in rapid succession.



Figure 5: Firing the NERF N-Strike Mega Mastodon Blaster.

Official Product Video

Video 1: Overview of the Nerf N-Strike Mega Mastodon Blaster, demonstrating its features and firing capabilities.

MAINTENANCE

Jam Clearing

In the event of a dart jam:

1. Release the acceleration button and trigger.
2. Locate the jam clearing door on the side of the blaster.
3. Open the door and carefully remove any jammed darts.
4. Close the jam clearing door securely before resuming play.

TROUBLESHOOTING

Blaster Not Firing

- **Check Batteries:** Ensure 6 D batteries are correctly installed and not depleted. Replace if necessary.
- **Acceleration Button:** Confirm the acceleration button is held down completely before pulling the trigger.
- **Dart Jam:** Check the jam clearing door for any lodged darts.
- **Darts Loaded Correctly:** Ensure darts are fully seated in the drum.

SPECIFICATIONS

Feature	Detail
Product Dimensions	4.33 x 15.83 x 33.86 inches
Item Weight	6.8 pounds
Model Number	B5575F07
Manufacturer Recommended Age	8 years and up
Batteries Required	6 D batteries (not included)
Dart Capacity	24 Mega Whistler Darts
Manufacturer	Hasbro

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Hasbro/Nerf website. Keep your purchase receipt for warranty claims.