

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [NAVIFORCE](#) /
- > [Naviforce NF9024 Analog-Digital Men's Watch Instruction Manual](#)

NAVIFORCE NF9024

Naviforce NF9024 Analog-Digital Men's Watch Instruction Manual

Model: NF9024 | Brand: NAVIFORCE

INTRODUCTION

This manual provides comprehensive instructions for the proper use and maintenance of your NAVIFORCE NF9024 Analog-Digital Men's Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. Keep this manual for future reference.

PRODUCT OVERVIEW

The NAVIFORCE NF9024 is a robust analog-digital watch featuring a black metal dial and band. It combines traditional analog timekeeping with modern digital functionalities, including date, alarm, and stopwatch. The watch is designed for durability and is water-resistant up to 30 meters.



Figure 1: Front view of the NAVIFORCE NF9024 watch, showcasing its black metal design, analog hands, and digital display.



Figure 2: Rear view of the NAVIFORCE NF9024 watch, showing the stainless steel case back and metal band clasp.

Components:

- **Crown:** Used for setting analog time.
- **Push Buttons (A, B, C, D):** Used for operating digital functions (mode, adjust, light, reset). Specific functions may vary; refer to detailed setup instructions.
- **Analog Dial:** Displays hours, minutes, and seconds with traditional hands.
- **Digital Display:** Shows digital time, date, day, and other functions.
- **Metal Band:** Durable metal strap with a secure clasp.
- **Case:** Metal casing protecting the internal movement.

SETUP INSTRUCTIONS

Before using your watch, it is essential to set the correct time and date for both analog and digital displays.

1. Setting Analog Time:

1. Pull the crown (located on the right side of the watch) out to the first position.
2. Rotate the crown clockwise or counter-clockwise to adjust the analog hour and minute hands to the desired time.
3. Once the analog time is set, push the crown back into its normal position.

2. Setting Digital Time and Date:

The digital display typically has multiple modes. Use the "Mode" button (often bottom-left) to cycle through them.

1. In normal time display mode, press the "Mode" button until the time setting mode is activated (usually indicated by flashing digits).
2. Use the "Adjust" button (often top-left) to select the digit or setting you wish to change (e.g., seconds,

minutes, hours, 12/24-hour format, month, date, day).

3. Use the "Reset" button (often bottom-right) to increase the value of the flashing digit. Hold it down for faster adjustment.
4. Repeat steps 2 and 3 until all desired settings (time, date, day) are correctly configured.
5. Press the "Mode" button again to exit the setting mode and return to the normal time display.



Figure 3: Digital display of the watch, illustrating the digital time and day indicators. This display is adjustable via the side buttons.

3. Alarm Setting:

1. Press the "Mode" button repeatedly until you reach the alarm setting mode.
2. Use the "Adjust" button to select the hour or minute digits.
3. Use the "Reset" button to set the desired alarm time.
4. Press "Mode" to confirm and exit.
5. To activate/deactivate the alarm, typically press the "Reset" button while in alarm mode.

4. Stopwatch Function:

1. Press the "Mode" button repeatedly until you reach the stopwatch mode (usually indicated by "00:00:00").
2. Press the "Reset" button to start the stopwatch.
3. Press the "Reset" button again to pause/resume.
4. Press the "Adjust" button to reset the stopwatch to zero.

OPERATING THE WATCH

1. Basic Time Reading:

The watch displays time both analogically (with hands) and digitally. The digital display also shows the current day of the week and date.

2. Using the Backlight:

In low-light conditions, press the "Light" button (often top-right) to illuminate the digital display for a few seconds.

3. Water Resistance:

This watch is water-resistant up to 30 meters (3 ATM). This means it can withstand splashes of water or brief immersion. It is **not** suitable for showering, swimming, diving, or any prolonged water activities. Do not operate the buttons or crown when the watch is wet.



Figure 4: Illustration of the watch's 30-meter water resistance, suitable for splashes and rain, but not for submersion or showering.

MAINTENANCE

1. Cleaning:

Wipe the watch case and band regularly with a soft, dry cloth to remove dust and dirt. For stubborn grime, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or abrasive materials.

2. Battery Replacement:

The watch uses a single AAA battery (included). When the digital display dims or the watch stops functioning, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

3. Storage:

When not in use, store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. Keep it in its original packaging or a watch box to protect it from scratches.

TROUBLESHOOTING

- **Watch not running / Digital display blank:**

This usually indicates a depleted battery. Replace the battery as described in the Maintenance section.

- **Analog and Digital times do not match:**

The analog and digital movements are independent. Follow the "Setting Analog Time" and "Setting Digital Time and Date" instructions to synchronize them.

- **Digital display is dim or flickering:**

This is a sign of a low battery. Replace the battery promptly.

- **Condensation inside the watch:**

If condensation appears, it suggests a breach in the watch's water resistance. Avoid further contact with water and seek professional service immediately.

- **Buttons are unresponsive:**

Ensure the watch is dry. If the issue persists, the internal mechanism may require inspection by a qualified technician.

SPECIFICATIONS

Feature	Detail
Model Number	NF9024
Movement Type	Quartz (Analog-Digital)
Display Type	Analog and Digital
Case Material	Metal
Band Material	Metal
Dial Color	Black
Case Diameter	46 mm
Case Thickness	16 mm (1.6 cm)
Band Length	24 cm
Band Width	2.4 cm
Water Resistance Depth	30 Meters (3 ATM)
Battery Type	1 AAA battery (included)
Item Weight	200 g (0.44 Pounds)



Figure 5: Product image displaying key specifications such as case diameter, thickness, band length, and band width.

DIAL SIZE guide



Figure 6: Visual guide illustrating the 46mm dial diameter in comparison to common objects like a coin and a credit card.

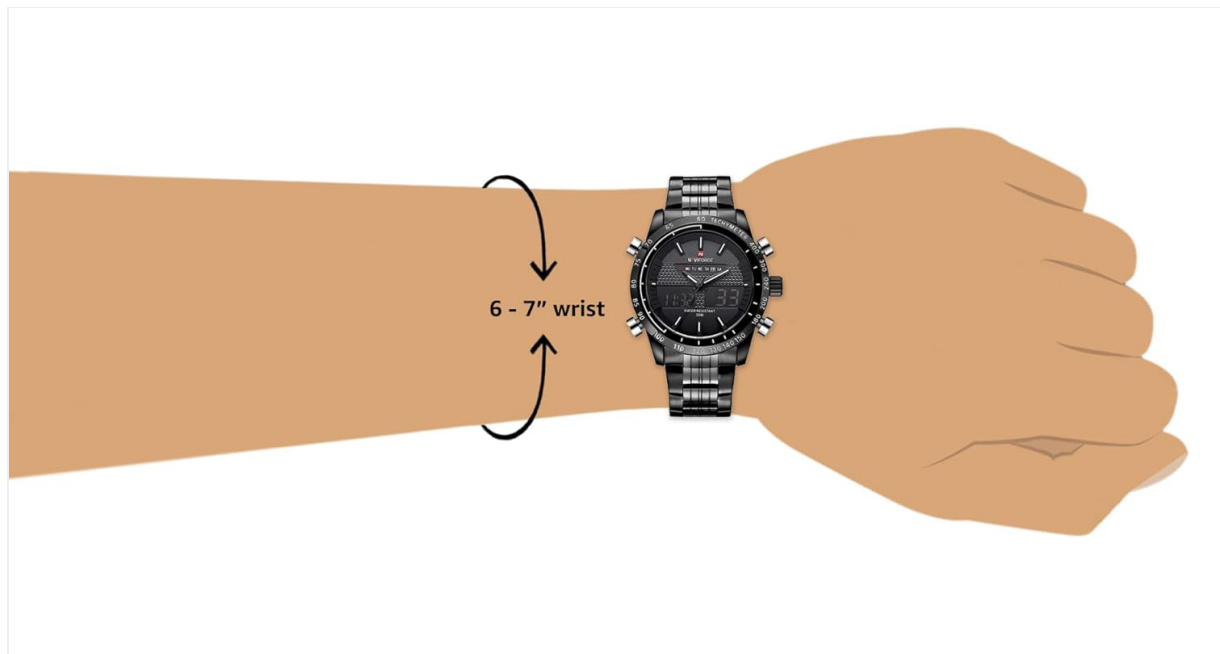


Figure 7: Guide showing the recommended wrist size range of 6-7 inches for comfortable wear of the watch.

WARRANTY AND SUPPORT

The NAVIFORCE NF9024 watch comes with a **1-year Seller Warranty** covering manufacturing defects. This warranty does not cover damage resulting from improper use, accidents, unauthorized repairs, or normal wear and tear.

For warranty claims or technical support, please contact your point of purchase or the authorized NAVIFORCE service center. Ensure you retain your purchase receipt as proof of purchase.

For additional information or inquiries, please visit the official NAVIFORCE website or contact customer service.