

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Crosley](#) /

› [Crosley Full Size Bluetooth CR1206A-ST CD Jukebox Instruction Manual](#)

## Crosley CR1206A-ST

# Crosley Full Size Bluetooth CR1206A-ST CD Jukebox Instruction Manual

Model: CR1206A-ST

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Crosley Full Size Bluetooth CR1206A-ST CD Jukebox. Please read this manual thoroughly before using the product to ensure proper function and to prevent damage.

The Crosley CR1206A-ST Jukebox combines classic design with modern technology, featuring Bluetooth connectivity, a programmable CD player, and an AM/FM radio. It includes multi-color shifting LED lighting and a matching CD storage base stand.

## SAFETY INSTRUCTIONS

To ensure safe operation and to prevent damage, please observe the following safety precautions:

- **Power Source:** Connect the unit only to an AC power outlet of the specified voltage.
- **Ventilation:** Ensure adequate ventilation around the unit. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids, such as vases, on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a soft, dry cloth only.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Placement:** Place the unit on a stable, level surface to prevent it from falling.

## PACKAGE CONTENTS

Carefully unpack all items and ensure you have received the following:

- Crosley Full Size Bluetooth CR1206A-ST CD Jukebox Unit
- CD Storage Base Stand

- Power Cord
- Remote Controls (Two wireless remote controls included)
- Instruction Manual (This document)

## PRODUCT OVERVIEW

---

The Crosley CR1206A-ST Jukebox features a classic design with modern functionalities. Below are key components and features:

- **Bluetooth Connectivity:** Allows wireless streaming from compatible devices.
- **Programmable CD Player:** Supports standard audio CDs and reads MP3/WAV files.
- **AM/FM Radio:** Built-in tuner for radio broadcasts.
- **Multi-Color Shifting LED Lighting:** Enhances the aesthetic appeal.
- **Control Panel:** Front-mounted controls for various functions.
- **Remote Controls:** Two wireless remotes for convenient operation.
- **Storage Base Stand:** Integrated stand for stability and additional storage.



Figure 1: Front view of the Crosley CR1206A-ST Jukebox. This image displays the main unit with its distinctive green and red LED lighting, the central control panel, and the visible CD slot.



Figure 2: Side view of the Crosley CR1206A-ST Jukebox. This image highlights the elegant wooden cabinet finish and the overall profile of the unit.

## SETUP

- 1. Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport if needed.

## 2. Assembly of Base Stand:

The CD Storage Base Stand is designed to support the jukebox unit. Follow the assembly instructions provided with the stand to securely attach it. Ensure all fasteners are tightened.

3. **Placement:** Position the assembled jukebox on a stable, level surface. Ensure there is sufficient space around the unit for ventilation and access to controls.

4. **Power Connection:** Insert the power cord into the AC IN jack on the back of the jukebox, then plug the other end into a standard wall outlet.

5. **Initial Power On:** Press the Power button on the unit or remote control to turn on the jukebox. The LED lighting should illuminate.

# OPERATING INSTRUCTIONS

## 1. Bluetooth Pairing

1. **Activate Bluetooth Mode:** Press the "Mode" button on the jukebox or remote control until "Bluetooth" is selected. The Bluetooth indicator light will flash, indicating it is in pairing mode.

2. **Enable Bluetooth on Your Device:** On your smartphone or other Bluetooth-enabled device, go to the Bluetooth settings and ensure Bluetooth is turned on.

3. **Select Jukebox:** Look for "Crosley Jukebox" (or similar) in the list of available devices on your device. Select it to initiate pairing.

4. **Confirmation:** Once successfully paired, the Bluetooth indicator light on the jukebox will stop flashing and remain solid. You can now stream audio from your device to the jukebox.

## 2. CD Playback

1. **Insert CD:** Gently insert an audio CD (or a CD with MP3/WAV files) into the CD slot on the front of the unit. The label side should face up.

2. **Select CD Mode:** Press the "Mode" button until "CD" is selected. The jukebox will automatically begin reading the disc.

### 3. Playback Controls:

- Press **PLAY/PAUSE** to start or pause playback.
- Press **SKIP FORWARD** or **SKIP BACKWARD** to change tracks.
- Press and hold **SKIP FORWARD** or **SKIP BACKWARD** for fast forward or rewind.
- **Programming Tracks:** Refer to the detailed programming instructions in the full manual for creating custom playlists.

## 3. AM/FM Radio

1. **Select Radio Mode:** Press the "Mode" button until "AM" or "FM" is selected.

### 2. Tuning:

- Use the **TUNING KNOB** or **TUNING BUTTONS** on the remote to manually tune to a station.
- For automatic scanning, press and hold the **SCAN** button (if available) or the tuning buttons.

3. **Antenna Adjustment:** For optimal FM reception, extend and adjust the FM wire antenna located at the back of the unit. For AM reception, rotate the unit slightly to improve signal.

## 4. LED Lighting

The jukebox features multi-color shifting LED lighting. Use the dedicated "Light" button on the unit or remote control to cycle

through different lighting modes or to turn the lights on/off. Some models may require the lights to be on for audio playback.

## 5. Remote Control Usage

The two included wireless remote controls provide convenient access to all major functions. Ensure batteries are correctly installed. Point the remote control directly at the sensor on the front of the jukebox for best performance.

## MAINTENANCE

- **Cleaning the Cabinet:** Use a soft, dry, lint-free cloth to wipe the exterior surfaces. Do not use abrasive cleaners, waxes, or solvents.
- **CD Player Care:** Handle CDs by their edges. If a CD is dirty, wipe it gently with a soft, dry cloth from the center outwards. Do not use CD cleaning kits that apply liquid to the disc.
- **Dusting:** Regularly dust the unit, especially around ventilation areas, to prevent overheating.
- **Storage:** If storing the unit for an extended period, unplug it from the power outlet and cover it to protect against dust.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not securely connected; Wall outlet not active.	Ensure power cord is firmly plugged into the unit and a working wall outlet. Test the outlet with another device.
No sound	Volume too low; Mute function active; Incorrect mode selected.	Increase volume. Check if mute is active. Ensure the correct mode (Bluetooth, CD, AM/FM) is selected.
Bluetooth not pairing	Jukebox not in pairing mode; Device Bluetooth off; Device too far.	Ensure jukebox is in Bluetooth pairing mode (flashing indicator). Turn Bluetooth on your device. Move device closer to the jukebox.
CD not playing	CD inserted incorrectly; CD dirty or scratched; Incorrect mode.	Re-insert CD with label side up. Clean CD with a soft cloth. Try a different CD. Ensure CD mode is selected.
Poor radio reception	Antenna not extended/adjusted; Weak signal.	Extend and adjust the FM wire antenna. For AM, rotate the unit. Try moving the unit to a different location.
Remote control not working	Batteries dead or incorrectly inserted; Obstruction between remote and unit.	Replace batteries. Ensure correct polarity. Remove any obstructions and point remote directly at the sensor.

## SPECIFICATIONS

- **Model:** CR1206A-ST
- **Brand:** Crosley
- **Connectivity Technology:** Bluetooth, USB (Note: USB functionality for playback or charging is not explicitly detailed in product description, but listed in specifications.)
- **Speaker Type:** Stereo
- **Power Source:** Corded Electric
- **Compatible Devices:** Smartphone
- **CD Player:** Programmable, reads MP3 and WAV files
- **Lighting:** Multi-Color Shifting LED

- **Included Accessories:** Two Wireless Remote Controls, CD Storage Base Stand

## WARRANTY AND SUPPORT

Crosley products are manufactured to the highest quality standards. For specific warranty information, please refer to the warranty card included with your product or visit the official Crosley website. If you encounter any issues not covered in this manual, please contact Crosley customer support for assistance.

**Crosley Official Website:** [www.crosleyradio.com](http://www.crosleyradio.com)

© 2024 Crosley. All rights reserved.