

## Sony BDPS2500

# Sony BDPS2500 Blu-ray Player Instruction Manual

Model: BDPS2500

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your Sony BDPS2500 Blu-ray Player. Please read this manual thoroughly before using the player and retain it for future reference. The Sony BDPS2500 is designed to play Blu-ray discs, DVDs, and CDs, and offers access to various online streaming services via its built-in Wi-Fi connectivity.

## 2. SAFETY INFORMATION

---

- **Power Source:** Connect the player only to the power supply indicated on the rating label.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings. Avoid placing the unit on soft surfaces that may block vents.
- **Moisture:** Do not expose the player to rain or moisture to prevent fire or electric shock.
- **Foreign Objects:** Do not insert any objects into the player's openings.
- **Servicing:** Refer all servicing to qualified service personnel. Do not attempt to open the unit.
- **Placement:** Place the player on a stable, level surface away from direct sunlight, heat sources, and excessive dust.

## 3. PACKAGE CONTENTS

---

Verify that your package contains the following items:

- Sony BDPS2500 Blu-ray Player
- Remote Control
- AA Batteries (2) for Remote Control
- AC Power Cord
- Instruction Manual (this document)

*Note: An HDMI cable is typically required for connection to a television and may be sold separately.*

## 4. SETUP

---

### 4.1 Connecting to a Television

Use an HDMI cable to connect the Blu-ray player to your television. HDMI provides both video and audio signals through a single cable.

1. Ensure both the Blu-ray player and the television are powered off.
2. Connect one end of the HDMI cable to the HDMI OUT port on the rear of the Blu-ray player.
3. Connect the other end of the HDMI cable to an available HDMI IN port on your television. Note the HDMI input number (e.g., HDMI 1, HDMI 2).



Image: Rear view of the Sony BDPS2500 Blu-ray Player, showing the HDMI output port for television connection.

### 4.2 Connecting to Power

1. Connect the AC power cord to the AC IN port on the rear of the Blu-ray player.
2. Plug the other end of the power cord into a wall outlet.

### 4.3 Initial Setup Wizard

Upon first power-on, the player will guide you through an initial setup wizard. Follow the on-screen instructions to configure language, video output settings, and network connection.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Disc Playback

1. Power on the Blu-ray player and your television. Select the correct HDMI input on your TV.
2. Press the **OPEN/CLOSE** button on the player or remote control to open the disc tray.

3. Place a Blu-ray disc, DVD, or CD onto the disc tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the tray. Playback will typically start automatically. If not, select the disc icon from the home menu and press **ENTER**.

## 5.2 Streaming Services

The BDPS2500 provides access to various streaming applications.

1. From the player's home menu, navigate to the 'Video' or 'Network' section.
2. Select the desired streaming application (e.g., Netflix, YouTube, Vudu, Pandora).
3. Follow the on-screen prompts to log in to your account or create a new one.

## 5.3 Miracast Screen Mirroring

Miracast allows you to mirror the screen of compatible Android mobile devices to your TV.

1. On the Blu-ray player, navigate to the Miracast application from the home menu.
2. On your compatible Android device, enable the screen mirroring function (often found in display settings or quick settings, labeled as 'Cast', 'Screen Mirroring', 'Smart View', etc.).
3. Select your Sony BDPS2500 from the list of available devices on your mobile device.

## 5.4 PlayStation Now

The player supports PlayStation Now, allowing you to stream PlayStation 3 games without a console.

1. Access the PlayStation Now application from the player's home menu.
2. A PlayStation Network account and a compatible controller (sold separately) are required.
3. Follow the on-screen instructions to browse and play games.

## 6. NETWORK SETUP (Wi-Fi)

---

To access streaming services and firmware updates, connect your player to a wireless network.

1. From the home menu, navigate to **Setup > Network Settings > Internet Settings**.
2. Select **Wireless Setup**.
3. Choose your wireless network (SSID) from the list.
4. Enter your network password (WPA/WPA2 key) using the on-screen keyboard and remote control.
5. Confirm the settings to establish the connection.

## 7. MAINTENANCE

---

- **Cleaning the Unit:** Wipe the exterior of the player with a soft, dry cloth. Do not use abrasive pads, scouring powder, or solvents such as alcohol or benzene.
- **Cleaning Discs:** Wipe discs with a soft cloth from the center outwards. Do not use solvents.
- **Firmware Updates:** Periodically check for and install firmware updates to ensure optimal performance and access to the latest features. Updates can usually be found in the player's network settings menu.

## 8. TROUBLESHOOTING

---

Refer to the table below for common issues and their solutions.

Problem	Solution
No power	Ensure the power cord is securely connected to both the player and a working electrical outlet.
No picture or sound	Verify the HDMI cable is correctly connected. Ensure the TV is set to the correct HDMI input.
Disc does not play	Check if the disc is inserted correctly (label side up). Clean the disc for smudges or scratches. Ensure the disc format is supported.
Cannot connect to Wi-Fi	Check your network password. Ensure the player is within range of your Wi-Fi router. Restart your router and the Blu-ray player.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the player's sensor.

## 9. SPECIFICATIONS

---

<b>Model Name</b>	BDP-S2500
<b>Brand</b>	Sony
<b>Media Type</b>	Blu-Ray Disc, DVD, CD
<b>Video Output Resolution</b>	1080p (1920x1080)
<b>Connectivity Technology</b>	Wi-Fi
<b>Connector Type</b>	HDMI (1 port)
<b>Audio Output Mode</b>	Dolby Digital TrueHD, DTS 2.0+ Digital Out
<b>Surround Sound Channel Configuration</b>	5.1
<b>Compatible Devices</b>	Television
<b>Supported File Formats</b>	MP4, AVI, JPEG, MP3
<b>Item Weight</b>	2.5 Pounds
<b>Color</b>	BLACK
<b>UPC</b>	027242890688

## 10. WARRANTY AND SUPPORT

---

For warranty information, please refer to the warranty card included with your product or visit the official Sony support website. For technical assistance, troubleshooting beyond this manual, or to inquire about repairs, please contact Sony customer support.

**Online Support:** <https://www.sony.com/electronics/support>

Please have your model number (BDPS2500) and serial number ready when contacting support.

