

Miele B018QTZPR4

Miele Steam Oven Descaler Tablets Instruction Manual

INTRODUCTION

This manual provides essential information for the proper use and maintenance of Miele Steam Oven Descaler Tablets. These tablets are specifically formulated to remove mineral deposits and limescale from the heating elements and water pathways of Miele appliances, particularly coffee machines and steam ovens, ensuring their optimal performance and longevity. Regular descaling is crucial for maintaining appliance efficiency and preventing damage caused by hard water buildup.

PRODUCT OVERVIEW

The Miele Steam Oven Descaler Tablets are designed for convenient and effective descaling. Each pack contains 12 tablets, typically provided in two blister packs of six tablets each.



This image displays the Miele Steam Oven Descaler Tablets. On the left, the product box is shown, featuring the Miele logo and text in multiple languages indicating 'Descaling tablets'. On the right, two blister packs, each containing six individual white descaling tablets, are visible, totaling twelve tablets.

These tablets are a vital component of your appliance's maintenance routine, helping to preserve its functionality and the quality of its output.

IMPORTANT SAFETY INFORMATION

Please read and adhere to the following safety guidelines before using the descaler tablets:

- Keep out of reach of children and pets.
- Avoid contact with skin and eyes. In case of contact, rinse thoroughly with water.
- Do not ingest. If swallowed, seek immediate medical attention.
- Store in a cool, dry place, away from direct sunlight and heat.
- Always follow the specific descaling instructions provided in your Miele appliance's user manual.

USAGE INSTRUCTIONS

The descaling process for Miele appliances, such as coffee machines and steam ovens, is typically guided by the appliance's internal programming. Refer to your specific Miele appliance's operating manual for detailed, model-specific descaling instructions. The general procedure involves the following steps:

1. **Preparation:** Ensure your Miele appliance is turned off and cooled down. Empty any water reservoirs or drip trays as instructed by your appliance.
2. **Initiate Descaling Program:** Access the descaling program or function on your Miele appliance's display or control panel. The appliance will guide you through the necessary steps.
3. **Prepare Descaling Solution:** Dissolve the recommended number of Miele descaling tablets (usually one or two, as specified by your appliance's manual) in the water reservoir with the amount of lukewarm water indicated by the appliance. Stir gently until the tablets are fully dissolved.
4. **Start Descaling Cycle:** Place a suitable container under the appliance's spout(s) to collect the descaling solution. Start the descaling cycle as prompted by the appliance. The process may take some time, involving several rinsing phases.
5. **Rinsing:** After the descaling cycle is complete, thoroughly rinse the water reservoir and fill it with fresh, clean water. Run several rinsing cycles through the appliance as instructed to ensure all descaling solution residue is removed.
6. **Completion:** Once the rinsing cycles are finished, your appliance is ready for use. Dispose of the collected descaling solution and rinse water responsibly.

MAINTENANCE AND FREQUENCY

Regular descaling is a critical part of maintaining your Miele appliance. For Miele coffee machines, it is generally recommended to descale every 500-1000 cups of coffee, or as indicated by your appliance's descaling reminder. For steam ovens, follow the descaling prompts on the appliance's display. The frequency may vary depending on the hardness of your local water supply and the intensity of appliance use. Consistent descaling prevents limescale buildup, which can impair heating efficiency, reduce water flow, and potentially damage internal components.

TROUBLESHOOTING

If you encounter issues during or after the descaling process, consider the following:

- **Descaling Reminder Persists:** Ensure all rinsing cycles have been completed as per your appliance's instructions. Sometimes, a second rinse cycle is necessary.
- **Appliance Not Functioning Correctly After Descaling:** Verify that the water reservoir is properly seated and filled with fresh water. Check for any error messages on the appliance display and consult your appliance's specific manual for error code interpretations.
- **Incomplete Descaling:** If significant limescale buildup was present, a single descaling cycle might not be sufficient. You may need to repeat the descaling process.
- **Tablet Not Dissolving:** Ensure the water used is lukewarm and stir gently to aid dissolution. Do not force dissolution or use hot water unless specified by your appliance manual.

For persistent issues, refer to your Miele appliance's comprehensive troubleshooting guide or contact Miele customer support.

PRODUCT SPECIFICATIONS


Feature	Detail
Brand	Miele
Item Form	Tablet
Specific Uses For Product	Oven (and Coffee Machines)
Unit Count	12 Count
Number of Items	2 (Packs)
Package Dimensions	10.98 x 5.24 x 1.93 inches
Item Weight	1.59 Pounds
ASIN	B018QTZPR4
Manufacturer	Miele
Date First Available	August 2, 2016

WARRANTY AND SUPPORT

For specific warranty information regarding Miele products, please refer to the documentation provided with your Miele appliance or visit the official Miele website. For technical support, product inquiries, or assistance with descaling procedures, please contact Miele customer service directly. You can find contact details and additional resources on the [Miele Store on Amazon](#) or the official Miele corporate website.

Related Documents

	<p>Miele DGC 7845X Combi-Steam Oven: Features, Specifications, and Installation</p> <p>Discover the Miele DGC 7845X, a handleless combi-steam oven with fresh water and wastewater connection. This document details its advanced features, operating modes, ease of use, technical specifications, and installation requirements.</p>
	<p>Miele DGC 7460 HC Pro Steam Oven - Features and Specifications</p> <p>Detailed information on the Miele DGC 7460 HC Pro, a steam combination oven with networking and HydroClean technology. Includes features, technical data, operating modes, and installation dimensions.</p>

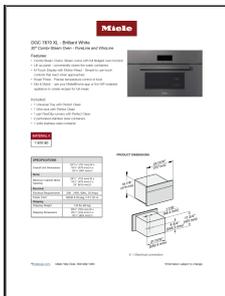

[Miele DGC 7870 XL Brilliant White 30" Combi-Steam Oven - Specifications & Dimensions](#)

Detailed specifications and installation dimensions for the Miele DGC 7870 XL Brilliant White 30-inch Combi-Steam Oven. Features include M-Touch display, Roast Probe, and Mix & Match functionality.



[Miele Combination Steam Oven Operating and Installation Instructions](#)

Comprehensive guide for Miele combination steam ovens, covering operation, installation, safety, cleaning, and troubleshooting. Learn about features like steam cooking, automatic programs, and Miele@home connectivity.