

## Gigaset C39280-Z4-C705

# Gigaset C39280-Z4-C705 Indoor Power Adapter Instruction Manual

## 1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Gigaset C39280-Z4-C705 Indoor Power Adapter. This power adapter is designed for charging specific Gigaset handsets and is compatible with various models.

## 2. SAFETY INFORMATION

- **Read all instructions:** Before using the power adapter, read and understand all safety and operating instructions.
- **Indoor use only:** This power adapter is designed for indoor use in dry locations. Do not expose it to rain, moisture, or extreme temperatures.
- **Proper voltage:** Ensure the wall outlet voltage matches the adapter's specifications (230 VAC, 50 Hz).
- **Avoid damage:** Do not use the adapter if the cord or plug is damaged. Do not attempt to open or repair the adapter.
- **Keep away from children:** Store the adapter out of reach of children.
- **Unplug when not in use:** Disconnect the adapter from the power outlet when not in use for extended periods.

## 3. SETUP AND COMPATIBILITY

The Gigaset C39280-Z4-C705 power adapter is specifically designed for use with Gigaset charging cradles and handsets. It is **not** intended for use with Gigaset base stations.

### Compatibility Check:

Before connecting, verify compatibility by checking the bottom of your charging cradle. If you find the designation "C39280-Z4-C705", this power adapter is compatible with your charging cradle.

This power adapter is compatible with charging cradles for the following Gigaset handset models:

- A120H, A130H, A14, A150H, A16, A170H, A220H, A230H, A24, A250H, A26, A330H, A34, A350H, A400H, A410H, A415H, A420H, A510H, A510HIP, A520H, A540H, A540HCAT, A545H, A550H, A630H
- AC16H, AC24, AC25H, AC26H

- AL110H, AL130H, AL230H, AL240H, AL320H, AL350H, AL370H, AL410H
- AS120H, AS130H, AS160H, AS200H, AS300H, AS320H, AS350H, AS405H, AS410H, AS415H, AS430H, AS435H, AS470H, AS530H
- C300H, C34, C35, C430HX, C45, C530H, C530HX, C610H, C620H, CL102, CL103, CL540H, CL660HX
- E260H, E300H, E310H, E36, E45, E500H, E550H, E560HX, E630H, E630HX
- ELMEG D130, ELMEGD150R, ELMEGD151R
- N720SPKPRO
- R630H, R650HPRO
- S44, S45, S510HPRO, S650HPRO, S810H, S820H, S850H, S850HX, SL44
- SWYXPhone D710HS, SWYXPhone D765H

## Connection Steps:

1. **Identify the charging port:** Locate the power input port on your Gigaset charging cradle.
2. **Connect the adapter:** Insert the small plug of the power adapter cable into the charging port of the cradle. Ensure it is firmly seated.
3. **Plug into power outlet:** Insert the two-prong plug of the power adapter into a standard 230 VAC, 50 Hz wall outlet.
4. **Place handset:** Place your compatible Gigaset handset into the charging cradle. The handset should indicate that it is charging.



*Image: The Gigaset C39280-Z4-C705 power adapter with its two-prong plug and coiled cable. The adapter body displays model number C39280-Z4-C705, input 230 VAC, 50 Hz, 50 mA, and output 4.0 VDC, 150 mA.*

## 4. OPERATING INSTRUCTIONS

Once connected, the power adapter continuously supplies power to the charging cradle. When a compatible Gigaset handset is placed in the cradle, it will begin to charge automatically. The charging status is typically indicated on the handset's display.

- **Continuous Charging:** The adapter is designed for continuous connection to the power outlet and charging cradle.
- **Handset Placement:** Ensure the handset is correctly seated in the cradle for proper charging contact.
- **Charging Indicator:** Refer to your specific Gigaset handset manual for details on charging indicators (e.g., battery icon, LED).

## 5. MAINTENANCE

- **Cleaning:** Disconnect the adapter from the power outlet before cleaning. Use a soft, dry cloth to wipe the adapter. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and moisture. Avoid tightly coiling the cable to prevent damage.
- **Inspection:** Periodically inspect the adapter and cable for any signs of damage, such as cuts, fraying, or bent prongs. If damage is found, discontinue use and replace the adapter.

## 6. TROUBLESHOOTING

### Issue: Handset not charging.

- **Check power connection:** Ensure the power adapter is securely plugged into both the wall outlet and the charging cradle.
- **Verify handset placement:** Make sure the handset is correctly seated in the charging cradle, ensuring proper contact with the charging pins.
- **Confirm compatibility:** Double-check that your charging cradle and handset model are listed as compatible with the C39280-Z4-C705 adapter.
- **Test outlet:** Try plugging another device into the wall outlet to ensure it is functional.
- **Inspect for damage:** Examine the adapter cable and plug for any visible damage. If damaged, do not use.

If the issue persists after performing these checks, contact Gigaset customer support for further assistance.

## 7. SPECIFICATIONS

<b>Model:</b>	C39280-Z4-C705
<b>Brand:</b>	Gigaset
<b>Input Voltage:</b>	230 VAC, 50 Hz, 50 mA
<b>Output Voltage/Current:</b>	4.0 VDC, 150 mA
<b>Wattage:</b>	34.5 watts
<b>Material:</b>	Plastic
<b>Dimensions:</b>	10 x 8 x 3 cm; 60 g
<b>Connectivity Type:</b>	Proprietary connector (Note: Product data may refer to internal USB classification, not a user-accessible USB port)
<b>Form Factor:</b>	Rectangular
<b>Mounting Type:</b>	Desktop Mount (for the cradle it powers)

## 8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your Gigaset handset or visit the official Gigaset website. Keep your purchase receipt as proof of purchase.

You can also contact Gigaset customer service for assistance with this power adapter or any compatible Gigaset product.

