

Bower SCS-MW4

Bower Sky Capture Series Memory Card Case (Model SCS-MW4)

Instruction Manual

INTRODUCTION

The Bower Sky Capture Series Memory Card Case (Model SCS-MW4) is designed to provide robust protection and organized storage for your valuable memory cards. Featuring a rugged hard plastic exterior, a shock-absorbing molded rubber interior, and a weather-resistant seal, this case ensures your data remains secure from impacts, water, and dust. It is ideal for photographers, travelers, and content creators who require reliable memory card management on the go.

SETUP

Follow these steps to prepare your memory card case for use:

- Opening the Case:** Locate the snap-in locking system on the front of the case. Gently press the latch to release the lock and open the case. The case will fold open to reveal the interior card slots.
- Inserting Memory Cards:** The interior features custom-fit molded rubber slots. This case can accommodate up to 4 CF memory cards, 4 SD memory cards, and 4 Micro SD memory cards. Carefully align each card with its corresponding slot and press it gently until it is securely seated. The snug fit ensures cards remain in place during transport.

BOWER®

HOLDS UP TO 12 CARDS

HOLDS 4 SD CARDS



HOLDS 4 CF CARDS

HOLDS 4 MICRO SD CARDS



Memory cards not included

Image: The Bower Sky Capture Series Memory Card Case open, illustrating its capacity to hold 4 CF, 4 SD, and 4 Micro SD cards.

CUSTOM FIT CARD SLOTS

SECURELY HOLDS CARDS IN PLACE



Memory cards not included

Image: A close-up view of the custom-fit molded rubber slots within the Bower memory card case, designed for secure card placement.

OPERATING INSTRUCTIONS

Using your memory card case effectively:

1. **Securing the Case:** After inserting your memory cards, close the case firmly until you hear and feel the snap-in lock engage. This ensures the case is securely closed and the weather-resistant seal is activated.
2. **Transporting:** The compact and rugged design makes this case ideal for transport. Its hard plastic exterior and shock-absorbing interior protect against drops and impacts. The weather-resistant seal guards against moisture and dust, making it suitable for various environments.
3. **Accessing Cards:** To retrieve a card, simply open the case using the snap-in lock and gently pull the desired card from its slot.



SHOCK PROOF



WEATHER RESISTANT



HEAVY DUTY

Image: The Bower Sky Capture Series Memory Card Case displayed in an outdoor setting, emphasizing its durable and weather-resistant construction.



Image: The Bower memory card case shown with water droplets, demonstrating its shock-proof and water-resistant capabilities.



Image: The Bower memory card case positioned next to a credit card, highlighting its compact and portable size for easy carrying.

MAINTENANCE

To ensure the longevity and effectiveness of your memory card case:

- **Cleaning the Exterior:** Wipe the hard plastic exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Cleaning the Interior:** Use a soft, dry cloth or a small brush to remove any dust or debris from the molded rubber slots. Ensure no particles remain that could scratch your memory cards.
- **Inspecting the Seal:** Periodically check the weather-resistant seal around the edges of the case for any signs of wear, cracks, or damage. A compromised seal may reduce its protective capabilities against water and dust.
- **Storage:** Store the case in a cool, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

If you encounter any issues with your memory card case, consider the following:

- **Case Not Closing Properly:** Ensure that no memory cards are improperly seated or protruding from their slots. Check for any foreign objects obstructing the closing mechanism or the weather-resistant seal.
- **Memory Cards Not Fitting:** Verify that you are attempting to insert the correct type of memory card into the designated slot (CF, SD, or Micro SD). The slots are custom-fit and designed for specific card dimensions. Do not force cards into incompatible slots.
- **Reduced Water/Dust Resistance:** Inspect the rubber seal along the perimeter of the case. If the seal appears damaged, cracked, or dislodged, the case's resistance to water and dust may be compromised.

SPECIFICATIONS

Feature	Detail
Brand	Bower
Model Number	SCS-MW4
Color	Black
Compatible Devices	Memory Cards (CF, SD, Micro SD)
Capacity	4 CF, 4 SD, 4 Micro SD cards (Total 12)
Form Factor	Case
Shell Type	Hard
Enclosure Material	Hard Plastic, Molded Rubber
Water Resistance Level	Water Resistant
Additional Features	Card Slots, Heavy Duty Protection, Lightweight
Item Dimensions	0.55 x 1.61 x 0.63 inches
Item Weight	580 g

WARRANTY INFORMATION

Specific warranty details for the Bower Sky Capture Series Memory Card Case (Model SCS-MW4) may vary. Please refer to the warranty documentation included with your purchase or visit the official Bower website for the most current and

detailed warranty information. Retain your proof of purchase for any warranty claims.

SUPPORT

For further assistance, product inquiries, or technical support regarding your Bower Sky Capture Series Memory Card Case, please visit the official Bower website. You may find FAQs, contact information, and additional resources there. Official Bower Website: [Bower Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question