

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Tango](#) /
- › [Tango Aicleaner Plus Robotic Vacuum Cleaner User Manual](#)

## Tango AICLEANER PLUS

# Tango Aicleaner Plus Robotic Vacuum Cleaner User Manual

## 1. PRODUCT OVERVIEW

---

Thank you for choosing the Tango Aicleaner Plus Robotic Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and keep it for future reference.



**Image 1.1:** Front view of the Tango Aicleaner Plus Robotic Vacuum Cleaner. This image shows the overall design and main body of the robot.

## 2. SETUP

---

### 2.1 Unboxing and Component Check

Carefully remove all components from the packaging. Ensure all items listed below are present:

- Tango Aicleaner Plus Robotic Vacuum Cleaner
- Charging Dock
- Power Adapter
- Remote Control
- Side Brushes (spare set included)
- HEPA Filter (spare included)
- Cleaning Tool

### 2.2 Charging the Robot

1. Place the charging dock against a wall in an open area, ensuring there are no obstacles within 1 meter

- (3 feet) to the sides and 2 meters (6 feet) in front.
2. Connect the power adapter to the charging dock and plug it into a wall outlet. The indicator light on the charging dock will illuminate.
  3. Place the robot onto the charging dock, aligning its charging contacts with those on the dock. The robot will emit a sound, and the display will show the charging status.
  4. Allow the robot to charge completely before its first use. A full charge typically takes 4-5 hours.



**Image 2.1:** Top view of the Tango Aicleaner Plus, showing the control panel and display. This display indicates charging status and operational modes.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Powering On/Off

- To power on, press and hold the power button on the robot or the remote control until the indicator lights up.
- To power off, press and hold the power button until the indicator turns off.

### 3.2 Starting a Cleaning Cycle

Press the 'Clean' button on the robot or the remote control to start an automatic cleaning cycle. The robot will navigate and clean your floors using its intelligent navigation technology.

### 3.3 Cleaning Modes

The Tango Aicleaner Plus offers various cleaning modes to suit different needs. Use the remote control to select your desired mode:

- **Auto Mode:** The robot automatically selects the best cleaning path.
- **Spot Mode:** The robot cleans a specific area in a spiral pattern.
- **Edge Mode:** The robot cleans along walls and furniture edges.
- **Manual Control:** Use the directional buttons on the remote control to guide the robot.

### 3.4 Scheduling Cleaning

Refer to the remote control section in the full manual for detailed instructions on how to set a cleaning schedule for your robot.

## 4. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your Tango Aicleaner Plus.

### 4.1 Emptying the Dustbin

1. Press the dustbin release button (typically located on the top or side of the robot).
2. Remove the dustbin and empty its contents into a trash receptacle.
3. Rinse the dustbin with water if necessary, ensuring it is completely dry before reinserting.

### 4.2 Cleaning Filters

The Tango Aicleaner Plus uses a HEPA filter. Clean the filter regularly (after every 3-5 uses) and replace it every 3-6 months, depending on usage.

- Remove the HEPA filter from the dustbin.
- Tap the filter gently to remove dust and debris. Do not wash the HEPA filter with water.
- Replace the filter if it is visibly damaged or heavily soiled.

### 4.3 Cleaning Brushes and Sensors

Use the provided cleaning tool to remove hair and debris from the main brush and side brushes. Wipe the charging contacts and cliff sensors with a dry cloth.



**Image 4.1:** Side view of the Tango Aicleaner Plus. This view may show the dustbin access point or side brush location, relevant for maintenance.

## 5. TROUBLESHOOTING

---

If your Tango Aicleaner Plus encounters an issue, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not turn on	Low battery; Power button not pressed correctly	Charge the robot fully; Press and hold the power button for 3 seconds
Robot not charging	Charging contacts dirty; Power adapter not connected	Clean charging contacts on robot and dock; Ensure power adapter is securely plugged in
Robot gets stuck frequently	Obstacles on floor; Cliff sensors dirty	Clear cables, rugs, and small objects; Clean cliff sensors

Problem	Possible Cause	Solution
Poor cleaning performance	Dustbin full; Brushes tangled; Filter clogged	Empty dustbin; Clean main and side brushes; Clean or replace HEPA filter

For issues not covered here, please contact customer support.

## 6. SPECIFICATIONS

Feature	Specification
Brand	Tango
Model Name	Aicleaner Plus
Model Number	AICLEANER PLUS
Dimensions (L x W x H)	27 x 27 x 14 cm
Weight	4.2 Kilograms
Voltage	100-240 Volts
Noise Level	55 Decibels
Special Features	Navigation technology, Wireless, Remote control
Surface Recommendation	Tiles, parquet, carpets
Filter Type	HEPA
Battery Life	90 minutes
Battery Composition	Lithium-ion

## 7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Tango website. If you encounter any issues or have questions regarding your Tango Aicleaner Plus, please contact our customer service team for assistance.