

Keurig K475

Keurig K475 Single Serve K-Cup Pod Coffee Brewer

Instruction Manual

1. INTRODUCTION

The Keurig K475 Coffee Maker is designed to brew a rich, smooth, and delicious cup of coffee, tea, or hot cocoa using K-Cup, K-Mug, and K-Carafe pods. This programmable brewer offers customizable settings to enhance your beverage experience.

Key features include:

- **Strength Control Setting:** Adjust brew strength for a bolder cup.
- **Five Temperature Settings:** Enjoy your beverage at your preferred temperature.
- **Multiple Brew Sizes:** Supports 4, 6, 8, 10, and 12 ounce K-Cup pod sizes, and 22, 26, or 30 ounce K-Carafe pod sizes (carafe sold separately).
- **Large 70 oz Water Reservoir:** Brews 8+ cups before refilling, simplifying your routine. The reservoir is removable for easy refilling.
- **Large Color Touch Screen:** Easy navigation and digital clock.
- **Auto On/Off:** Program the brewer to turn on or off automatically to conserve energy.

2. SETUP

2.1 Unpacking and Initial Rinse

1. Remove all packaging materials and tape from the brewer.
2. Place the brewer upright on a stable, flat surface.
3. Remove the water reservoir lid and the reservoir itself. Rinse the reservoir with fresh water.
4. Fill the water reservoir to the MAX fill line with fresh water.
5. Place the reservoir back on the brewer and replace the lid.

6. Plug the brewer into a grounded outlet. The touch screen will power on.

2.2 First Brew Cycle

Perform a cleansing brew before brewing your first beverage.

1. Place a large mug (at least 10 oz) on the drip tray.
2. Lift the brewer handle. The K-Cup pod holder will open.
3. **Do not insert a K-Cup pod.** Close the handle.
4. The touch screen will display brew options. Select a large brew size (e.g., 10 oz).
5. Press the BREW button. Hot water will dispense into the mug.
6. Discard the hot water. The brewer is now ready for use.

3. OPERATING INSTRUCTIONS

3.1 Brewing a Single K-Cup Pod

1. Ensure the water reservoir is filled with fresh water.
2. Place a mug on the drip tray.
3. Lift the brewer handle and insert a K-Cup pod into the K-Cup pod holder.
4. Lower the handle completely to close the lid.
5. On the touch screen, select your desired brew size (4, 6, 8, 10, or 12 oz).
6. Optionally, select the **Strong** setting for a bolder brew or adjust the temperature.
7. Press the **BREW** button. The brewing process will begin.
8. Once brewing is complete, lift the handle and carefully remove the used K-Cup pod.

3.2 Brewing a K-Carafe Pod (Carafe Sold Separately)

1. Ensure the water reservoir is filled.
2. Place a Keurig Carafe on the drip tray.
3. Lift the brewer handle and insert a K-Carafe pod.
4. Lower the handle completely.
5. On the touch screen, select your desired carafe brew size (22, 26, or 30 oz).
6. Press the **BREW** button.
7. Once brewing is complete, remove the K-Carafe pod.

3.3 Programmable Features

- **Auto On/Off:** Access the menu on the touch screen to set specific times for the brewer to automatically turn on or off.
- **Digital Clock:** Set the current time for accurate programming.
- **Temperature Control:** Adjust the brewing temperature via the touch screen settings.

4. MAINTENANCE

4.1 Cleaning the Water Reservoir

The removable 70 oz water reservoir should be cleaned regularly.

1. Remove the water reservoir from the brewer.
2. Wash with warm, soapy water. Rinse thoroughly.
3. Do not use abrasive cleaners or scrubbers.
4. Ensure the reservoir is completely dry before refilling and reattaching.

4.2 Descaling

Descaling is essential to remove calcium deposits that can build up over time and affect brewer performance. The brewer will remind you to descale.

1. Turn off the brewer.
2. Empty the water reservoir.
3. Pour a full bottle of Keurig Descaling Solution into the water reservoir.
4. Fill the empty bottle with water and pour it into the reservoir.
5. Place a large mug on the drip tray.
6. Perform a cleansing brew cycle (without a K-Cup pod) until the reservoir is empty.
7. Let the brewer stand for at least 30 minutes.
8. Rinse the reservoir thoroughly and fill with fresh water.
9. Perform at least 12 cleansing brew cycles with fresh water to ensure all descaling solution is flushed out.

4.3 Water Filter Replacement

The Keurig K475 includes a water filter handle and two filters. Replace the water filter every 2 months or 60 tank refills for best results.

5. TROUBLESHOOTING

5.1 No Brew or Partial Brew

- **Check Water Level:** Ensure the water reservoir is filled above the minimum line.
- **K-Cup Pod Placement:** Verify the K-Cup pod is correctly seated in the holder and the handle is fully lowered.
- **Descaling Needed:** Mineral buildup can restrict water flow. Perform a descaling cycle.

5.2 Weak Coffee

- **Brew Size:** Select a smaller brew size for a stronger cup.
- **Strength Control:** Activate the 'Strong' brew setting on the touch screen.
- **K-Cup Pod Type:** Try a K-Cup pod with a darker roast or higher intensity.

5.3 "Exploding" K-Cups or Grounds in Coffee

- **Overfilling:** Ensure you are not overfilling reusable K-Cups.
- **Powdered Drinks:** Avoid using powdered coffees, ciders, or hot cocoa directly in the K-Cup pod holder. These can clog the internal piping. Instead, empty the powder into your mug and use the brewer to dispense hot water.
- **Needle Clog:** The brewer's needles may be clogged. Refer to the full user manual for instructions on cleaning the entry and exit needles.

6. SPECIFICATIONS

K475

↑ ↓ PRODUCT DIMENSIONS

13.2" High
(17.6" High when open)

10.5" Wide

13.3" Deep

Weighs 10.0lbs



Image: Keurig K475 Coffee Maker with key dimensions.

Feature	Detail
Brand	Keurig

Model Name	Coffee Maker, K475
Capacity	70 ounces (water reservoir)
Color	Black
Special Feature	Programmable, Water Filter
Coffee Maker Type	Drip Coffee Machine
Operation Mode	Fully Automatic
Wattage	1000 watts
Voltage	120 Volts
Human Interface Input	Touchscreen
Coffee Input Type	K-Cup pods, K-Mug pods, K-Carafe pods
Filter Type	Reusable (for water filter)
Item Weight	12.8 Pounds
Material	Plastic
Manufacture Year	2015
UPC	611247356234

7. WARRANTY AND SUPPORT

For technical assistance or warranty information, please contact Keurig Customer Care.

Keurig Customer Care Line: 866-901-BREW (2739)

Refer to the official Keurig website for the most up-to-date warranty details and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question