

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Rosewill](#) /

› [Rosewill SP-7260 2.0 Woofer Speaker System User Manual](#)

Rosewill SP-7260

Rosewill SP-7260 2.0 Woofer Speaker System

User Manual

1. INTRODUCTION

Thank you for purchasing the Rosewill SP-7260 2.0 Woofer Speaker System. This system is designed to provide high-quality audio for gaming, music, and movies. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your speakers.

2. SAFETY INFORMATION

- Read all instructions before using the product.
- Do not expose the speakers to water, moisture, or extreme temperatures.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the speakers during lightning storms or when unused for long periods.
- Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- Avoid placing the speakers near strong magnetic fields or heat sources.
- Keep the speakers away from children and pets.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items listed below are present and in good condition. If any items are missing or damaged, contact your retailer.



Image: The Rosewill SP-7260 speaker system, including two speakers, cables, and user manual, shown in its retail packaging.

- Rosewill SP-7260 Speakers (2 units)
- Audio Input Cable (RCA to 3.5mm)
- Speaker Connection Cable
- Power Cable
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Rosewill SP-7260 speaker system.

4.1 Front Panel



Image: Front view of both Rosewill SP-7260 speakers, highlighting the 1.5-inch tweeter and 4-inch woofer with gold accents and a honeycomb grille.

- **Tweeter:** 1.5-inch driver for high-frequency sounds.
- **Woofers:** 4-inch driver for mid-range and bass sounds.
- **Protective Grille:** Covers and protects the speaker drivers.

4.2 Side Control Panel (Right Speaker)



Image: Side view of the right Rosewill SP-7260 speaker, showing the control panel with Volume, Treble, and Bass knobs, a headphone jack, and an AUX input.

- **Volume Control:** Adjusts the overall sound level.

- **Treble Control:** Adjusts the high-frequency sound output.
- **Bass Control:** Adjusts the low-frequency sound output.
- **Headphone Jack:** For private listening (3.5mm).
- **AUX-in:** Additional 3.5mm input for connecting external audio devices.

4.3 Rear Panel



Image: Rear view of both Rosewill SP-7260 speakers, showing the audio input (RCA), speaker output, power switch, and AC power input on the right speaker, and only speaker input on the left speaker.

- **Audio Input (RCA):** Connects to your audio source (e.g., PC, DVD player).
- **Speaker Output:** Connects the right speaker to the left speaker.
- **Power Switch:** Turns the speaker system ON or OFF.
- **AC Input:** Connects the power cable to an electrical outlet.
- **Speaker Input (Left Speaker):** Connects the left speaker to the right speaker.

5. SETUP INSTRUCTIONS

Follow these steps to set up your Rosewill SP-7260 speaker system.

1. **Speaker Placement:** Place the speakers on a stable, flat surface. For optimal stereo imaging, position them equidistant from your listening position and spaced appropriately apart. The right speaker contains the controls and main connections.
2. **Connect Speakers:** Use the provided speaker connection cable to link the "Speaker Output" on the rear of the right speaker to the "Speaker Input" on the rear of the left speaker. Ensure a secure connection.
3. **Connect to Audio Source:**

- **Using RCA:** Connect the RCA end of the audio input cable to the "Audio Input" (red for right, white for left) on the rear of the right speaker. Connect the 3.5mm end to the audio output jack of your PC, notebook, DVD player, game console, TV, or CD/MP3 player.
 - **Using AUX-in:** Alternatively, you can use a 3.5mm to 3.5mm audio cable (not included) to connect an audio device to the "AUX-in" port on the side control panel of the right speaker.
4. **Connect Power:** Insert the power cable into the "AC Input" on the rear of the right speaker, then plug the other end into a standard electrical outlet.
 5. **Power On:** Flip the "Power Switch" on the rear of the right speaker to the "ON" position.

6. OPERATING INSTRUCTIONS

Once set up, follow these steps to operate your speaker system.

1. **Adjust Volume:** Use the "Volume Control" knob on the side panel of the right speaker to increase or decrease the overall sound level.
2. **Adjust Tone:** Use the "Treble Control" and "Bass Control" knobs to fine-tune the high and low frequencies to your preference.
3. **Using Headphones:** Plug your headphones into the "Headphone Jack" on the side panel for private listening. This will mute the main speakers.
4. **Using AUX-in:** If you have an additional device connected to the "AUX-in" port, ensure your primary audio source is paused or disconnected. The system will automatically prioritize the active input.
5. **Power Off:** When not in use, flip the "Power Switch" on the rear of the right speaker to the "OFF" position.

7. MAINTENANCE

Proper care will help maintain the performance and appearance of your speakers.

- **Cleaning:** Use a soft, dry cloth to wipe the speaker surfaces. Do not use liquid cleaners or abrasive materials.
- **Dust:** Regularly dust the speaker grilles and cabinet to prevent accumulation.
- **Environment:** Keep speakers in a dry, cool environment, away from direct sunlight and heat sources.
- **Cables:** Periodically check all cable connections for security and wear.

8. TROUBLESHOOTING

If you encounter issues with your speaker system, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound	Speakers not powered on. Volume too low. Audio cable disconnected or faulty. Incorrect audio source selected on your device. Headphones plugged in.	Ensure power switch is ON. Increase volume using the knob. Check all audio cable connections. Try a different cable. Verify audio output settings on your connected device. Unplug headphones.
Distorted sound	Volume too high. Audio source output level too high. Poor audio cable connection.	Decrease speaker volume. Lower the volume on your audio source device. Check and secure audio cable connections.
Humming or buzzing noise	Interference from other electronic devices. Ground loop issue. Loose cable connection.	Move speakers away from other electronics (e.g., cell phones, Wi-Fi routers). Try plugging the speakers into a different electrical outlet. Ensure all cables are securely connected.
One speaker not working	Speaker connection cable loose or faulty. Balance setting on audio source.	Check the speaker connection cable between the right and left speakers. Try reseating it. Check the balance settings on your connected audio device.

9. SPECIFICATIONS

Feature	Detail
Model	SP-7260
Configuration	2.0 Channel
Total RMS Power	60 Watts
Driver Units	Tweeter: 1.5" x 2, Woofer: 4" x 2
Frequency Response	60Hz - 20KHz
Impedance	4 Ohms
Connectivity	Wired (RCA, 3.5mm AUX-in)
Color	Black
Dimensions (H x W x D)	11.30" x 7.30" x 9.00" (each speaker)
Weight	15.43 lbs (total)
Power Source	Corded Electric (AC 120V~60Hz 60W)

10. WARRANTY AND SUPPORT

Rosewill products are designed and manufactured to the highest quality standards. For warranty information and technical support, please refer to the warranty card included with your product or visit the official Rosewill website. Keep your purchase receipt as proof of purchase.

For further assistance, please contact Rosewill customer support.
