

[Manuals.plus](#) /

› [Travelway](#) /

› Travelway Digital Stopwatch User Manual

Travelway COMINSO5JUL67737

Travelway Digital Stopwatch Instruction Manual

Model: COMINSO5JUL67737


Brand: Travelway

PRODUCT OVERVIEW

The Travelway Digital Stopwatch is designed for straightforward and reliable timing. It focuses on core stopwatch functionality, omitting complex features to ensure ease of use and clear display readability.

Key Features:

- Simple and basic operation, designed without complex features like time, date, or alarm functions for ease of use.
- Intuitive control with minimal key presses for Start, Stop, and Reset functions. The display shows minutes, seconds, and hundredths of a second.
- Powered by standard AAA batteries (included), eliminating the need for hard-to-find button cell batteries.
- Lightweight and durable plastic construction, suitable for handheld use or wearing with the included lanyard.
- Versatile for various applications including sports, refereeing, athletic training, and general timing activities.

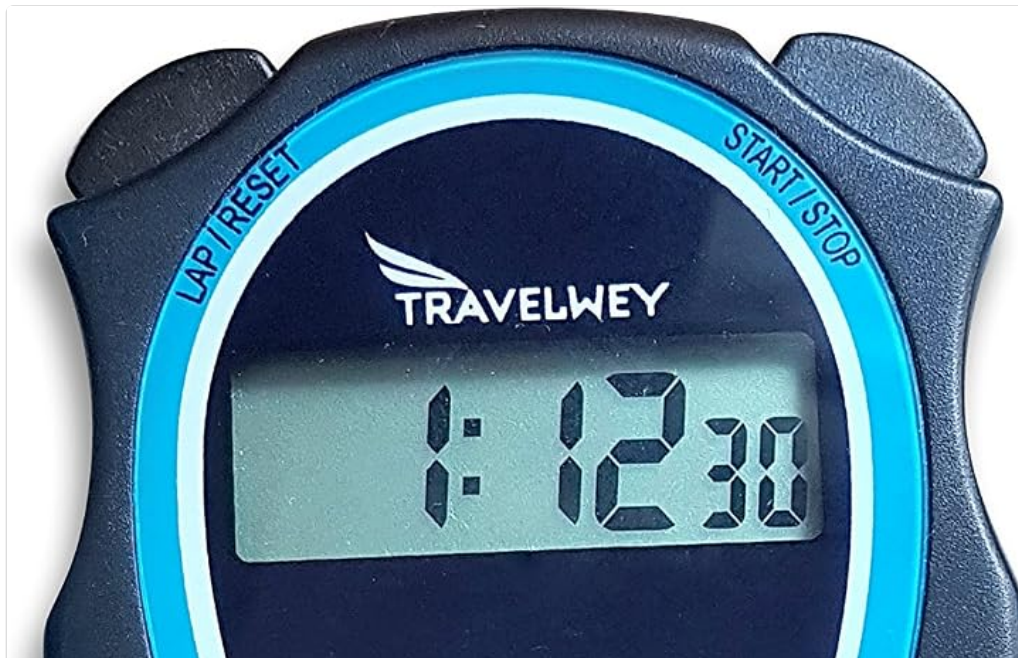



Front view of the Travelway Digital Stopwatch, showing the clear digital display and control buttons.

SETUP

Battery Installation:

The Travelway Digital Stopwatch uses two AAA batteries. These are included with your purchase.

1. Locate the battery compartment on the back of the stopwatch.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Rear view of the stopwatch with the battery compartment open, showing the slots for two AAA batteries.

Batteries Included



Standard AAA batteries, which are included with the stopwatch.

OPERATING INSTRUCTIONS

Turning On/Off:

Press the **ON/OFF** button located below the display to power the stopwatch on or off.

Basic Timing (Start, Stop, Reset):

1. To begin timing, press the **START/STOP** button (top right).

2. To pause the timer, press the **START/STOP** button again.
3. With the timer stopped, press the **LAP/RESET** button (top left) to clear the display and reset the timer to zero.

Lap/Split Timing:

The stopwatch features a lap counter for recording intermediate times without stopping the main timer.

1. While the timer is running, press the **LAP/RESET** button (top left) to display the current lap time. The main timer continues to run in the background, indicated by a flashing colon (:) on the display.
2. Press the **LAP/RESET** button again to return to the running elapsed time.
3. You can press the **LAP/RESET** button multiple times to record successive lap times without stopping the main timer.

Your browser does not support the video tag.

Video demonstrating the simple operation of the Travelwey Digital Stopwatch, including turning it on, starting, stopping, resetting, and using the lap function.

MAINTENANCE

- Keep the stopwatch clean by wiping it with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Store the stopwatch in a dry place away from extreme temperatures.
- If the stopwatch will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

Display is blank or not turning on:

- Check if the batteries are correctly inserted with the correct polarity.
- Replace the AAA batteries with new ones.
- Ensure the ON/OFF switch is in the 'ON' position.

Timer not responding:

- Try turning the stopwatch off and then on again.
- Remove and reinsert the batteries.

Battery cover falls off easily:

- Ensure the battery cover is securely closed. If it continues to detach, a small piece of adhesive tape can be used to secure it.

SPECIFICATIONS

Attribute	Detail
Color	Black
Brand	Travelwey

Material	Plastic
Item Weight	2.08 ounces
Number of settings	3
UPC	685349913077
Manufacturer	Travelway
Package Dimensions	4.06 x 2.83 x 1.54 inches
Item model number	COMINSO5JUL67737

WARRANTY AND SUPPORT

This Travelway Digital Stopwatch comes with a 1-year money-back guarantee, ensuring your satisfaction with the product.

For further assistance, troubleshooting, or warranty claims, please contact Travelway customer service through the retailer where the product was purchased or refer to the contact information provided on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question