

## MIRAC WY-DNK1-KJIT

# Mirac Automatic Azan Clock User Manual

Model: WY-DNK1-KJIT

## 1. INTRODUCTION

Thank you for choosing the Mirac Automatic Azan Clock. This device is designed to provide accurate prayer times and Azan calls for over 1500 cities worldwide. It features a clear digital display, multiple Azan voices, and Qibla direction indication. This manual will guide you through the setup, operation, and maintenance of your new Azan clock.

## 2. SAFETY INFORMATION

- Read all instructions carefully before use.
- Keep the device away from water and moisture.
- Do not expose the clock to extreme temperatures or direct sunlight for extended periods.
- Use only the specified power source (AC adapter or AA batteries).
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Keep batteries out of reach of children. Dispose of used batteries responsibly.

## 3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Mirac Automatic Azan Clock.



**Figure 3.1: Front View of the Mirac Automatic Azan Clock**

This image shows the clock's front panel with its digital display, indicating the current time (13:50), date (2011/1/29), city (FRANKFURT), temperature (20°C), and various prayer times (Imsak, Fajr, Shrooq, Oogle, İkinci, Asr, Magrib, Yatsi, Isha). Below the screen are several control buttons.



**Figure 3.2: Multi-Angle View of the Clock**

This composite image provides a comprehensive look at the clock, including its front display and control buttons, a side profile showing its slim design, and the rear panel with its speaker and power input.



**Figure 3.3: Rear View of the Clock**

The back of the clock features a circular speaker grille, a volume control slider on the left side, and a DC 5V 200mA power input jack on the right side.

### 3.1. Front Panel Controls

- **EXIT:** Exits current menu or setting.
- **COUNTRY:** Selects country for prayer time calculation.
- **CITY:** Selects city within the chosen country.
- **SET:** Enters setting mode or confirms selection.
- **TEMP:** Displays temperature.
- **DST:** Daylight Saving Time adjustment.
- **DAILY ALM:** Sets daily alarm.
- **AUTO ALM:** Sets automatic alarm.
- **AZAN:** Toggles Azan on/off or selects Azan voice.
- **ON/OFF:** Power on/off button.
- **VOICE:** Adjusts voice settings.
- **TALKING:** Activates talking function (if available).
- **Up/Down Arrows (▲ / ▼):** Navigates menus and adjusts values.

### 3.2. Top Panel Control

- **STOP/LIGHT:** Stops alarm or activates backlight.

### 3.3. Rear Panel Controls

- **VOLUME:** Slider to adjust audio volume.
- **DC 5V 200mA:** Power input jack.

## 4. INITIAL SETUP

---

### 4.1. Powering the Device

The Mirac Automatic Azan Clock can be powered by either an AC adapter or batteries.

1. **Using Batteries:** Insert 4 AAA batteries (not included) into the battery compartment located on the back of the clock. Ensure correct polarity.
2. **Using AC Adapter:** Connect a compatible DC 5V 200mA AC adapter (not included) to the power input jack on the back of the clock.

### 4.2. Setting Time and Date

1. Press the **SET** button to enter the setting mode.
2. Use the **Up/Down Arrows** to adjust the year, month, day, hour, and minute.
3. Press **SET** after each adjustment to confirm and move to the next setting.
4. Press **EXIT** to save settings and return to the main display.

### 4.3. Selecting Country and City

Accurate prayer times depend on correct location settings.

1. Press the **COUNTRY** button. Use the **Up/Down Arrows** to select your country. Press **SET** to confirm.

2. Press the **CITY** button. Use the **Up/Down Arrows** to select your city from the available list. Press **SET** to confirm.
3. The clock will automatically calculate and display the prayer times for your selected location.

#### 4.4. Daylight Saving Time (DST)

If your region observes Daylight Saving Time, you may need to adjust this setting.

- Press the **DST** button to toggle Daylight Saving Time on or off.

### 5. OPERATION

---

#### 5.1. Azan Function

The clock provides full Azan calls with 11 different voices, including Makkah, Madinah, Egyptian, Al Aqsa, Turkish, Indonesian, and Moroccan. Each prayer time may feature a different Turkish voice.

- Press the **AZAN** button to toggle the Azan sound on or off for all prayer times.
- To select a specific Azan voice, press and hold the **AZAN** button, then use the **Up/Down Arrows** to cycle through the available voices. Release the button to confirm.
- Adjust the volume using the **VOLUME** slider on the back of the clock.

#### 5.2. Daily and Automatic Alarms

- **Daily Alarm:** Press the **DAILY ALM** button to set a specific daily alarm time. Use the **Up/Down Arrows** to adjust the time and **SET** to confirm.
- **Automatic Alarm:** Press the **AUTO ALM** button to activate or deactivate the automatic alarm function. Consult the full manual for detailed settings of this feature.

#### 5.3. Qibla Direction

The clock can indicate Qibla direction in 5 different ways.

- Refer to the display for the Qibla direction indicator, which will be shown based on your set location.

#### 5.4. Display Backlight

- Press the **STOP/LIGHT** button on the top of the clock to activate the display backlight for better visibility in low light conditions.

### 6. MAINTENANCE

---

#### 6.1. Cleaning

- Wipe the clock with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as they may damage the surface.

#### 6.2. Battery Replacement

- When the display dims or the clock functions erratically, it may be time to replace the batteries.
- Open the battery compartment on the back of the clock and replace the 4 AAA batteries, ensuring correct

polarity.

- Dispose of old batteries according to local regulations.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock does not power on.	No power, dead batteries, or incorrect battery insertion.	Check AC adapter connection or replace batteries, ensuring correct polarity.
Azan does not play.	Azan function is off, volume is too low, or a defect.	Press the <b>AZAN</b> button to turn it on. Adjust the <b>VOLUME</b> slider. If the issue persists, contact support.
Incorrect prayer times.	Incorrect country/city settings or DST setting.	Verify and correct <b>COUNTRY</b> , <b>CITY</b> , and <b>DST</b> settings as per Section 4.3 and 4.4.
Display is dim or flickering.	Low battery power.	Replace the batteries.

## 8. SPECIFICATIONS

- **Brand:** MIRAC
- **Model Number:** WY-DNK1-KJIT
- **Color:** White frame
- **Dimensions (L x W x H):** 28 x 0.03 x 18 cm
- **Weight:** 290 grams
- **Material:** Plastic
- **Features:** Alarm, Azan, Qibla Direction
- **Power Source:** 4 x AAA batteries (not included) or DC 5V 200mA AC adapter (not included)
- **Display Type:** Digital
- **Style:** Modern
- **Shape:** Square
- **Usage:** Indoor

## 9. WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contacts is not available in the provided product details. Please refer to the product packaging or contact your retailer for warranty information and technical assistance.