

[manuals.plus](#) /› [Calypso](#) /› [Calypso K5698/2 Digital Unisex Watch Instruction Manual](#)

Calypso K5698

Calypso K5698/2 Digital Unisex Watch Instruction Manual

Model: K5698

INTRODUCTION

Welcome to your new Calypso K5698/2 Digital Watch. This manual provides essential information for setting up, operating, and maintaining your watch. This sporty and trendy digital multifunction watch features 10 ATM water resistance and a durable plastic strap.



Front view of the Calypso K5698/2 digital watch with a blue plastic strap and black case, displaying the time 1:22 PM, date

INITIAL SETUP

Battery

Your watch comes with one product-specific battery included. No initial battery installation is required.

Time and Date Setting

To set the time and date, locate the mode and adjustment buttons on the side of your watch. The exact button labels may vary, but typically involve 'MODE', 'SET', 'ADJUST', 'START/STOP', and 'LIGHT'.

1. Press the **MODE** button repeatedly until the time setting mode is activated (usually indicated by flashing digits).
2. Use the **ADJUST** or **SET** button to select the digit you wish to change (hours, minutes, year, month, day).
3. Use the **START/STOP** or **LIGHT** button to increase the value.
4. Press **MODE** again to confirm and exit the setting mode.

OPERATING YOUR WATCH

Chronograph (Stopwatch)

The watch features a chronograph function for measuring elapsed time.

1. Press the **MODE** button until "CHRONO" or "STW" appears on the display.
2. Press the **START/STOP** button to begin timing.
3. Press **START/STOP** again to pause/resume timing.
4. Press the **RESET** button (often the same as **ADJUST** or **LIGHT**) to reset the chronograph to zero.

Alarm Function

Set an alarm to alert you at a specific time.

1. Press the **MODE** button until "ALARM" appears.
2. Use the **ADJUST/SET** button to select the hour or minute digits.
3. Use the **START/STOP** button to adjust the time.
4. Press **MODE** to confirm.
5. To activate/deactivate the alarm, usually press a combination of buttons (e.g., **ADJUST** + **START/STOP**) while in alarm mode.

Dual Time Zone

This watch supports dual time zone indication, allowing you to view a second time zone.

1. Press the **MODE** button until the dual time zone display is shown (often labeled "T2" or "DUAL TIME").
2. Use the **ADJUST/SET** and **START/STOP** buttons to set the second time zone.
3. Press **MODE** to return to the main time display.

CARE AND MAINTENANCE

Water Resistance

Your Calypso K5698/2 watch is water-resistant up to 100 meters (10 ATM). This means it is suitable for swimming and snorkeling, but not for high-impact water sports or diving.

Warning:

- Do not operate buttons underwater.
- Avoid exposing the watch to hot water or steam, as this can compromise the water resistance seals.
- Ensure the crown (if present) is fully pushed in before any water exposure.

Cleaning

Clean your watch regularly with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.

Strap Care

The plastic strap is durable but can be cleaned with mild soap and water if needed. Rinse thoroughly and dry completely.

TROUBLESHOOTING

If you encounter issues with your watch, please refer to the following common solutions:

- **Display is blank or dim:** The battery may need replacement. Contact a qualified watch technician.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode. If the issue persists, a reset might be needed (refer to a watch technician).
- **Time is incorrect:** Re-set the time following the "Time and Date Setting" instructions.

For more complex issues, please contact Calypso customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Calypso
Model Number	K5698
Display Type	Digital LCD
Case Material	Polycarbonate with Stainless Steel Back
Strap Material	Plastic
Water Resistance	10 ATM (100 meters)
Functions	Chronograph, Alarm, Dual Time Zone
Battery	1 Product-Specific Battery (Included)
ASIN	B0195BLS5K

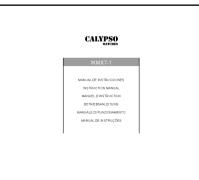
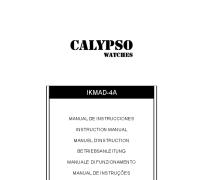
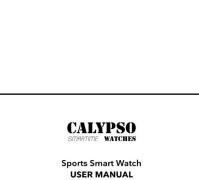
WARRANTY AND SUPPORT

Calypso watches are part of the Festina Group, ensuring quality and reliability.

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Calypso website.

[Visit Calypso Official Website](#)

Related Documents - K5698

	<p>Calypso IKM1068 Digital Watch Instruction Manual</p> <p>Comprehensive instruction manual for the Calypso IKM1068 digital watch, covering display modes, time and date settings, alarm functions, chronograph, countdown timer, dual time zone, and watch care.</p>
	<p>Calypso IKMX7-1 Chronograph Alarm Module Instruction Manual</p> <p>Comprehensive instruction manual for the Calypso IKMX7-1 chronograph alarm watch module, detailing its functions, modes, settings, and care instructions.</p>
	<p>Calypso IKMS063TR Digital Watch Instruction Manual</p> <p>Comprehensive instruction manual for the Calypso IKMS063TR Digital watch, covering button functions, mode selection, timekeeping, stopwatch, alarm, time setting, and care instructions.</p>
	<p>Calypso IKMAD-4A Watch Instruction Manual</p> <p>Comprehensive guide to the Calypso IKMAD-4A watch, covering features, setting time, alarm, stopwatch, and basic care instructions.</p>
	<p>Calypso K8501-K8502 Sports Smart Watch User Manual</p> <p>User manual for the Calypso K8501-K8502 Sports Smart Watch, covering setup, features, app connectivity, and troubleshooting.</p>
	<p>Calypso RM3500ZB Smart Water Heater Controller Installation Guide</p> <p>Installation guide for the Calypso RM3500ZB Smart Water Heater Controller by Sinopé. Includes technical specifications, installation steps for the controller and optional water detection cable, and connection instructions for the Neviweb app and Zigbee systems.</p>