

[Manuals.plus](#) /

› [Singing Machine](#) /

› Singing Machine SDL9030DB Carnaval Karaoke System Instruction Manual

Singing Machine SDL9030DB

Singing Machine SDL9030DB Carnaval Karaoke System

Instruction Manual

1. PRODUCT OVERVIEW

The Singing Machine SDL9030DB Carnaval Karaoke System is an all-digital HD system designed for portable entertainment. It features a built-in screen, powerful speakers, and multiple connectivity options for a versatile karaoke experience.



Image: Front view of the Singing Machine SDL9030DB Carnival Karaoke System, showcasing the main unit with its integrated screen and two wired microphones connected.

2. SETUP

2.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the package contents are present and undamaged. Keep packaging materials for future storage or transport.

2.2 Power Connection and Charging

Connect the power adapter to the DC IN port on the unit and plug it into a wall outlet. The unit features a rechargeable battery for portable use. Allow the unit to fully charge before its first use for optimal battery life.

2.3 Microphone Connection

Plug the wired microphones into the MIC 1 and MIC 2 input jacks on the unit. The system supports two wired microphones for duets.





Image: Side view of the karaoke system, highlighting the integrated microphone holder and the connected wired microphone.

2.4 Portability Features

The Carnival Karaoke System is designed for easy mobility with a built-in collapsible handle and wheels. Extend the handle and tilt the unit to roll it to your desired location.





Image: Rear view of the karaoke system, showing the extended collapsible handle and wheels, emphasizing its portability.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off

Press the **ON/OFF** button located on the control panel to power the unit on or off.

3.2 Using the Digital HD Screen

The integrated digital HD screen displays karaoke videos and system menus. Navigate through options using the control buttons or the interactive wired mic-remote control.



Image: The karaoke system's front, showing the screen actively displaying song lyrics, with a tablet mirroring content nearby.

3.3 Audio Input Options

- **Bluetooth:** Pair your smartphone or tablet wirelessly to stream music.
- **USB/SD Card:** Insert an 8 GB flash drive (included) or an SD card into the designated slots to play downloaded karaoke videos or music.
- **Line-in:** Connect external audio devices using a 3.5mm audio cable to the LINE-IN port.
- **HDMI Output:** Connect the unit to a larger display (e.g., TV) using an HDMI cable for an enhanced viewing experience.

3.4 Adjusting Volume and Effects

- **Master Volume:** Use the main volume knob to adjust the overall sound output.
- **Mic Volume:** Adjust individual microphone volumes for optimal balance.
- **Echo Control:** Use the ECHO knob to add a reverberation effect to your vocals.

3.5 Lighting Effects

The unit features multi-colored LED dome lights and music-synchronized 3D lighting effects. Use the **LIGHT MODE** button to cycle through different lighting patterns or turn them off.



Image: Top-down view of the karaoke system, with the disco ball-style LED dome light actively projecting colorful patterns.

3.6 Recording Performances

Press the **REC** button to record your vocal performances onto the inserted flash drive or SD card.

3.7 Official Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the features and usage of the Singing Machine SDL9030DB Carnival Karaoke System, including its portability, digital HD screen, microphone controls, and lighting effects.

4. MAINTENANCE

4.1 Cleaning

Wipe the unit with a soft, dry cloth. Do not use liquid cleaners or abrasive materials. Ensure all ports are free of dust and debris.

4.2 Storage

Store the unit in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery is partially charged if storing for extended periods.

5. TROUBLESHOOTING

5.1 No Power

- Check if the power adapter is securely connected to the unit and a working power outlet.
- Ensure the unit's rechargeable battery is charged.

5.2 No Sound from Microphones

- Verify microphones are securely plugged into the correct jacks.
- Adjust the MIC VOLUME knobs.
- Ensure the main volume is not set to minimum.

5.3 Bluetooth Connectivity Issues

- Ensure Bluetooth is enabled on your mobile device and the karaoke system.
- Move your device closer to the karaoke system.
- Forget the device on your mobile device and re-pair.

6. SPECIFICATIONS

Feature	Specification
Item Weight	19.18 pounds
Product Dimensions	14.17 x 13.38 x 22 inches
Item Model Number	SDL9030DB
Compatible Devices	Smartphone, Tablet, Laptop, Personal Computer, Television
Connector Type	HDMI
Speaker Count	1
Battery Type	Lead Acid

Media Format	Digital
Power Source	Battery Powered
Standing Screen Display Size	7 inches
Special Feature	Rechargeable, Portable

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Singing Machine website. Keep your purchase receipt as proof of purchase for warranty claims.