

[Manuals.plus](#) /

› [SOUNDLOGIC](#) /

› SoundLogic XT Universal Extendable Selfie Stick User Manual

SOUNDLOGIC Universal Extendable Selfie Stick

SoundLogic XT Universal Extendable Selfie Stick User Manual

Model: Universal Extendable Selfie Stick

1. INTRODUCTION

Thank you for purchasing the SoundLogic XT Universal Extendable Selfie Stick. This device is designed to help you capture wider and more dynamic self-portraits and group photos with ease. Featuring a built-in AUX remote, it offers a simple plug-and-play solution without the need for batteries or Bluetooth pairing. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your selfie stick.

2. PACKAGE CONTENTS

- SoundLogic XT Universal Extendable Selfie Stick
- User Manual





Image: Retail packaging of the SoundLogic XT Selfie Stick, showing the product and key features like "Extends up to 41 inches" and "No batteries needed! Plug-in and shoot!"

3. SETUP

1. **Unpack the Selfie Stick:** Carefully remove the selfie stick from its packaging.
2. **Attach Your Smartphone:**
 - Gently pull apart the spring-loaded phone clamp at the top of the selfie stick.

- Insert your smartphone into the clamp, ensuring it is securely held. The clamp is designed to accommodate most smartphones.

3. Connect the AUX Cable:

- Locate the 3.5mm AUX cable extending from the selfie stick's phone clamp.
- Plug this cable into your smartphone's 3.5mm headphone jack. If your phone does not have a 3.5mm jack, an adapter (not included) may be required.





Image: The SoundLogic XT Selfie Stick with a smartphone securely mounted in the clamp and the AUX cable connected to the phone's headphone jack. A close-up inset shows a finger pressing the shutter button on the handle.

4. OPERATING INSTRUCTIONS

1. **Extend the Selfie Stick:** Hold the handle firmly and gently pull the telescopic rod upwards to extend it to your desired length. The stick can extend up to 41 inches.
2. **Position Your Phone:** Adjust the angle of your smartphone by tilting the phone clamp. Ensure your phone is securely fastened before extending the stick.
3. **Open Camera Application:** Launch your smartphone's camera application.
4. **Take a Photo:** Press the shutter button located on the handle of the selfie stick. Your phone should capture a photo.

Important Notes:

- This selfie stick operates without batteries, drawing power directly from your smartphone via the AUX cable.
- It is compatible with iPhone, Android, and Windows phones. Ensure your phone's volume button settings are configured to act as a shutter release for optimal functionality.

5. MAINTENANCE

- **Cleaning:** Wipe the selfie stick with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, retract the selfie stick fully and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid excessive force when extending or retracting the stick, and ensure the phone clamp is not overstretched.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Selfie stick button does not take photos.	• AUX cable not fully connected. • Phone settings not configured for volume button shutter. • Phone case obstructing AUX port.	• Ensure the 3.5mm AUX cable is fully inserted into your phone's headphone jack. • Check your phone's camera settings to ensure the volume buttons are set to trigger the shutter. • Remove your phone case if it prevents the AUX cable from fully connecting.
Phone is not secure in the clamp.	• Phone is too large or too small for the clamp. • Phone not positioned correctly.	• Ensure your phone fits within the clamp's adjustable range. • Center your phone within the clamp and ensure it is held firmly by both sides.

7. SPECIFICATIONS

- **Brand:** SOUNDLOGIC XT
- **Model:** Universal Extendable Selfie Stick
- **Compatibility:** Cellphones (iPhone, Android, Windows phones)
- **Extension Length:** Up to 41 inches
- **Connectivity:** 3.5mm AUX cable
- **Power Source:** No batteries required (AUX powered)
- **Remote Type:** Built-in AUX remote shutter button

8. SAFETY INFORMATION

- Do not use the selfie stick in extreme weather conditions (e.g., heavy rain, strong winds).
- Keep out of reach of children.
- Ensure your phone is securely mounted before extending the stick to prevent accidental drops.
- Avoid using the selfie stick near high-voltage power lines or during thunderstorms.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact SoundLogic XT customer service directly. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0195NP6XS>

More documents and user manuals: <https://manuals.plus/>