

Philips HD8771/93

Philips Saeco Intelia Cappuccino Deluxe Automatic Espresso Machine

Model: HD8771/93

INTRODUCTION

The Saeco Intelia Cappuccino Deluxe is an automatic espresso machine designed to deliver quality coffee beverages with convenience. This stainless steel machine offers a range of options from espresso to cappuccino, featuring a timeless design.

SETUP

1. Unpacking and Placement

Carefully remove all packaging materials. Place the machine on a stable, level surface away from heat sources and direct sunlight. Ensure adequate space around the machine for ventilation and access to components.

2. Water Tank Installation

Remove the water tank, rinse it, and fill it with fresh tap water up to the MAX indication. Insert the water tank back into the machine securely.

3. Bean Hopper and Grinder

Open the bean hopper lid and fill it with fresh coffee beans. The integrated ceramic grinders are designed for optimal grinding.



Image: Overview of the Saeco Intelia Cappuccino Deluxe Espresso Machine with its internal components and bean hopper visible.

OPERATING INSTRUCTIONS

1. Power On and Pre-heating

Press the power button to turn on the machine. The Quick Heat Boiler will rapidly heat the machine to the optimal temperature for brewing.

2. Selecting Your Beverage

Use the control panel to select your desired beverage. Options include Espresso, Cappuccino, Latte Macchiato, Coffee, Americano, and Hot Water. You can adjust the strength (5 settings), length, and temperature of your coffee.



Image: Close-up of the control panel displaying various beverage selection buttons and settings.

3. Preparing Milk-Based Drinks

For Cappuccino or Latte Macchiato, attach the integrated milk carafe. The carafe froths milk twice before dispensing a creamy layer directly into your cup at the correct temperature. Ensure the carafe is clean before and after use.



Image: The integrated milk carafe, designed for automatic milk frothing and dispensing.

4. Dispensing Hot Water

Select the 'Hot Water' option for dispensing hot water for tea or other beverages.

MAINTENANCE

1. Milk Carafe Cleaning

The milk carafe features a 'Carafe Quick Clean' function. After each use, activate this function to rinse the milk system. For thorough cleaning, disassemble the carafe and wash all parts with warm water and mild detergent.

2. Auto-Rinse and Descaling

The machine performs an automatic rinse cycle when turned on and off. Follow the guided descaling procedure

prompted by the machine to remove mineral buildup. Regular descaling is crucial for maintaining machine performance and longevity.

3. Removable Brew Group

The brew group is removable for easy cleaning. Rinse it under tap water weekly to remove coffee residue. Refer to the full product manual for detailed instructions on removing and reinserting the brew group.

4. Drip Tray and Grounds Container

Empty and clean the drip tray and coffee grounds container regularly to prevent overflow and maintain hygiene.

SPECIFICATIONS

Feature	Detail
Brand	Philips
Model Number	HD8771/93
Color	Silver
Coffee Maker Type	Espresso Machine
Operation Mode	Fully Automatic
Special Features	Quick Heat Boiler, Integrated Milk Carafe, Auto-Rinse & Guided Descaling, Removable Brew Group, Gusto perfetto
Specific Uses For Product	Espresso, Cappuccino, Baby Cappuccino, Espresso Lungo, Hot water, Milk froth
Recommended Uses For Product	Coffee preparation
Included Components	Carafe
Voltage	230 Volts
Number of Items	1
Human Interface Input	Buttons
Product Dimensions	17.44 x 12.46 x 21.5 inches
Item Weight	19 pounds
Capacity	60.86 Fluid Ounces

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Philips Saeco website or the full product manual included with your machine. Online registration may offer extended warranty benefits.

