

[Manuals.plus](#) /

› [MEDION](#) /

› MEDION MD 14482 Microwave with Grill User Manual

MEDION MD 14482

MEDION MD 14482 Microwave with Grill User Manual

Your comprehensive guide to operating and maintaining your MEDION microwave.

INTRODUCTION

Thank you for choosing the MEDION MD 14482 Microwave with Grill. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

This appliance combines the functionality of a microwave oven with a powerful grill, offering versatile cooking options for your kitchen. With its 20-liter capacity and various automatic programs, it is designed for convenience and performance.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure proper ventilation around the appliance.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Use only microwave-safe cookware.

PRODUCT OVERVIEW

The MEDION MD 14482 is a versatile microwave oven featuring both microwave and grill functions. It comes with a spacious 20-liter cooking chamber, an easy-to-clean stainless steel front, and a lacquered interior.

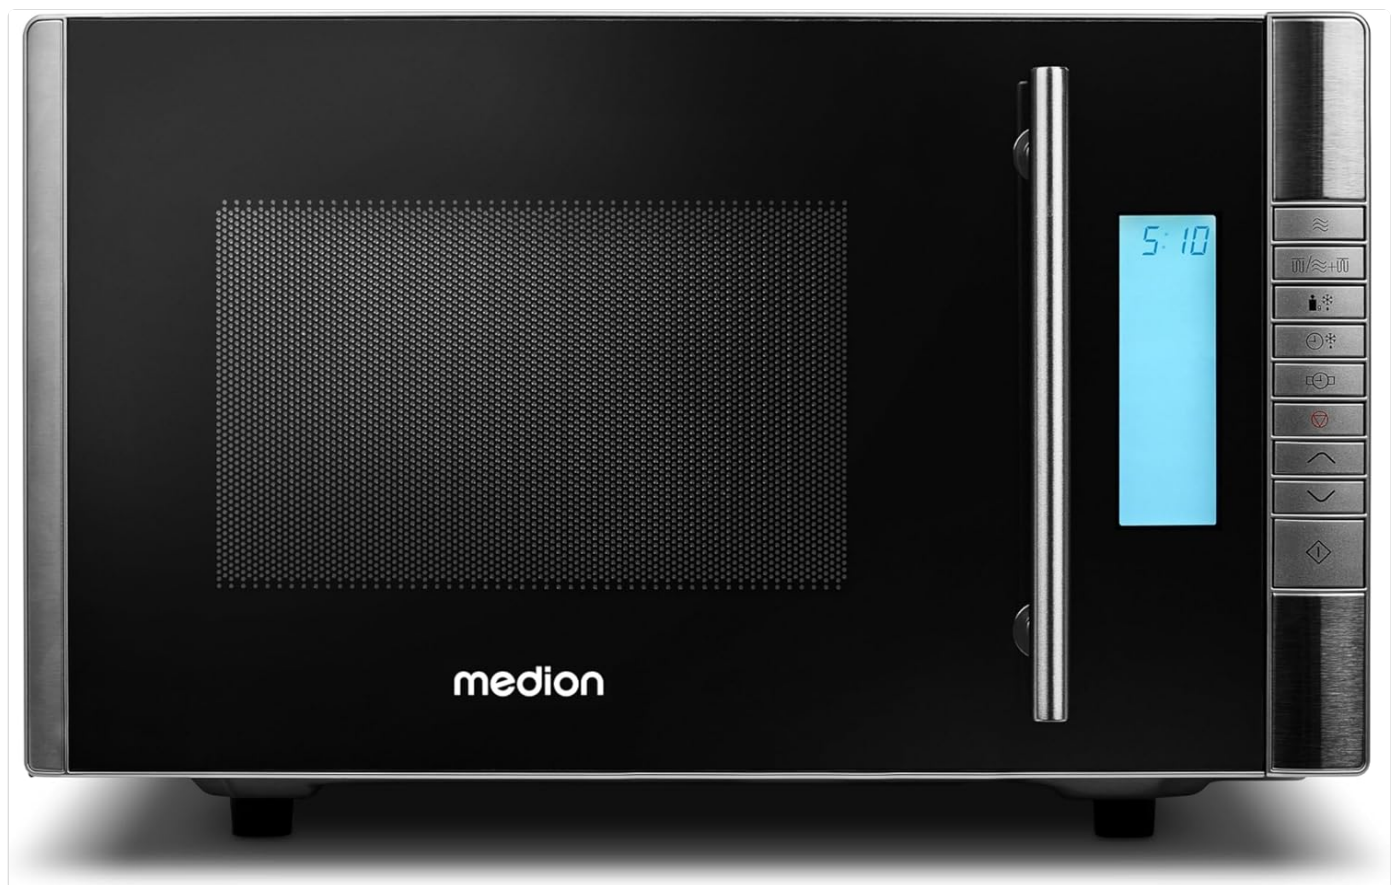 


Figure 1: Front view of the MEDION MD 14482 Microwave with Grill. It features a sleek black and silver design with a digital display and control panel on the right side.

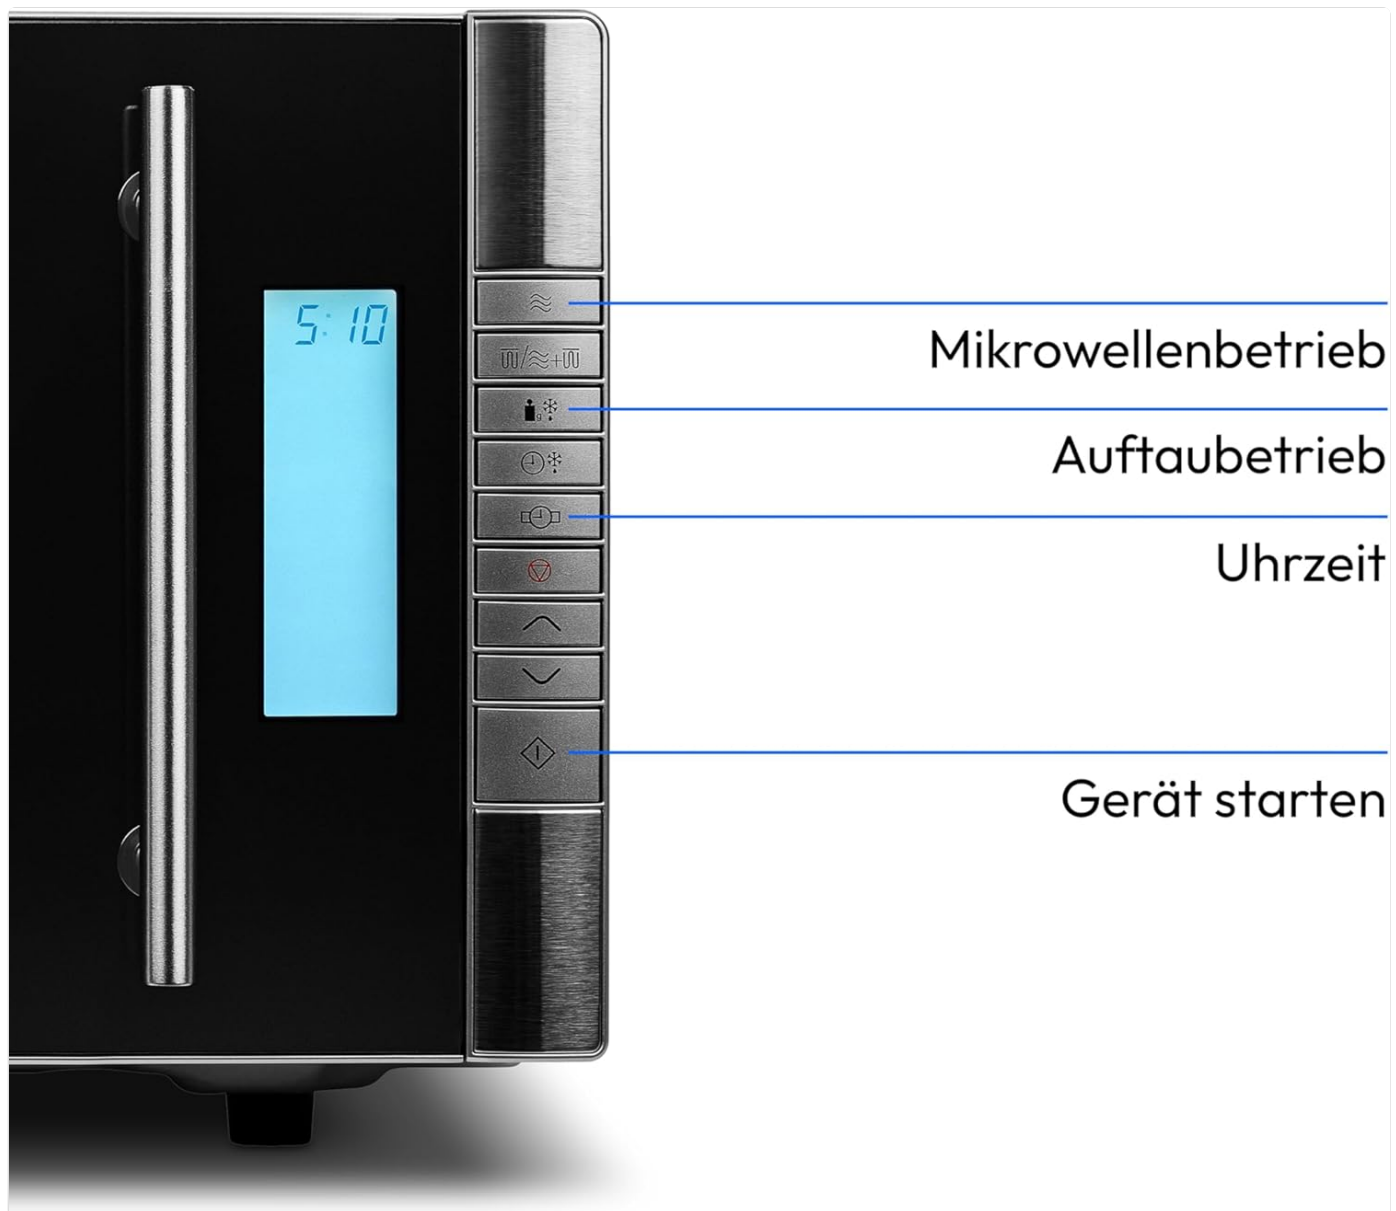 


Figure 2: Close-up of the control panel, showing buttons for microwave operation, defrost, clock setting, and start/stop functions. The digital display shows the time.

Package Contents:

- MEDION MD 14482 Microwave
- Glass Turntable
- Grill Rack
- Instruction Manual (this document)

SETUP AND INSTALLATION

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged. Contact customer service for assistance.
2. **Placement:** Place the microwave on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure there is adequate ventilation space around the oven: at least 20 cm (7.9 inches) of free space above, 10 cm (3.9 inches) at the rear, and 5 cm (2 inches) on each side.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance rating label.

4. **Turntable Assembly:** Place the turntable ring inside the oven cavity. Then, place the glass turntable plate on top of the ring, ensuring it sits securely in the center hub.

OPERATING INSTRUCTIONS

Setting the Clock:

When the microwave is first plugged in, the display will show "0:00".

1. Press the "Clock" button.
2. Use the number buttons to enter the current time (e.g., 12:30).
3. Press the "Clock" button again to confirm.

Microwave Cooking:

This microwave offers 8 power levels for microwave cooking.

1. Place food in a microwave-safe container on the glass turntable.
2. Close the door.
3. Press the "Microwave" button repeatedly to select the desired power level (e.g., P100 for 100% power, P80 for 80%, etc.).
4. Use the number buttons to enter the cooking time (up to 95 minutes).
5. Press the "Start" button to begin cooking.

Grill Function:

The grill function is ideal for browning and crisping food.

1. Place food on the grill rack (if provided) or a heat-resistant dish.
2. Close the door.
3. Press the "Grill" button.
4. Use the number buttons to enter the grilling time.
5. Press the "Start" button to begin grilling.

2 in 1 - Funktion

Mikrowelle & Grill in einem



Figure 3: Illustration of the 2-in-1 function, showing pasta (microwave) and pizza (grill) to highlight the versatility of the appliance.

Automatic Programs:

The microwave features 8 automatic programs for common food items, simplifying cooking.

Automatikprogramme

Für jede Speise das richtige Programm



Figure 4: Examples of dishes that can be prepared using the automatic programs, including casseroles, salmon, stuffed zucchini, and steamed broccoli.

Refer to the program chart in your detailed manual for specific program numbers and corresponding food types/weights. Generally, you select the program and then the weight of the food, and the oven automatically sets the cooking time and power level.

Defrost Function:

The defrost function allows for quick and gentle thawing of frozen foods.

Auftauen leicht gemacht

Schnelle und schonende Erwärmung



Figure 5: A pile of mixed frozen vegetables, illustrating the type of food suitable for the defrost function.

1. Place frozen food on the glass turntable.
2. Press the "Defrost" button.
3. Use the number buttons to enter the weight of the food.
4. Press the "Start" button. The oven will automatically calculate the defrosting time.

Child Lock:

To prevent unsupervised operation, activate the child lock.

- To activate: Press and hold the "Stop/Cancel" button for 3 seconds. A lock indicator will appear on the display.
- To deactivate: Press and hold the "Stop/Cancel" button for 3 seconds again. The lock indicator will disappear.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** After each use, wipe the interior with a damp cloth and mild detergent. For stubborn stains, place

a bowl of water with lemon slices inside and microwave for 2-3 minutes to loosen residue, then wipe clean. The lacquered interior is designed for easy cleaning.

- **Exterior Cleaning:** Clean the exterior surfaces, including the stainless steel front, with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they can scratch the surface.
- **Turntable and Ring:** The glass turntable and turntable ring can be removed and washed in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seals:** Regularly clean the door seals and adjacent parts with a damp cloth to remove any food spills. This ensures a proper seal during operation.



Figure 6: A hand cleaning the exterior of a microwave with a sponge, demonstrating the ease of maintenance for the stainless steel front and lacquered interior.

Caution:

- Always unplug the microwave before cleaning.
- Do not immerse the appliance, cord, or plug in water or any other liquid.

TROUBLESHOOTING

Common Issues and Solutions		
Problem	Possible Cause	Solution
Oven will not start.	Power cord not plugged in; Door not closed properly; Child lock activated.	Ensure plug is securely in outlet; Close door firmly; Deactivate child lock.
Food is not heating.	Incorrect power level or cooking time set; Door not closed properly.	Adjust power level and time; Ensure door is fully closed.
Turntable is not rotating.	Turntable not correctly placed; Debris under turntable ring.	Re-position turntable and ring; Clean under the turntable ring.
Unusual noises during operation.	Food container touching oven walls; Turntable not seated correctly.	Adjust food container position; Re-seat turntable.

If the problem persists after trying these solutions, please contact MEDION customer support.

SPECIFICATIONS

- **Model:** MD 14482
- **Brand:** MEDION
- **Capacity:** 20 Liters
- **Microwave Power:** 800 Watts
- **Grill Power:** 1000 Watts
- **Power Levels:** 8 Microwave power levels
- **Automatic Programs:** 8
- **Defrost Function:** Yes (Automatic Defrost)
- **Timer:** Up to 95 minutes with cooking signal
- **Child Lock:** Yes
- **Interior Material:** Lacquered Steel
- **Exterior Material:** Stainless Steel front
- **Dimensions (W x D x H):** Approximately 46 x 34 x 29 cm (18.1 x 13.4 x 11.4 inches)
- **Weight:** 13.1 kg (28.9 lbs)
- **Voltage:** 230 Volts

Großes Fassungsvermögen

20 l Garinnenraum

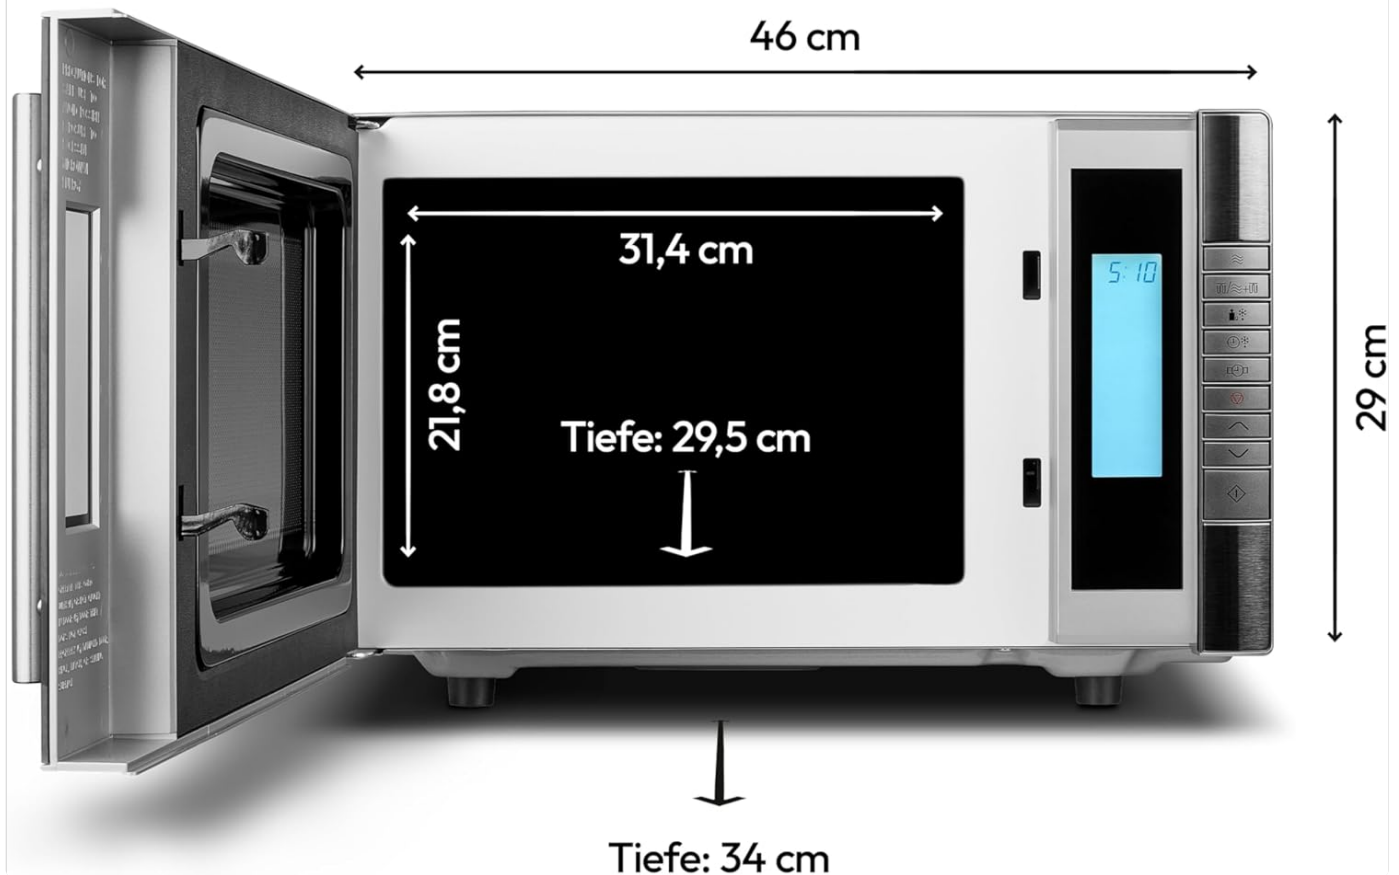 


Figure 7: Diagram showing the external dimensions of the microwave: 46 cm width, 34 cm depth, and 29 cm height, with internal depth of 29.5 cm and width of 31.4 cm.

WARRANTY AND SUPPORT

Your MEDION MD 14482 Microwave with Grill comes with a manufacturer's warranty of **24 months** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or service inquiries, please contact MEDION customer service. Keep your proof of purchase for warranty validation.

MEDION is committed to providing excellent customer service and innovative products. Their competent customer support team is available to assist you.

For more information, visit the official MEDION website or refer to the contact details provided with your product packaging.

© 2025 MEDION. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01989PY5O>

More documents and user manuals: **<https://manuals.plus/>**