

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT ULG901 Universal Remote Control Instruction Manual

USARMT ULG901

USARMT ULG901 Universal Remote Control Instruction Manual

INTRODUCTION

Welcome to the USARMT ULG901 Universal Remote Control instruction manual. This guide provides detailed information on how to set up and operate your new remote control, designed to replace lost or broken remotes for most LG Plasma, LCD, LED, and 3D TVs, as well as DVD and Blu-ray players.

PRODUCT OVERVIEW



Image: The USARMT ULG901 Universal Remote Control, a black remote with clearly labeled buttons for TV and Blu-ray modes, numeric keypad, volume, channel, navigation, and dedicated media/app buttons.

The USARMT ULG901 is a versatile replacement remote control that combines the functionality for both LG televisions and DVD/Blu-ray players. It features a user-friendly layout with essential controls for power, input, channel, volume, and playback functions. Dedicated buttons for 'TV' and 'BLU-RAY' mode allow seamless switching between device control. The remote also includes quick access buttons for popular features like Netflix and Simplink.

SETUP

Battery Installation

The USARMT ULG901 remote control requires two AAA batteries (not included). To install:

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

Initial Setup (No Programming Required for Most Devices)

For most LG TV models and DVD/Blu-ray players, the USARMT ULG901 remote control requires no programming. Simply install the batteries and begin using it.

OPERATING INSTRUCTIONS

TV Mode Operation

The remote is pre-configured for most LG TV models. If it does not work directly:

1. Press and hold both the **"Power"** and **"1"** buttons simultaneously for 2 seconds.
2. Release the buttons and test the remote with your TV.

To revert the TV settings to default:

1. Press and hold both the **"Power"** and **"0"** buttons simultaneously for 2 seconds.
2. Release the buttons. The remote will return to its default TV status.

DVD/Blu-ray Mode Operation

For DVD/Blu-ray players, no specific setup is required beyond battery installation. To activate DVD/Blu-ray control:

- Press the **"BLU-RAY"** button once (for approximately 1 second) to switch the remote to DVD/Blu-ray mode.
- The remote will now control your LG DVD or Blu-ray player.

Common Button Functions

- **Power (Red Button):** Turns the connected device on or off.
- **TV/BLU-RAY Mode Buttons:** Switches between controlling a TV or a Blu-ray/DVD player.
- **Input:** Cycles through available input sources on your TV.
- **Ratio:** Adjusts the screen aspect ratio.
- **Numeric Keypad (0-9):** Direct channel selection or input for menus.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels.
- **MUTE:** Mutes or unmutes the audio.
- **SETTINGS:** Accesses the device's settings menu.
- **INFO:** Displays information about the current program or input.
- **Q.MENU:** Quick menu access.
- **Navigation (Up/Down/Left/Right/OK):** Navigates through menus and confirms selections.
- **NETFLIX:** Direct access to the Netflix application.

- **SIMPLINK:** Activates LG's HDMI-CEC feature for controlling connected devices.
- **EXIT:** Exits current menu or application.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Skip):**Controls playback of media on DVD/Blu-ray players.
- **HOME:** Returns to the home screen or main menu.
- **DISC MENU:** Accesses the disc menu for DVDs/Blu-rays.
- **OPEN/CLOSE:** Opens or closes the disc tray.
- **REPEAT:** Repeats playback.
- **TITLE/POPUP:** Accesses title or popup menus.

TROUBLESHOOTING

Remote is not working with my TV:

Ensure batteries are correctly installed and have sufficient charge. If the remote does not work directly, try the specific setup steps: press and hold **"Power"** and **"1"** for 2 seconds, then test. Some advanced functions of your specific equipment may not be controllable by this universal remote.

Remote is not controlling my DVD/Blu-ray player:

Make sure you have pressed the **"BLU-RAY"** button to switch the remote to DVD/Blu-ray mode. Ensure batteries are fresh.

Remote functions are inconsistent or delayed:

Replace the batteries with new ones. Ensure there are no obstructions between the remote and the device's infrared receiver.

SPECIFICATIONS

Feature	Detail
Brand	USARMT
Model Number	ULG901
Compatible Devices	LG Television, LG DVD/Blu-ray Player
Connectivity Technology	Infrared
Max Number of Supported Devices	1 (TV or DVD/Blu-ray at a time)
Item Weight	2.4 ounces
Package Dimensions	9 x 2.5 x 1 inches
Manufacturer	USARMT Factory

WARRANTY & SUPPORT

For any issues not covered in this manual or for further assistance, please contact your retailer or the manufacturer directly. While specific warranty details are not provided here, it is recommended to retain your purchase receipt for any

potential warranty claims.

For general inquiries or support, please refer to the contact information provided by your point of purchase or visit the USARMT brand store on Amazon: [USARMT Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01996WS4Q>

More documents and user manuals: <https://manuals.plus/>