

[manuals.plus](#) /› [Daewoo](#) /› [Daewoo KOR-163HG Slim Design Microwave Oven User Manual](#)

## Daewoo KOR-163HG

# Daewoo KOR-163HG Slim Design Microwave Oven User Manual

Model: KOR-163HG

## 1. INTRODUCTION

Thank you for choosing the Daewoo KOR-163HG Slim Design Microwave Oven. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before use and keep them for future reference.

Key features of your microwave oven include a modern frameless design, elegant black finishes with subtle gold accents, a durable tempered glass door, and a new easy-to-use door opening button.

## 2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic safety precautions, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open, as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the door (bent), hinges and latches (broken or loosened), or door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Ensure proper ventilation around the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or

mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

## 3. SETUP AND INSTALLATION

### 3.1 Unpacking

- Carefully remove the microwave oven from its packaging.
- Remove all packing materials, including any protective film or tape.
- Check the oven for any damage such as dents or a misaligned door. Do not operate the oven if it is damaged.

### 3.2 Placement

- Place the oven on a flat, stable surface that can support its weight.
- Ensure there is adequate space for ventilation: at least 10 cm (4 inches) of clearance on the top, back, and sides. Do not block any ventilation openings.
- Keep the oven away from heat sources, strong magnetic fields, and areas with high humidity.

### 3.3 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage (240 Volts) and wattage (1400 Watts) requirements match your household electrical supply. Do not use extension cords or adapters.



This image displays the Daewoo KOR-163HG microwave oven, highlighting its external dimensions. The width is approximately 58.9 cm, the depth is 46 cm, and the height is 33.91 cm. These measurements are crucial for proper installation and placement.

## 4. OPERATING INSTRUCTIONS

---

Your Daewoo KOR-163HG microwave oven features an intuitive control panel with a built-in display and various function buttons.

### 4.1 Setting the Clock

- Press the 'Clock' button (if available, or refer to specific model instructions for clock setting).
- Use the number pad to enter the current time.
- Press the 'Clock' button again to confirm.

### 4.2 Microwave Cooking

- Place food in a microwave-safe container on the turntable.
- Close the oven door securely using the easy-open button.
- Select the desired power level (e.g., 'Power Level' button, then number pad).
- Enter the cooking time using the number pad.
- Press the 'Start' button to begin cooking. The interior light will illuminate during operation.

### 4.3 Defrost Function

- Press the 'Defrost' button.
- Enter the weight of the food or select the defrost time as per the display prompts.
- Press 'Start'. The oven will automatically adjust power levels for optimal defrosting.

### 4.4 Child Safety Lock

To prevent unintended operation, especially by children, activate the child safety lock:

- To activate: Press and hold the 'Stop/Cancel' button for approximately 3 seconds until a lock indicator appears on the display.
- To deactivate: Press and hold the 'Stop/Cancel' button again for approximately 3 seconds until the lock indicator disappears.

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

### 5.1 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Avoid using abrasive cleaners, harsh detergents, or chemical sprays that could damage the finish.

### 5.2 Interior Cleaning

- Clean the interior cavity after each use to prevent food splatters from drying and hardening.
- Use a mild detergent and a soft cloth. For stubborn stains, place a bowl of water with lemon slices inside and heat for a few minutes to loosen residue, then wipe clean.
- Ensure the oven is unplugged before cleaning.

### 5.3 Turntable Care

- The glass turntable and roller ring can be removed for cleaning.
- Wash them in warm, soapy water or in the dishwasher.
- Ensure they are completely dry before placing them back in the oven.

## 6. TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start	No power supply	Check if the power cord is securely plugged in. Check the circuit breaker.
Food not heating	Door not closed properly	Ensure the door is firmly closed.
Food not heating	Incorrect power level or time set	Adjust power level and cooking time as needed.
Turntable does not rotate	Turntable or roller ring is obstructed or not properly placed	Remove and re-seat the turntable and roller ring. Ensure no food debris is blocking movement.
Display shows error code	Internal malfunction	Unplug the oven for 1 minute, then plug it back in. If the error persists, contact customer support.

## 7. SPECIFICATIONS

Detailed technical specifications for the Daewoo KOR-163HG Microwave Oven:

Feature	Detail
Brand	Daewoo
Model Number	KOR-163HG
Color	Black
Capacity	45 Liters (1.6 cu ft)
Power Output	1400 Watts
Voltage	240 Volts
Material	Chrome (interior/accents)
Product Dimensions (L x W x H)	58.9 cm x 46 cm x 33.91 cm

Feature	Detail
Product Weight	17.5 Kilograms
Special Features	Child Safety Lock, Defrost Function, Interior Light, Built-in Display, Integrated Clock
Installation Type	Countertop (Incorporated design)
Control Type	Button

## 8. WARRANTY AND CUSTOMER SUPPORT

This product comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, service, or to inquire about warranty claims, please contact Daewoo customer support through their official website or the contact information provided in your product packaging.

© 2023 Daewoo. All rights reserved.