

Daewoo KOR-1N3HSA

Daewoo KOR-1N3HSA Microwave Oven User Manual

Model: KOR-1N3HSA

[Introduction](#) [Safety](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the Daewoo KOR-1N3HSA Microwave Oven. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before operation and retain it for future reference.



Image 1.1: Front view of the Daewoo KOR-1N3HSA Microwave Oven. This image displays the appliance's exterior, including the door, control panel, and ventilation slots.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave

energy.

- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Close supervision is necessary when the appliance is used by or near children.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the microwave oven from its packaging. Remove all packing materials, including any protective film or tape. Inspect the oven for any damage. If the oven appears damaged, do not operate it and contact customer support.

3.2 Placement

- Place the oven on a flat, stable surface capable of supporting its weight.
- Ensure adequate ventilation. Maintain a minimum clearance of 10 cm (4 inches) at the rear, 20 cm (8 inches) at the top, and 5 cm (2 inches) on the sides.
- Do not block air vents.
- Keep the oven away from heat sources, steam, or splashing water.
- Do not place the oven near a radio or TV, as microwave operation may cause interference.

3.3 Electrical Connection

Plug the power cord into a properly grounded electrical outlet. Ensure the voltage matches the appliance's requirements (240 Volts, 1500 Watts). Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The Daewoo KOR-1N3HSA features a touch control panel for easy operation. Familiarize yourself with the buttons for time setting, power level, defrost, and start/stop functions.

4.2 Basic Microwave Cooking

1. Place food in a microwave-safe container and place it on the turntable inside the oven.
2. Close the oven door securely.
3. Press the "Time Cook" button (or similar) and use the number pad to enter the desired cooking time.
4. If desired, press the "Power Level" button (or similar) and select a power level. The default is usually 100% power.
5. Press the "Start" button to begin cooking.

6. The oven will beep when cooking is complete. Open the door and carefully remove the food.

4.3 Defrosting Food

Your microwave oven offers a defrost function for various food types.

- Place the frozen food in a microwave-safe container.
- Press the "Defrost" button (or similar).
- Enter the weight of the food or select the food type if prompted.
- Press "Start". The oven may pause during defrosting to allow you to turn or separate the food.

4.4 Setting the Clock

To set the clock, press the "Clock" button (or similar), enter the current time using the number pad, and press "Clock" again to confirm.

5. MAINTENANCE AND CLEANING

5.1 Cleaning the Oven Interior

- Always unplug the oven before cleaning.
- Wipe the interior surfaces, including the door seals, with a damp cloth and mild detergent.
- For stubborn stains, place a bowl of water with lemon slices inside and microwave for 2-3 minutes to loosen residue.
- Clean the glass turntable and roller ring regularly with warm, soapy water.

5.2 Cleaning the Oven Exterior

Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door securely; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time/power level; Door not closed properly.	Adjust cooking time/power level; Ensure door is securely latched.
Sparking inside oven	Metal or foil in oven; Food residue on interior walls.	Remove any metal objects; Clean oven interior thoroughly.
Turntable not rotating	Turntable not properly seated; Roller ring dirty or obstructed.	Ensure turntable and roller ring are correctly positioned and clean.

If the problem persists after attempting these solutions, please contact Daewoo customer support.

7. PRODUCT SPECIFICATIONS

Model: KOR-1N3HSA

Brand: Daewoo

Capacity: 1.1 Cubic Feet (31.1 Liters)

Power Output: 1500 Watts

Voltage: 240 Volts

Color: White

Material: Polycarbonate

Dimensions (W x D x H): 51.5 x 37.6 x 30.4 cm (20.28 x 14.8 x 11.97 inches)

Weight: 12 kg (26.46 lbs)

Control Type: Touch

Special Features: Energy Saving, Floral Details

Recommended Uses: Reheating food, defrosting food, preparing microwave meals

Installation Type: Built-in (*Note: Please verify compatibility with your kitchen setup.*)

8. WARRANTY AND CUSTOMER SUPPORT

For warranty information, service, or technical support, please refer to the warranty card included with your purchase or visit the official Daewoo website. Keep your proof of purchase for warranty claims.

Manufacturer: Daewoo