

[manuals.plus](#) /› [Toshiba](#) /› [Toshiba CT-90325 Remote Control User Manual for 19C100U and Compatible Models](#)

Toshiba CT-90325

Toshiba CT-90325 Remote Control User Manual

Model: CT-90325

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Toshiba CT-90325 Remote Control. This remote is designed to work with various Toshiba television models, offering direct functionality without the need for programming.

Please read this manual carefully to ensure proper use and to maximize the lifespan of your remote control.

SETUP

Battery Installation

The Toshiba CT-90325 remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

The remote control is now ready for use. No additional programming or setup is required.



This image displays the front of the Toshiba CT-90325 remote control. It is a black rectangular remote with various gray and black buttons. The top features the red Power button and the Input button. Below are number keys (0-9, 100, FAV), volume and channel controls, and media playback buttons. The Toshiba logo and model number CT-90325 are visible at the bottom.

OPERATING INSTRUCTIONS

This section details the functions of each button on your Toshiba CT-90325 remote control.

Button	Function
--------	----------

Button	Function
POWER (I/O)	Turns the television on or off.
INPUT	Selects the video input source (e.g., HDMI, AV, Component).
SLEEP	Sets the sleep timer for the television.
FREEZE	Pauses the current picture on the screen.
PIC MODE	Cycles through picture modes (e.g., Standard, Movie, Sports).
PIC SIZE	Adjusts the picture aspect ratio or size.
Number Buttons (0-9)	Directly selects channels or enters numerical values.
100	Used for entering three-digit channel numbers.
FAV	Accesses favorite channels list.
VOL (+/-)	Increases or decreases the volume level.
CH (Up/Down)	Changes the television channel up or down.
RECALL	Switches between the current and previously viewed channel.
MUTE	Turns the sound on or off.
C.CAPTION	Activates or deactivates closed captions.
CH RTN	Returns to the previous channel.
INFO	Displays on-screen information about the current program or input.
Navigation Buttons (Up, Down, Left, Right)	Navigates through on-screen menus and options.
ENTER	Confirms a selection in menus.
BACK	Returns to the previous menu or screen.
NEXT	Moves to the next item or page in certain menus.
MENU	Opens the main menu of the television.
EXIT	Closes the current menu or on-screen display.
EJECT	Ejects media from a connected device (if supported by the TV).
PAUSE/STEP	Pauses playback or advances frame by frame.
PLAY	Starts or resumes media playback.
STOP	Stops media playback.
SKIP (Backward)	Skips to the beginning of the current track/chapter or previous track/chapter.
REW (Rewind)	Rewinds media playback.

Button	Function
FF (Fast Forward)	Fast forwards media playback.
SKIP (Forward)	Skips to the next track or chapter.

MAINTENANCE

Care and Cleaning

- Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Avoid exposing the remote to direct sunlight, high temperatures, or high humidity.
- Do not drop the remote control or subject it to strong impacts.

Battery Replacement

- Replace batteries when the remote control's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new AAA batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Remote Control Not Responding

- Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with new batteries if necessary.
- Line of Sight:** Make sure there is a clear path between the remote control and the television's infrared sensor. Obstructions can block the signal.
- Distance:** Operate the remote within a reasonable distance from the television.
- Interference:** Strong light sources or other electronic devices might interfere with the remote's signal. Try operating the remote in a different environment.

Limited Functionality

- Compatibility:** Verify that your television model is listed as compatible with the CT-90325 remote control. While this remote is designed for a wide range of Toshiba TVs, some specific functions may vary or not be supported on all models.
- TV Settings:** Some functions may require specific settings within your television's menu. Consult your television's user manual for details.

PRODUCT SPECIFICATIONS

- Model:** CT-90325
- Brand:** Toshiba
- Power Supply:** 2 x 1.5V AAA Batteries (Not Included)
- Product Dimensions:** Approximately 6 x 4 x 1 inches

- **Item Weight:** Approximately 0.01 ounces
- **Color:** Black
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1
- **Compatible Devices:** Television

COMPATIBLE TOSHIBA TV MODELS

The Toshiba CT-90325 remote control is compatible with a wide range of Toshiba LCD and LED TV models, including but not limited to:

19C100U, 40L1400U, 50L1400U, 32L1400U, 22AV600U, 19AV600U, 32E200U, 37E200U, 40E200UL, 32DTL, 32C10, 32C10U, 32C100, 32C100U, 32C100UL, 32C100U2, 32C100UM, 32C110U, 22SI400, 22SI400U, 22SI410U, 40E20, 39L2300U, 23I2300u, 23I2300u1, 29I1350um, 32I1350u1, 32I2300u1, 32I2300um, 39I1350um, 39I2300um, 50I2300um, 58I1350u, 50I2300u, 50I1350u, 32I2300u, 32I1350u, 29I1350u, 39I1350u, 23I1350u, 40E20U, 40E20UL, 40E200, 40E200U, 40E200UL, 40E200U2, 40E200UM, 40E210U, 19AV600, 19AV600UZ, 19CLD, 19C10, 19C10U, 19C100, 19C100U, 19SI400, 19SI400U, 19SI410U, 22AV600, 22AV600UZ, 22C10, 22C10U, 22C100, 22C100U, 22SI400, 22SI400U, 22SI410U, 24SI410U, 26C10, 26C10U, 26C100, 26C100U, 26C100UL, 26C100UM, 26SI400, 26SI400U, 32DTLU, 32E20, 32E20U, 32E200, 32E200UM, 32FT2U, 32SI400, 32SI400U, 32SI400VPK, 32SI410U, 37E20, 37E20U, 37E200, 40FTL, 40FTLU, 40FT2U, 40FT2UL, 40SI412, 40SI412U, 46G310U, 46SI412U, 55G310U, 55G310UL, 55HTL, 55HTLU.

WARRANTY INFORMATION AND CUSTOMER SUPPORT

For specific warranty details regarding your Toshiba CT-90325 remote control, please refer to the documentation provided with your original television purchase or contact Toshiba customer support directly. Warranty terms may vary based on region and purchase date.

If you encounter issues not covered in this manual or require further assistance, please visit the official Toshiba support website or contact their customer service department.