

[Manuals.plus](#) /

> [Saeco](#) /

> Saeco Lirika One Touch Cappuccino Titan User Manual

**Saeco 10004768**

# Saeco Lirika One Touch Cappuccino Titan User Manual

Your comprehensive guide to operating and maintaining your Saeco Lirika espresso machine.

## INTRODUCTION

---

The Saeco Lirika One Touch Cappuccino Titan is a sophisticated bean-to-cup espresso machine designed for ease of use and exceptional coffee quality. Featuring Saeco's exclusive "Pinless Wonder" cappuccinatore, it allows for the preparation of perfect cappuccinos and latte macchiatos with a single touch. Its compact design and user-friendly interface make it ideal for various settings, delivering professional-grade beverages.

### Key Features:

- One-Touch Cappuccino: Effortlessly prepare creamy cappuccinos and latte macchiatos.
- Dual Coffee Cups: Brew two cups of espresso or coffee simultaneously.
- Hot Water Dispenser: Conveniently dispense hot water for tea or other beverages.
- Integrated Pinless Wonder Cappuccinatore: Innovative system for delightful milk foam, drawing milk directly from its container.
- Ceramic Blades: Durable ceramic grinders ensure consistent coffee quality and quiet operation.
- Mini-Clean Function: Automated self-cleaning procedure for the milk system after each use.

## SETUP AND FIRST USE

---

Before using your Saeco Lirika for the first time, please follow these steps carefully to ensure proper operation and longevity of the machine.

### 1. Unpacking and Placement:

- Carefully remove the machine from its packaging.
- Place the machine on a stable, flat surface, away from heat sources and direct sunlight. Ensure adequate ventilation around the machine.
- Remove all protective films and packaging materials.



Figure 1: The Saeco Lirika One Touch Cappuccino Titan, ready for setup.

## 2. Filling the Water Tank:

- Remove the water tank from the back of the machine.
- Rinse the tank with fresh water.

- Fill the tank with fresh, cold tap water up to the MAX level indicator.
- Insert the water tank back into the machine, ensuring it is securely seated.

### 3. Filling the Bean Hopper:

- Open the coffee bean hopper lid on top of the machine.
- Pour fresh coffee beans into the hopper. Do not use ground coffee, instant coffee, or caramelized beans as this can damage the grinder.
- Close the lid securely.

### 4. Power Connection and Priming:

- Plug the power cord into a suitable electrical outlet.
- Turn on the machine using the main power switch.
- The machine will display messages prompting you to perform initial rinsing cycles. Follow the on-screen instructions to prime the water circuit. This typically involves dispensing hot water through the steam/hot water wand until the machine indicates it is ready.

## OPERATING INSTRUCTIONS

---

Your Saeco Lirika is designed for intuitive operation. Here's how to prepare your favorite coffee beverages.

### 1. Preparing Espresso and Coffee:

1. Place one or two cups under the coffee dispenser.
2. Press the **Espresso** button for a single espresso or the **Coffee** button for a longer coffee. For two cups, press the desired button twice in quick succession.
3. The machine will automatically grind the beans, brew, and dispense the coffee.
4. You can stop the brewing process at any time by pressing the button again.



Figure 2: The intuitive control panel with beverage selection buttons.

## 2. One Touch Cappuccino / Latte Macchiato:

The "Pinless Wonder" cappuccinatore simplifies milk-based drinks.

1. Connect the milk tube from the cappuccinatore to a container of cold milk (e.g., milk carton or a separate jug).
2. Place a suitable cup under the coffee and milk dispenser.
3. Press the **Cappuccino** or **Latte Macchiato** button.
4. The machine will automatically froth the milk and then dispense the coffee, creating your desired beverage.
5. After dispensing, the machine will prompt for a "Mini-Clean" cycle. It is highly recommended to perform this to keep the milk system clean.



Figure 3: The "One Touch Cappuccino" system in action, producing rich milk foam.

### 3. Hot Water Dispensing:

1. Place a cup under the hot water dispenser (located on the left side).
2. Press the **Hot Water** button (if available on your model, or navigate through the menu).
3. The machine will dispense hot water. Press the button again to stop.



Figure 4: Hot water dispensing for tea or other hot beverages.

#### 4. Adjusting Coffee Settings:

- **Aroma/Strength:** Use the **Aroma** button or menu option to select your preferred coffee strength (e.g., mild, medium, strong).
- **Volume:** You can program the volume of your coffee by pressing and holding the desired beverage button until the desired amount is dispensed, then release. The machine will remember this setting for future use.
- **Grind Setting:** The grind setting can be adjusted inside the bean hopper. Use the provided key to turn the knob. A finer grind produces stronger coffee, a coarser grind produces milder coffee. Adjust only when the grinder is running.

## MAINTENANCE AND CLEANING

Regular cleaning and maintenance are crucial for the performance and lifespan of your Saeco Lirika machine.

### 1. Daily Cleaning:

- **Drip Tray and Coffee Grounds Container:** Empty and rinse the drip tray and coffee grounds container daily or when prompted by the machine.
- **Water Tank:** Rinse the water tank daily and refill with fresh water.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth.

### 2. Cleaning the Pinless Wonder Cappuccinatore:

- After each milk preparation, perform the "Mini-Clean" function when prompted.
- Regularly disassemble the cappuccinatore and rinse all parts under running water. Use a mild detergent if necessary. Ensure all milk residues are removed.
- Refer to the diagram in the manual for proper reassembly.

### 3. Cleaning the Brewing Unit:

The brewing unit should be rinsed weekly with lukewarm water.

1. Turn off the machine and unplug it.
2. Open the service door (usually on the right side of the machine).
3. Press the "PUSH" button and pull the brewing unit out by its handle.
4. Rinse the brewing unit thoroughly under lukewarm running water until no coffee residues are visible. Do not use detergents.
5. Allow the brewing unit to air dry completely before reinserting it.
6. Lubricate the brewing unit's moving parts with Saeco food-grade grease every few months.



Figure 5: The removable brewing unit, essential for regular cleaning.

#### 4. Descaling:

The machine will prompt you when descaling is required. Use only Saeco descaling solution to prevent damage.

1. Follow the on-screen instructions precisely.
2. The process typically involves emptying the water tank, adding descaling solution mixed with water, running the descaling cycle, and then performing several rinsing cycles with fresh water.

### TROUBLESHOOTING

This section addresses common issues you might encounter with your Saeco Lirika machine. For problems not listed here, please contact customer support.

Problem	Possible Cause	Solution
No coffee is dispensed.	Water tank empty; brewing unit clogged; coffee beans hopper empty.	Fill water tank; clean brewing unit; fill coffee beans.
Milk is not frothing properly.	Cappuccinatore clogged; milk tube not properly connected; milk is not cold enough.	Clean cappuccinatore thoroughly; ensure milk tube is secure; use cold milk (4-8°C).

Problem	Possible Cause	Solution
"Empty Grounds Container" message persists after emptying.	Sensor needs reset; container not fully inserted.	Ensure machine is on when emptying; remove and reinsert the container firmly.
Machine is noisy during grinding.	Foreign object in grinder; beans are too oily.	Check bean hopper for foreign objects (e.g., stones); use less oily beans.
Coffee is too weak/strong.	Incorrect grind setting; aroma setting too low/high.	Adjust grind setting (finer for stronger, coarser for weaker); adjust aroma setting.

## SPECIFICATIONS

---

Detailed technical specifications for the Saeco Lirika One Touch Cappuccino Titan.

<b>Brand</b>	Saeco
<b>Model Number</b>	10004768
<b>Colour</b>	Silver
<b>Product Dimensions (L x W x H)</b>	21.5 x 37 x 42.9 cm
<b>Item Weight</b>	8 kg
<b>Water Tank Capacity</b>	2 liters
<b>Bean Hopper Capacity</b>	Approximately 500g
<b>Power/Wattage</b>	1850 watts
<b>Voltage</b>	220V
<b>Material</b>	Ceramic (grinder), Plastic/Metal (housing)
<b>Special Features</b>	One Touch Cappuccino, Ceramic Grinder, Hot Water Dispenser



Figure 6: Product dimensions for proper placement.

## WARRANTY AND SUPPORT

Saeco products are manufactured to the highest quality standards. For information regarding your product's warranty, please refer to the warranty card included in your product packaging or visit the official Saeco website.

For technical assistance, spare parts, or service, please contact Saeco customer support. Contact details can typically be found on the Saeco official website or in your product's original documentation.

Always use genuine Saeco spare parts and accessories to ensure optimal performance and to maintain your warranty.

