

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [tectake](#) /

› **TecTake BBQ Grill Smoker Charcoal Barbecue - Round with Lid and Wheels | Model No. 401665 Instruction Manual**

tectake 401665

TecTake BBQ Grill Smoker Charcoal Barbecue - Round with Lid and Wheels | Model No. 401665 Instruction Manual

Brand: tectake | Model: 401665

INTRODUCTION

This instruction manual provides essential information for the assembly, operation, and maintenance of your TecTake BBQ Grill Smoker Charcoal Barbecue, Model No. 401665. Please read this manual thoroughly before first use to ensure safe and efficient operation and to achieve optimal grilling results. Keep this manual for future reference.

PRODUCT FEATURES

- Thermostat on the lid for precise temperature monitoring.
- Adjustable vent on the lid for airflow control.
- Excellent grilling and smoking results.
- Chrome-plated grates for durability and easy cleaning.
- Stable base with wheels for easy mobility.

PACKAGE CONTENTS

Before assembly, please ensure all components listed below are present and undamaged. Refer to the images for visual identification of each part.



Image: Fully assembled TecTake BBQ Grill Smoker Charcoal Barbecue with food being grilled.



Image: Detailed view of key components: the lid handle, the adjustable air vent on the lid, and the sturdy wheels for transport.

- Barbecue bowl (main body)
- Lid with handle and adjustable vent
- Cooking grate (chrome-plated)
- Charcoal grate
- Ash catcher plate
- Legs (3 pieces)
- Wheels (2 pieces)
- Bottom storage rack
- Assembly hardware (screws, washers, nuts)

SETUP INSTRUCTIONS

Follow these steps carefully for the proper assembly of your TecTake BBQ Grill. It is recommended to assemble the unit on a flat, stable surface.

1. **Attach Legs:** Securely attach the three legs to the main barbecue bowl using the provided hardware. Ensure they are firmly tightened.

- 2. Install Wheels:** Attach the two wheels to two of the legs at the designated points. The wheels allow for easy movement of the barbecue.
- 3. Assemble Ash Catcher:** Mount the ash catcher plate and the ash collection bucket beneath the main bowl. This system facilitates easy ash disposal.
- 4. Place Grates:** Insert the charcoal grate into the bottom of the barbecue bowl, followed by the chrome-plated cooking grate on top.
- 5. Attach Lid Handle:** Secure the handle to the lid using the provided screws.
- 6. Lid Vent Assembly:** Ensure the adjustable air vent on the lid is correctly assembled and moves freely to control airflow.



Image: View of the barbecue's lower section, highlighting the ash collection system and how the legs connect to the main bowl.

OPERATING INSTRUCTIONS

Follow these guidelines for safe and effective grilling with your TecTake BBQ Grill.

- 1. Charcoal Preparation:** Place charcoal briquettes or lump charcoal on the charcoal grate. For best results, use a charcoal chimney starter to ignite the charcoal evenly.
- 2. Ignition:** Ignite the charcoal. Once the charcoal is covered with a light gray ash, it is ready for cooking.

3. **Temperature Control:** Use the adjustable vent on the lid to control airflow and thus the cooking temperature. Opening the vent increases airflow and temperature, while closing it reduces both. The integrated thermostat helps monitor the internal temperature.
4. **Grilling:** Place food on the cooking grate. For smoking or indirect grilling, place food away from direct heat and keep the lid closed.
5. **Lid Usage:** Keep the lid closed as much as possible to maintain consistent temperature and infuse smoky flavor into your food. The lid can be conveniently hung on the side of the barbecue using its integrated hook.



Image: The barbecue in active use, demonstrating its capacity for grilling various foods outdoors.



Image: A close-up of the barbecue with glowing charcoal, indicating readiness for grilling.

MAINTENANCE

Proper care and maintenance will extend the life of your TecTake BBQ Grill.

- Ash Removal:** After the barbecue has completely cooled, empty the ash collection bucket. Regularly remove ash to ensure proper airflow during future use.
- Grate Cleaning:** Clean the cooking grate after each use. For stubborn residue, preheat the grill to burn off excess food, then brush with a grill brush.
- Exterior Cleaning:** Wipe down the exterior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners that could damage the finish.
- Storage:** Store the barbecue in a dry, covered area when not in use to protect it from the elements.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- Charcoal not lighting:** Ensure the bottom vents are open for sufficient oxygen. Use a charcoal chimney starter and appropriate firelighters.

- **Uneven cooking:** Distribute charcoal evenly across the charcoal grate. Ensure the lid is properly seated to maintain consistent internal temperature.
- **Temperature too high/low:** Adjust the lid vent to control airflow. More open means higher temperature, more closed means lower temperature.

SPECIFICATIONS

Dimensions du produit (L x l x h)	48 x 45 x 70 cm
Poids de l'article	2,6 Kilogrammes
Type de matériau	Acier inoxydable
Source d'alimentation	Charbon de bois
Couleur	Noir
Facteur de forme	Rond avec couvercle et roues
Nom de modèle	TecTake 3in1 BBQ Holzkohlegrill Barbecue Smoker Räuchertonne Räuchergrill mit Thermostat

WARRANTY AND SUPPORT

For detailed warranty information, product support, or to inquire about spare parts, please contact TecTake customer service directly. Refer to your purchase documentation for specific contact details and warranty terms applicable to your region.