

[Manuals.plus](#) /

› [BOB Gear](#) /

› BOB Revolution PRO Jogging Stroller - Up to 75 Pounds - UPF 50+ Canopy - Easy Fold - Adjustable Handlebar with Hand Brake , Black

BOB Gear U631856

BOB Revolution PRO Jogging Stroller User Manual

Model: U631856

PRODUCT OVERVIEW

The BOB Revolution PRO Jogging Stroller is designed for versatile use, excelling both on and off-road. It offers a deluxe experience for various activities, from intense workouts to casual city strolls. Key features include hand-activated rear drum brakes for enhanced control on downhill slopes, a locking swivel front wheel for easy maneuverability, and air-filled tires combined with a mountain bike-style suspension system for a smooth ride.

The stroller is equipped with an adjustable handlebar with 9 positions to accommodate users of different heights. It features a one-hand near-flat recline for sleeping children and a fully upright seating position for an engaged view. The hassle-free five-point no-rethread harness allows for easy adjustments. For convenience, it offers a two-step fold mechanism. The extra-large UPF 50+ canopy provides protection from the elements, and the ventilated, padded seat ensures comfort. Storage options include 2 interior seat pockets, 1 seat-back pocket, and an oversized cargo basket. This stroller is travel system ready and can be combined with compatible infant car seats (such as BOB or Britax) using a separately sold infant car seat adapter.



Figure 1: The BOB Revolution PRO Jogging Stroller, showcasing its robust design and features.

SETUP AND ASSEMBLY

Before first use, ensure all components are securely attached and the stroller is properly assembled. Refer to the quick start guide included in the packaging for detailed visual instructions.

Unfolding the Stroller

1. Place the folded stroller on a flat, stable surface.
2. Release the folding latch.

3. Grasp the handlebar and lift upwards until the frame locks into place. Ensure all locking mechanisms are engaged.

Attaching Wheels

The wheels may come detached for shipping. Follow these steps to attach them:

1. For rear wheels, align the axle with the wheel housing and push until it clicks securely into place.
2. For the front wheel, insert the quick-release skewer through the wheel hub and secure it into the fork dropouts. Tighten the quick-release lever firmly.

Adjusting the Handlebar

The handlebar is adjustable to 9 positions to suit different user heights. Locate the adjustment buttons on either side of the handlebar. Press the buttons and pivot the handlebar to your desired height, then release the buttons to lock it in place.

Tire Inflation

The stroller features air-filled tires. Ensure they are properly inflated to the recommended PSI (pounds per square inch) for optimal performance and ride comfort. Check the tire sidewall for the exact PSI. Use a standard bicycle pump for inflation.

OPERATING INSTRUCTIONS

Child Seating and Harness

Always secure your child using the five-point no-rethread harness. Adjust the shoulder straps and waist straps to ensure a snug, comfortable fit. The harness is designed for easy adjustment without re-threading.

Seat Recline Adjustment

The seat offers a one-hand near-flat recline for napping and a fully upright position. To recline, locate the strap and buckle mechanism behind the seat. Squeeze the buckle to loosen the strap and recline the seat. To raise the seat, pull the strap until the desired upright position is achieved.

Canopy Operation

The extra-large UPF 50+ canopy provides ample shade and protection. Extend or retract the canopy by pushing or pulling its front edge. It features a peek-a-boo window for checking on your child.

Front Wheel Modes (Swivel/Locked)

The front wheel can be set to swivel mode for easy maneuverability in tight spaces or locked mode for stability during jogging or on uneven terrain. To switch modes, locate the red knob near the front wheel assembly. Rotate the knob to lock or unlock the swivel function.

Braking System

The stroller is equipped with a foot-activated parking brake and a hand-activated rear drum brake for downhill control.

- **Parking Brake:** Engage the parking brake by pressing down on the red lever located near the rear wheels. Ensure the

stroller is stationary before engaging.


- **Hand Brake:** The hand-activated drum brake on the handlebar provides additional control, especially on inclines or declines. Squeeze the lever to apply the brake.

Folding the Stroller

The stroller features a convenient two-step fold. Ensure the front wheel is unlocked and the handlebar is in its lowest position. Follow the specific folding instructions provided in the quick start guide to collapse the stroller for storage or transport.

Folded Length, wheels on: Swivel mode 39 in (100 cm) / Jogging mode 43 in (109 cm)

Folded Height, wheels on: Swivel mode 16 in (41 cm) / Jogging mode 16 in (41 cm)

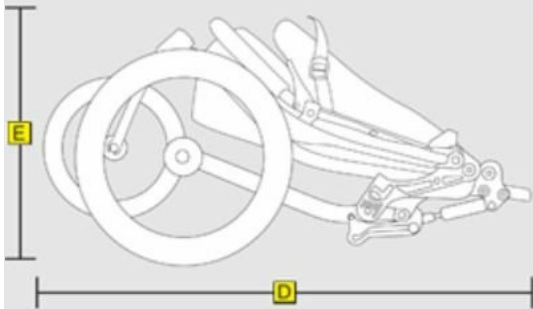

Folded Length, wheels off: Swivel mode 35 in (89 cm) / Jogging mode 36 in (91.4 cm)

Folded Height, wheels off: Swivel mode 10 in (25.4 cm) / Jogging mode 10 in (25.4 cm)

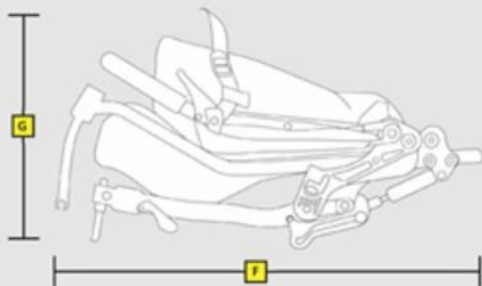


Figure 2: Folded dimensions of the stroller, illustrating its compact size for storage.

Travel System Compatibility

To use the stroller as a travel system, a compatible infant car seat adapter (sold separately) is required. Follow the adapter's instructions for secure installation of an infant car seat.

Your browser does not support the video tag.

Video 1: An overview of the BOB Revolution PRO Jogging Stroller's features and functionality, including its swivel front wheel, hand brake, adjustable handlebar, and easy two-step fold. This video demonstrates the stroller's versatility for both everyday use and active lifestyles.

MAINTENANCE

Cleaning

- **Fabric:** Spot clean fabric with mild soap and warm water. Do not use bleach. Air dry.
- **Frame:** Wipe the frame with a soft, damp cloth.
- **Wheels:** Clean wheels regularly to remove dirt and debris.

Tire Care

Regularly check tire pressure and inflate as needed. Inspect tires for wear and tear. Replacement inner tubes are readily available at bicycle shops.

Lubrication

Periodically lubricate moving parts, such as wheel axles and folding mechanisms, with a silicone-based lubricant to ensure smooth operation.

Storage

Store the stroller in a clean, dry place away from direct sunlight and extreme temperatures to prevent damage to fabric and components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stroller pulls to one side	Uneven tire pressure; front wheel alignment issue.	Check and adjust tire pressure. Consult the manual for front wheel tracking adjustment.
Difficulty folding/unfolding	Mechanism obstructed; latch not fully disengaged.	Ensure no items are blocking the mechanism. Verify the latch is fully released. Lubricate moving parts if necessary.
Brakes not engaging properly	Cable tension too loose; worn brake pads.	Adjust brake cable tension. Inspect and replace worn brake pads.
Squeaking noises	Lack of lubrication on moving parts.	Apply silicone-based lubricant to axles, joints, and folding mechanisms.

SPECIFICATIONS

- **Model Number:** U631856
- **Brand:** BOB Gear
- **Color:** Black
- **Frame Material:** High Strength Aluminum Alloy
- **Fabric Type:** Polyester
- **Maximum Weight Recommendation:** 75 Pounds
- **Child Height Limit:** 44 inches or less
- **Age Range:** Birth to 75 pounds (0-8 weeks with infant car seat adapter & compatible infant car seat)

- **Harness Type:** 5 Point (no-rethread)
- **Adjustable Handlebar Height:** 34.5 to 48 inches
- **Stroller Dimensions (L x W x H):** 44"L x 25.4"W x 43"H
- **Item Weight:** 30.5 Pounds
- **Folded Size:** 39"L x 25.4"W x 16"H (with wheels on, swivel mode)
- **Canopy:** Extra-large UPF 50+
- **Brakes:** Hand-activated rear drum brake, Foot-activated parking brake
- **Suspension:** Mountain bike style, 3 inches of travel, 2 stages of weight support
- **Storage:** 2 interior seat pockets, 1 seat-back pocket, oversized cargo basket

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or to contact customer support, please visit the official BOB Gear website or refer to the warranty card included with your purchase. Keep your proof of purchase for warranty claims.

Manufacturer: Britax USA

Brand Website: [BOB Gear Official Store](#)

© 2023 BOB Gear. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

