



Manuals.plus /

- › **Disney Princess** /
- › Disney Princess Fabric 18-Inch Children's Backpack (BTS-2061) Instruction Manual

Disney Princess BTS-2061

Disney Princess Fabric 18-Inch Children's Backpack (BTS-2061) Instruction Manual

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Disney Princess Fabric 18-Inch Children's Backpack, model BTS-2061. Please read these instructions carefully to ensure safe and effective use of the product.



Image: The Disney Princess 18-inch backpack shown next to a child, illustrating its size and design. The backpack

features a pink fabric with a princess graphic on the front panel.

PRODUCT FEATURES

- Brand: Disney Princess
- Color: Pink
- Capacity: 21.73 liters
- Weight: 1300 grams
- Dimensions: 34.5 cm (L) x 14 cm (W) x 45 cm (H); 18 inches
- Comfortable back panel
- Equipped with wheels and an extendable trolley handle for easy transport
- Multiple compartments for organized storage

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove the backpack from its packaging. Inspect for any damage.
2. **Adjusting Shoulder Straps:** For comfortable carrying, adjust the padded shoulder straps to fit the user's height. Loosen or tighten the straps using the buckles at the bottom of each strap. Ensure the backpack sits snugly against the back.
3. **Extending the Trolley Handle:** To use the backpack as a trolley, locate the button on top of the handle. Press the button and pull the handle upwards until it locks into the desired extended position. Ensure it is fully extended before rolling.
4. **Retracting the Trolley Handle:** To retract the handle, press the button again and push the handle downwards until it is fully collapsed into the backpack's frame.

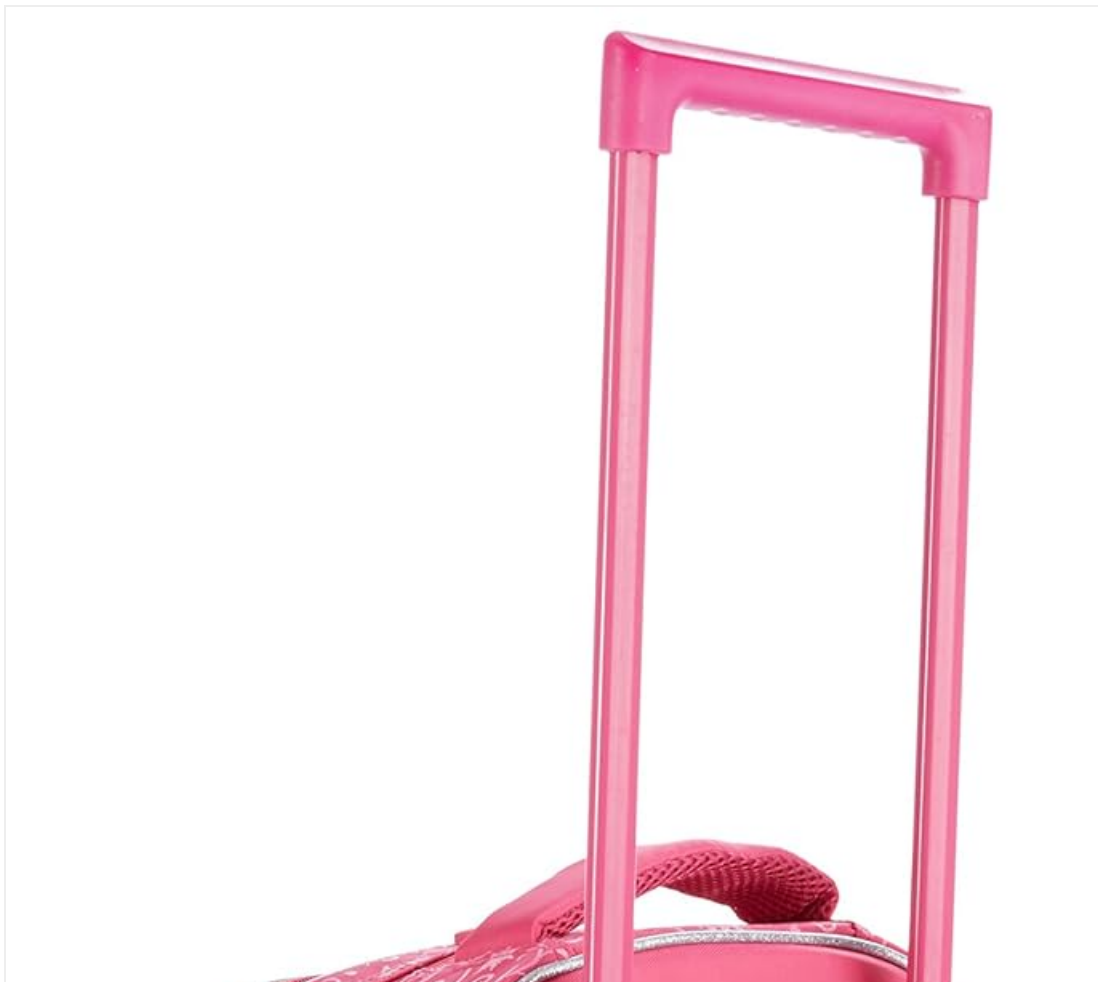




Image: Side view of the backpack showing the extendable pink trolley handle fully extended, ready for rolling. The shoulder straps are visible on the back panel.

OPERATING INSTRUCTIONS

Packing the Backpack

- Utilize the main compartment for larger items such as books or clothing.
- Smaller front pockets are suitable for stationery, snacks, or personal items.
- Side mesh pockets can hold water bottles or other quick-access items.
- Distribute weight evenly to maintain balance, especially when using the trolley function.



Image: Top-down view of the backpack with its main zippered compartments open, revealing the spacious interior for packing.

Carrying the Backpack

- For carrying on the back, ensure shoulder straps are adjusted for a snug fit.
- Avoid overloading the backpack to prevent discomfort and potential damage.

Using the Trolley Function

- Extend the trolley handle as described in the Setup section.
- Tilt the backpack slightly and pull it behind you using the extended handle.
- Navigate smoothly over flat surfaces. Avoid rough terrain to prevent damage to wheels.



Image: Bottom view of the backpack, highlighting the durable wheels and the protective base, designed for rolling transport.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the exterior fabric with a damp cloth and mild soap. Do not machine wash or tumble dry.
- **Drying:** Allow the backpack to air dry completely before storing to prevent mold or mildew.
- **Storage:** Store in a cool, dry place away from direct sunlight when not in use.
- **Zipper Care:** Periodically check zippers for smooth operation. If a zipper becomes stiff, apply a small amount of zipper lubricant or wax.
- **Wheel Maintenance:** Keep wheels free of debris. If wheels become stiff, clean around the axle and apply a small amount of silicone spray.



Image: Side view of the backpack, featuring a mesh pocket suitable for holding a water bottle, and the patterned pink fabric.

TROUBLESHOOTING

Issue	Possible Solution
Trolley handle stuck	Ensure the release button is fully pressed. Check for obstructions in the handle mechanism.
Wheels not rolling smoothly	Clean any dirt or debris from around the wheels and axles. Apply a small amount of lubricant if necessary.
Zipper is difficult to open/close	Check for fabric caught in the zipper. Apply zipper lubricant or wax to the teeth.
Backpack appears dirty	Refer to the 'Care and Maintenance' section for cleaning instructions.

PRODUCT SPECIFICATIONS

Specification	Detail
Manufacturer	Disney Princess
Item Model Number	BTS-2061
Product Dimensions (LxWxH)	34.5 x 14 x 45 cm
Item Weight	1.3 kg (1 kg 300 g)
Capacity	21.73 liters
Color	Pink

WARRANTY AND SUPPORT

This Disney Princess backpack comes with a **12 Month Warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For product support, warranty claims, or further assistance, please contact your retailer or the Disney Princess customer service department. Contact details can typically be found on the product packaging or the official brand website.