

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bauknecht](#) /

› [Bauknecht WAT Prime 652 Z Top-Loader Washing Machine User Manual](#)

Bauknecht WAT Prime 652 Z

Bauknecht WAT Prime 652 Z Top-Loader Washing Machine User Manual

Model: WAT Prime 652 Z

INTRODUCTION

Thank you for choosing the Bauknecht WAT Prime 652 Z top-loader washing machine. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions carefully before installation and operation, and keep them for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Do not operate the washing machine if it is damaged or malfunctioning. Contact authorized service personnel.
- Unplug the appliance before performing any maintenance or cleaning.
- Do not wash items that have been cleaned in, washed with, soaked in, or spotted with combustible or explosive substances.
- Keep packaging materials out of reach of children.

SETUP AND INSTALLATION

Unpacking

Remove all packaging materials and transport screws before using the appliance. Keep packaging materials away from children. Ensure all components are present and undamaged.

Positioning

Place the washing machine on a firm, level floor. Adjust the feet to ensure the appliance is stable and level. Proper leveling is crucial to minimize vibration and noise during operation, especially during the spin cycle.



Image: The Bauknecht WAT Prime 652 Z washing machine positioned in a room, highlighting its compact top-loader design suitable for smaller spaces.



Image: A wider view of the Bauknecht WAT Prime 652 Z washing machine, demonstrating its aesthetic and how it fits into a modern living space.

Water and Electrical Connections

Connect the water inlet hose to a cold water tap. Ensure the drain hose is securely placed into a standpipe or laundry tub, preventing kinks. Plug the power cord into a grounded electrical outlet. Do not use extension cords.

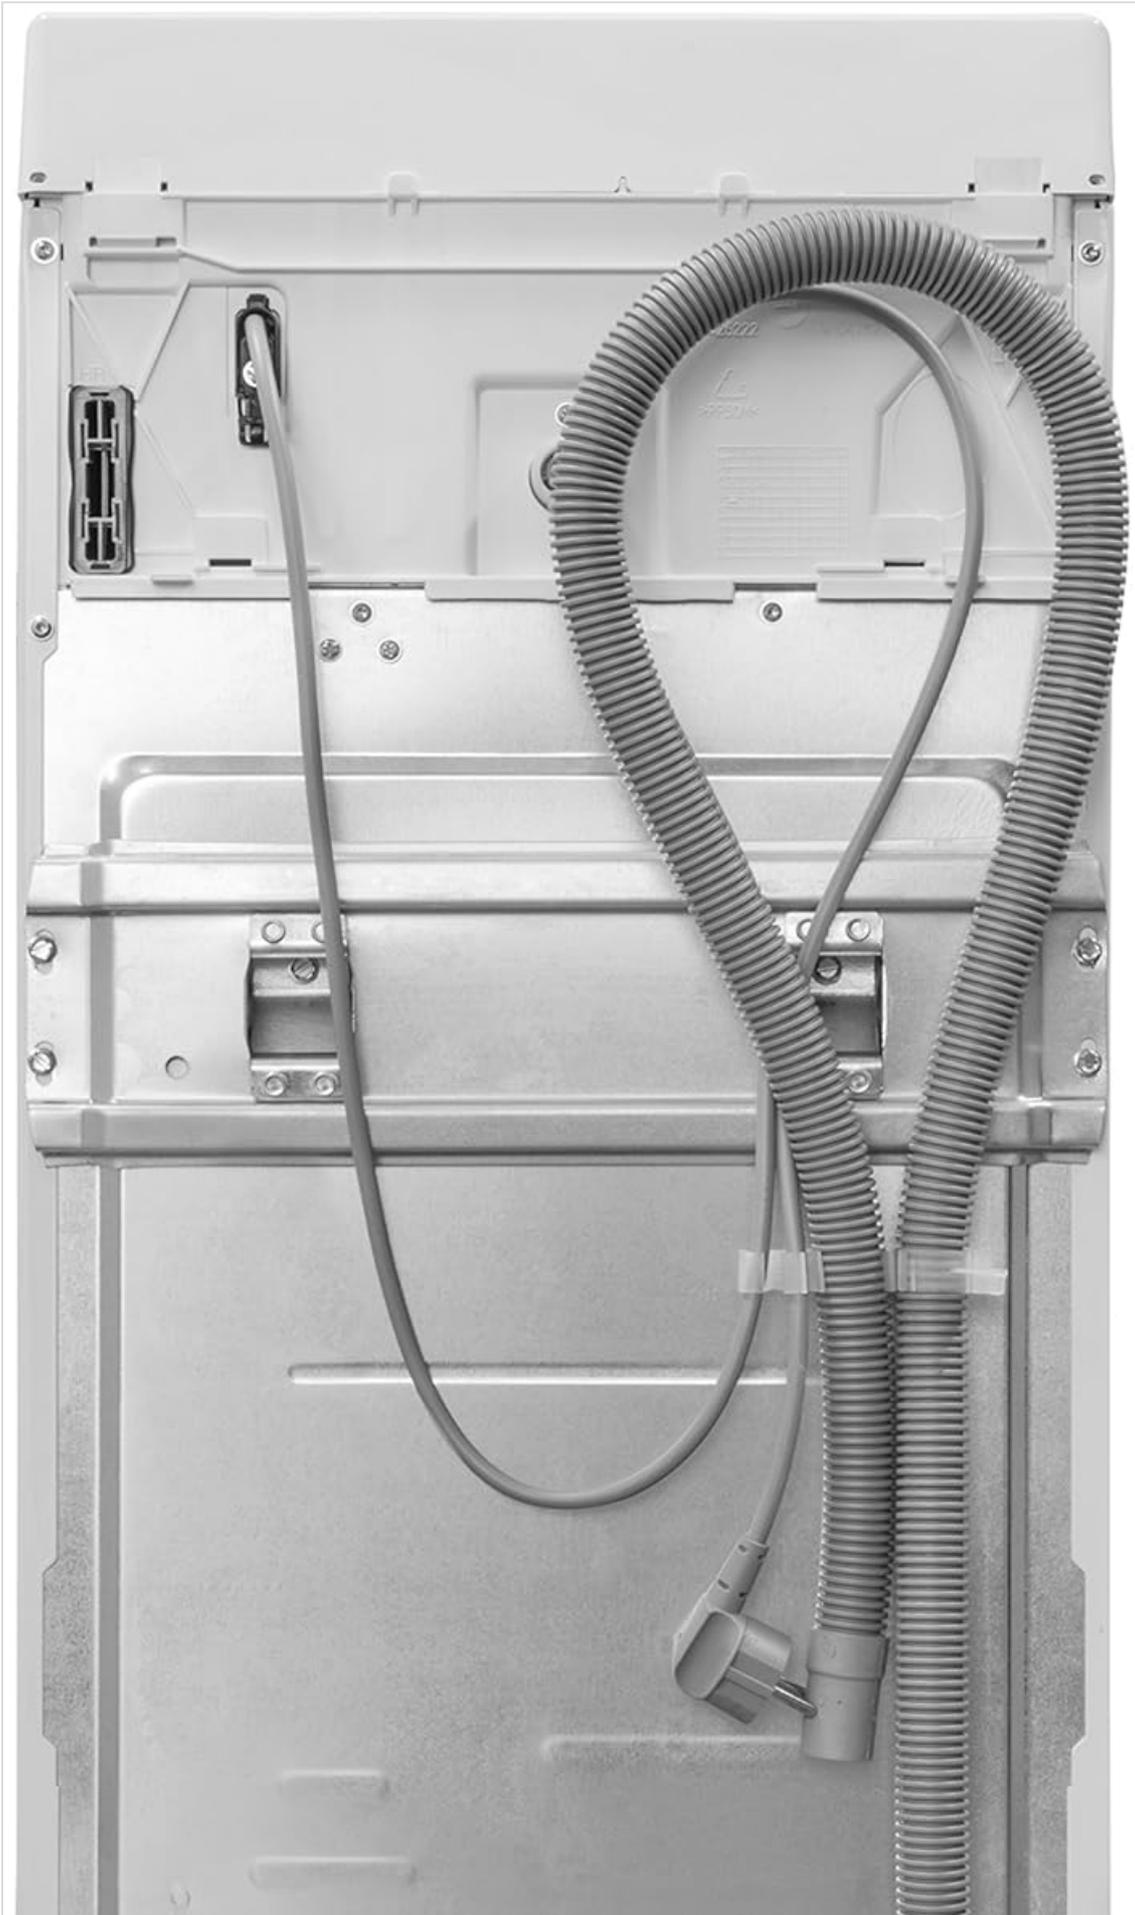




Image: Rear view of the washing machine, illustrating the proper connection points for the water inlet hose, drain hose, and power cable.

OPERATING INSTRUCTIONS

Control Panel Overview





Image: Detailed view of the control panel, showing the program selection knob, digital display, and various function buttons for temperature, spin speed, and special options.

- **Program Selector Knob:** Turn to select the desired wash program.
- **Display:** Shows program duration, temperature, spin speed, and error codes.
- **Temperature Button (Temp.):** Adjusts the wash temperature.
- **Spin Speed Button (Schleudern):** Modifies the spin speed.
- **Start/Pause Button:** Starts or pauses the selected program.
- **Short Program Button (Kurz):** Reduces the program duration for lightly soiled items.
- **Delay Start Button (Start Vorwahl):** Sets a delayed start time for the wash cycle.

Loading Laundry

Open the top lid and the drum flaps. Load laundry loosely into the drum, ensuring not to overload. The maximum capacity is 6 kg. The drum automatically positions its opening upwards after a cycle for easy unloading.

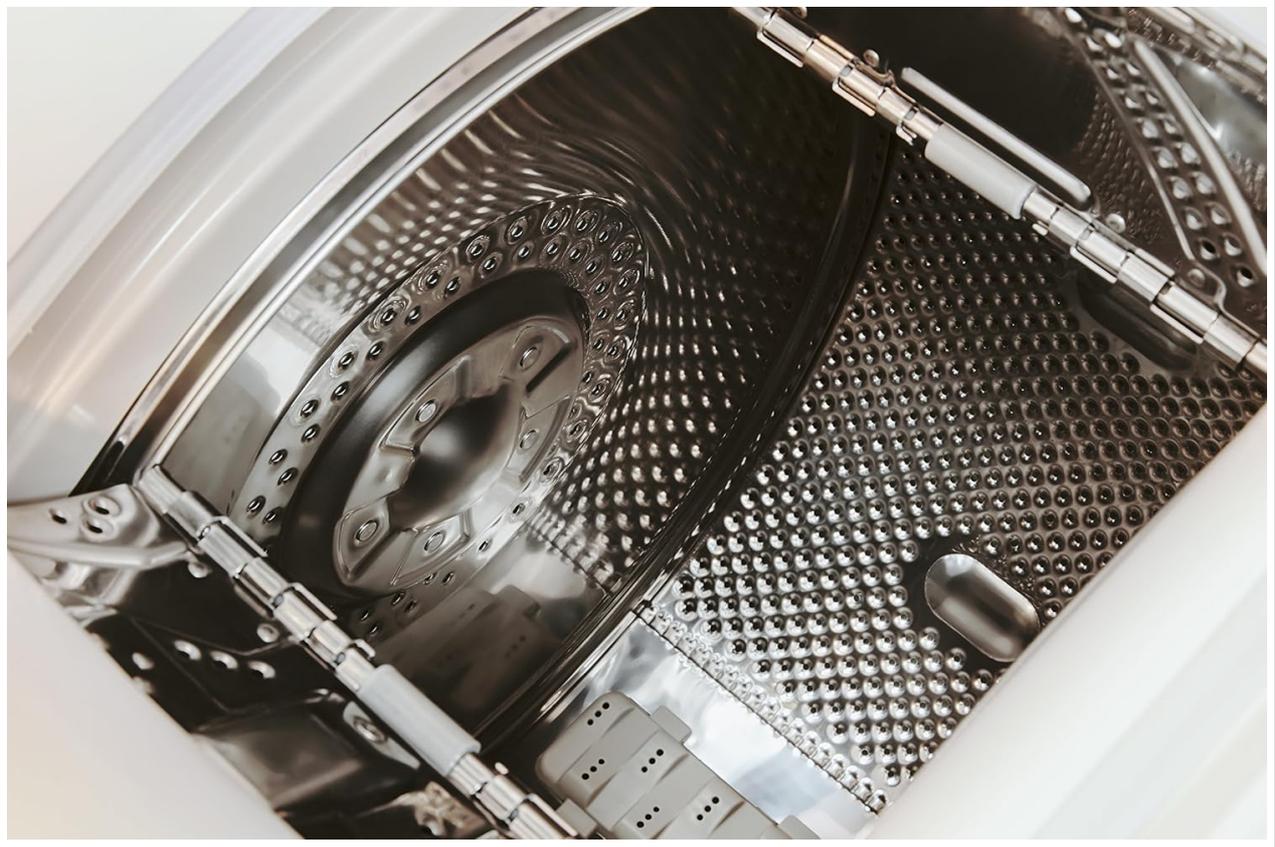


Image: Inside the washing machine drum, highlighting the textured surface designed for effective and gentle washing.

Adding Detergent and Additives

Pull out the detergent dispenser drawer located under the top lid. Add the appropriate amount of detergent to the main wash compartment and any additives (e.g., fabric softener) to their designated compartments. Refer to detergent packaging for dosage recommendations.



Image: The open detergent dispenser, illustrating the separate compartments for main wash detergent, pre-wash detergent, and fabric softener, with clear markings for maximum fill levels.

Selecting and Starting a Program

1. Load laundry and add detergent.
2. Close the top lid securely.
3. Turn the program selector knob to choose your desired wash program (e.g., Cotton, Synthetics, Delicates).
4. Adjust temperature and spin speed using the respective buttons if needed.
5. Press the Start/Pause button to begin the cycle.

PROGRAMS AND FEATURES

The Bauknecht WAT Prime 652 Z offers a variety of programs and features designed for optimal washing results and convenience.

Available Programs (Examples)

- **Mixed Load (Mischwäsche):** For everyday mixed cotton and synthetic laundry.
- **Cotton (Koch/Bunt):** For robust cotton items.
- **Delicates (Fein):** For delicate fabrics requiring gentle care.
- **Wool (Wolle):** Specific program for wool garments.
- **Rinse & Spin (Spülen & Schleudern):** For rinsing and spinning items separately.
- **Short 30' (Kurz 30'):** A quick wash cycle for lightly soiled items.
- **AquaEco:** An energy-efficient program.
- **Jeans:** Dedicated program for denim.
- **Sport:** For sportswear.
- **Business:** For business attire.
- **15° Green & Clean:** Low-temperature wash for energy saving.
- **FreshFinish:** Helps keep laundry fresh if not removed immediately after the cycle.

Key Features

- **Automatic Quantity (Quantità automatica):** The machine automatically adjusts water and energy consumption based on the load size.
- **Short Program (Programma breve):** Reduces wash time for less soiled items, saving time and energy.
- **Aquastop:** A safety system designed to prevent water leaks.
- **Child Lock (Blocco per bambini):** Prevents accidental changes to settings during operation.
- **ZEN Technology:** Contributes to quiet operation and reduced vibration.
- **Automatic Drum Positioning:** After a wash cycle, the drum automatically positions its opening upwards for convenient unloading.

MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your washing machine.

Cleaning the Detergent Dispenser

The detergent dispenser can be easily removed for thorough cleaning. Pull it out completely, rinse under running water, and use a brush to remove any residue. Reinsert it securely.

Cleaning the Drain Filter

Periodically clean the drain filter to prevent blockages and ensure proper water drainage. Locate the filter at the bottom front of the machine. Place a shallow container underneath to catch any residual water. Unscrew the filter cover, remove any lint or foreign objects, clean it, and then reinsert and tighten securely.



Image: The drain filter compartment, with the filter cap removed, showing the internal mechanism and the filter itself, ready for cleaning.

Exterior Cleaning

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Before contacting service, check the following common issues:

- **Machine does not start:** Ensure the power cord is plugged in, the door is closed, and the Start/Pause button has been pressed. Check the circuit breaker.
- **No water filling:** Check if the water tap is open and the water inlet hose is not kinked.
- **Water not draining:** Inspect the drain hose for kinks or blockages. Clean the drain filter.
- **Excessive vibration or noise:** Ensure the machine is level and all four feet are firmly on the floor. Check that transport screws were fully removed during installation. Distribute laundry evenly in the drum.
- **Error codes on display:** Refer to the specific error code in your full product manual or contact customer support.

SPECIFICATIONS

Brand	Bauknecht
Model Number	WAT Prime 652 Z
Product Dimensions	60 x 40 x 90 cm
Capacity	6 Kilograms
Access Position	Top-Loader
Color	White

Item Weight	6 Kilograms
Maximum Spin Speed	1200 Revolutions per minute
Noise Level	48 Decibels
Special Features	Aquastop, Preset Start, Child Lock, Display, Remaining Time Indicator, Short Program, Automatic Quantity, ZEN Technology

WARRANTY AND SUPPORT

Your Bauknecht washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, spare parts, or to schedule a service appointment, please contact Bauknecht customer support or your authorized dealer. Keep your purchase receipt and model number (WAT Prime 652 Z) handy when contacting support.
