



Manuals.plus /

- › **Caso** /
- › CASO E9 Egg Cooker Instruction Manual

Caso E9 (Model 2771)

CASO E9 Egg Cooker Instruction Manual

Model: E9 (2771)

1. INTRODUCTION

Thank you for choosing the CASO E9 Design Egg Cooker. This appliance is designed for efficient and convenient cooking of up to 8 eggs simultaneously, offering various hardness settings. Please read this manual carefully before first use to ensure proper operation, safety, and maintenance of your egg cooker.



The CASO E9 Egg Cooker, showcasing its capacity for multiple eggs and a German 'Very Good' test rating.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your CASO E9 Egg Cooker:

- Main Unit / Heating Plate (Stainless Steel Base)
- Egg Tray (removable, holds up to 8 eggs)
- Transparent Lid
- Measuring Cup with Egg Piercer (integrated at the bottom)
- Omelette/Poaching Tray (for preparing omelettes or poached eggs)



Front view of the CASO E9 Egg Cooker, showing the main unit, egg tray, and transparent lid.



An overhead view of the CASO E9 Egg Cooker with the lid off, highlighting the egg tray.

4. SETUP

1. **Unpack:** Carefully remove all packaging materials from the egg cooker and its accessories.
2. **Initial Cleaning:** Before first use, wash the transparent lid, egg tray, measuring cup, and omelette/poaching tray in warm, soapy water. Rinse thoroughly and dry. Wipe the main unit with a damp cloth.
3. **Placement:** Place the egg cooker on a stable, flat, heat-resistant surface, away from water sources and other heat-generating appliances. Ensure adequate ventilation around the unit.

5. OPERATING INSTRUCTIONS

5.1 Cooking Boiled Eggs

1. **Measure Water:** Use the provided measuring cup to add the appropriate amount of water to the heating plate. The measuring cup has markings for different egg hardness levels (soft, medium, hard) and number of eggs. Adjust water quantity based on desired hardness and number of eggs.
2. **Pierce Eggs:** Carefully pierce the larger end of each egg with the egg piercer located at the bottom of the measuring cup. This prevents the eggs from cracking during cooking.
3. **Place Eggs:** Place the pierced eggs onto the egg tray. You can cook up to 8 eggs at a time.

4. **Cover:** Place the transparent lid securely over the egg tray and main unit.
5. **Connect Power:** Plug the power cord into a suitable electrical outlet (230V).
6. **Select Hardness:** Turn the control knob on the front of the unit to select your desired egg hardness (soft, medium, or hard). The knob has clear indicators for each setting.
7. **Start Cooking:** Press the ON/OFF button. The indicator light will illuminate, and the cooking process will begin.
8. **Completion:** Once the water has evaporated and the eggs are cooked to the desired hardness, an audible signal will sound, and the appliance will automatically switch off.
9. **Remove Eggs:** Carefully remove the lid (steam will be hot) and then remove the egg tray using a heat-resistant glove or cloth. Immediately rinse the cooked eggs under cold water to stop the cooking process and make them easier to peel.



The CASO E9 Egg Cooker loaded with 8 eggs, ready for the cooking process.



A detailed view of the control knob and illuminated ON/OFF button on the CASO E9 Egg Cooker.

5.2 Preparing Omelettes or Poached Eggs

The CASO E9 Egg Cooker includes a special tray for preparing omelettes or poaching eggs.

1. **Prepare Mixture:** For omelettes, whisk eggs with desired ingredients (milk, cheese, vegetables, etc.). For poached eggs, crack eggs directly into the tray.
2. **Add Water:** Add the recommended amount of water to the heating plate (refer to the measuring cup for guidance, typically for 'hard' setting for thorough cooking).
3. **Place Tray:** Place the omelette/poaching tray onto the egg tray.
4. **Cover and Cook:** Place the transparent lid and start the cooking process as described for boiled eggs.
5. **Completion:** The appliance will signal and switch off when done. Carefully remove the tray.



The omelette/poaching tray with liquid egg mixture and herbs, placed inside the egg cooker.



A cooked omelette or scrambled egg portion in the dedicated tray, ready to be served.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your egg cooker.

- **Always unplug** the appliance from the power outlet and allow it to cool completely before cleaning.
- **Heating Plate:** Wipe the heating plate with a damp cloth. For stubborn stains or mineral deposits (limescale), use a small amount of white vinegar or a descaling solution specifically designed for kitchen appliances. Do not immerse the main unit in water.
- **Removable Parts:** The transparent lid, egg tray, measuring cup, and omelette/poaching tray can be washed in warm, soapy water. Rinse thoroughly and dry completely before storing. These parts are generally dishwasher safe, but hand washing is recommended for extended durability.
- **Descaling:** Over time, mineral deposits may build up on the heating plate. To descale, fill the heating plate with a mixture of water and white vinegar (1:1 ratio) or a commercial descaling agent. Let it sit for 15-30 minutes, then wipe clean. Rinse thoroughly by wiping with a damp cloth several times.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surfaces.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Eggs not cooked to desired hardness	Incorrect water amount; egg size variation; altitude.	Adjust water quantity slightly for future use. Larger eggs may require a bit more water.
Egg shells crack during cooking	Eggs not pierced; cold eggs used directly from refrigerator.	Always pierce the larger end of the egg. Allow cold eggs to reach room temperature before cooking, if possible.
Appliance does not turn on	Not plugged in; power outage; faulty outlet.	Ensure power cord is securely plugged in. Check power supply. Try a different outlet.
White residue on heating plate	Mineral deposits from water (limescale).	Descal the heating plate as described in the Maintenance section.

8. TECHNICAL SPECIFICATIONS

- **Model:** E9 (2771)
- **Brand:** Caso
- **Power:** 400 watts
- **Voltage:** 230 Volts
- **Capacity:** 1 litre (water reservoir) / 8 eggs
- **Material:** Stainless Steel (base)
- **Product Dimensions:** Approximately 2.79 x 24.64 x 16.51 cm

- **Item Weight:** Approximately 1 kg
- **Colour:** Silver

9. WARRANTY AND SUPPORT

Your CASO E9 Egg Cooker comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details. For technical support, spare parts, or service inquiries, please contact Caso customer service or visit the official Caso website for more information.

For further assistance, you may visit the [Caso Store on Amazon](#).