

Esperanza EKM007G

Esperanza EKM007G Hand Mixer MUFFIN User Manual

Model: EKM007G

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always ensure the voltage on the rating label corresponds to your mains voltage.
- Do not immerse the motor unit, cord, or plug in water or any other liquid.
- Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
- Keep hands and utensils away from the mixing bowl during operation to reduce the risk of severe injury to persons or damage to the mixer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PRODUCT OVERVIEW

The Esperanza EKM007G Hand Mixer MUFFIN is designed for efficient mixing, beating, and kneading tasks in the kitchen. It features an ergonomic handle, adjustable speeds, and durable stainless steel attachments.



Image: Esperanza EKM007G Hand Mixer MUFFIN in its retail packaging, showcasing the mixer and its key features like adjustable speeds, eject function, and 150W power.

Components:

- Motor Unit with Ergonomic Handle
- Speed Selector Switch (7 speeds)
- Beater Eject Button
- Stainless Steel Beaters (2)
- Stainless Steel Kneader Hooks (2)

SETUP

1. **Unpacking:** Carefully remove all packaging materials and inspect the mixer for any damage.
2. **Cleaning:** Before first use, wash the stainless steel beaters and kneader hooks in warm, soapy water. Rinse thoroughly and dry completely. Wipe the motor unit with a damp cloth.
3. **Attaching Beaters/Hooks:**
 - Insert the beaters or kneader hooks into the openings on the underside of the mixer. Ensure they click into place securely. The beaters are interchangeable, but the kneader hooks must be inserted correctly (one with a collar, one without, matching the openings).
 - For beaters, ensure the one with the collar goes into the larger opening.

4. **Power Connection:** Ensure the mixer is switched off (speed selector at '0') before plugging it into a 220V electrical outlet.

OPERATING INSTRUCTIONS

1. **Preparation:** Place ingredients in a suitable mixing bowl.
2. **Attachment Selection:** Choose either the beaters for whipping, mixing, and aerating, or the kneader hooks for dough.
3. **Starting the Mixer:** With the attachments securely in place and the mixer unplugged, plug the mixer into the power outlet.
4. **Speed Selection:** Start mixing at a low speed (1 or 2) to prevent splashing, then gradually increase to the desired speed using the speed selector switch. The mixer offers 7 adjustable speeds.
5. **Mixing:** Move the mixer slowly through the ingredients. Do not operate continuously for more than 5 minutes. Allow the mixer to rest for at least 20 minutes after heavy use.
6. **Stopping the Mixer:** Return the speed selector switch to '0' to turn off the mixer.
7. **Ejecting Attachments:** Unplug the mixer from the power outlet. Press the beater eject button to release the beaters or kneader hooks.

Recommended Speeds:

Speed Setting	Application
1-2	Mixing dry ingredients, folding in ingredients, mashing potatoes.
3-4	Mixing liquid ingredients, gravies, puddings.
5-6	Creaming butter and sugar, beating eggs, mixing cake batter.
7	Whipping cream, egg whites, frosting.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your hand mixer.

1. **Always Unplug:** Before cleaning, always unplug the mixer from the electrical outlet.
2. **Cleaning Attachments:** The stainless steel beaters and kneader hooks are dishwasher safe. Alternatively, they can be washed by hand in warm, soapy water, rinsed, and dried thoroughly.
3. **Cleaning Motor Unit:** Wipe the exterior of the motor unit with a damp cloth. Do not use abrasive cleaners or scourers. Never immerse the motor unit in water or any other liquid.
4. **Storage:** Store the mixer and its attachments in a dry, safe place, away from direct sunlight and out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet not working; speed selector not at '0' before plugging in.	Ensure the mixer is securely plugged into a working outlet. Check if the speed selector is at '0' before plugging in.

Problem	Possible Cause	Solution
Attachments are difficult to insert or eject.	Attachments not aligned correctly; eject button not fully pressed.	Ensure attachments are aligned with the openings. Press the eject button firmly. For kneader hooks, ensure correct orientation.
Motor sounds strained or overheats.	Overloading with thick mixtures; continuous operation for too long.	Reduce the amount of ingredients or thin the mixture. Do not operate continuously for more than 5 minutes. Allow the mixer to cool down.

SPECIFICATIONS

- **Model:** EKM007G
- **Brand:** Esperanza
- **Power:** 150 Watts
- **Voltage:** 220 Volts
- **Number of Speeds:** 7
- **Material:** Stainless Steel (beaters, kneader hooks, blade, container)
- **Dimensions (L x W x H):** 19 x 7 x 12 cm
- **Weight:** 587 grams
- **Controls:** Push Button (for eject), Speed Selector Switch
- **Dishwasher Safe Parts:** Beaters, Kneader Hooks

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact your local Esperanza dealer. Keep your purchase receipt as proof of purchase.

Manufacturer: Esperanza

© 2023 Esperanza. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question