

Lamart LT7011

Lamart LT7011 Electric Grinder User Manual

Model: LT7011

1. INTRODUCTION

Thank you for choosing the Lamart LT7011 Electric Grinder. This manual provides essential information for the safe and efficient use of your new electric grinder. Please read these instructions carefully before first use and keep them for future reference.

The Lamart LT7011 is designed for grinding various dry spices, such as peppercorns, sea salt, and other dried herbs, providing freshly ground flavor with ease.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Keep the grinder out of reach of children.
- Do not immerse the grinder in water or any other liquid.
- Do not use the grinder for anything other than its intended purpose (grinding dry spices).
- Ensure batteries are inserted correctly according to polarity markings.
- Remove batteries if the grinder will not be used for an extended period.
- Do not attempt to grind wet spices or other non-spice items, as this may damage the grinding mechanism.
- Avoid contact with moving parts during operation.
- Do not operate the grinder if it is damaged or malfunctioning. Contact customer support.

3. PACKAGE CONTENTS

Please check the package contents upon unpacking. You should find:

- 1 x Lamart LT7011 Electric Grinder
- 1 x User Manual (this document)

Note: Batteries are typically not included and must be purchased separately.

4. SETUP

4.1. Battery Installation

1. Grip the top section of the grinder and twist counter-clockwise to separate it from the main body.
2. Locate the battery compartment. Insert the required number of batteries (e.g., 4x AA batteries, not included) according to the polarity markings (+/-).
3. Reattach the top section by aligning the grooves and twisting clockwise until secure.

4.2. Filling the Grinder

1. Twist the transparent lower section of the grinder counter-clockwise to detach it from the main body.
2. Fill the transparent chamber with your desired dry spices (e.g., peppercorns, sea salt). Do not overfill.
3. Reattach the transparent lower section by aligning the grooves and twisting clockwise until secure.



Image: The Lamart LT7011 Electric Grinder with its top and bottom sections detached, illustrating the battery compartment and the spice filling chamber.

5. OPERATING INSTRUCTIONS

5.1. Grinding Spices

1. Hold the grinder firmly over your food or dish.
2. Press and hold the button located on the top of the grinder. The grinding mechanism will activate, and the spices will be dispensed from the bottom.
3. Release the button to stop grinding.



Image: A hand demonstrating how to hold the Lamart LT7011 Electric Grinder during operation.

5.2. Adjusting Coarseness

The grinder features an adjustable ceramic grinding mechanism to achieve your desired coarseness.

- To adjust, locate the adjustment knob at the bottom of the grinder (usually a small dial or ring around the grinding mechanism).
- Turn the knob clockwise for a finer grind.
- Turn the knob counter-clockwise for a coarser grind.
- Test the grind on a small surface to find your preferred setting.



Image: The Lamart LT7011 Electric Grinder showcasing its transparent chamber filled with colorful peppercorns.



Image: The Lamart LT7011 Electric Grinder with its transparent chamber filled with coarse sea salt crystals.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your grinder.

- **Cleaning the Exterior:** Wipe the exterior of the grinder with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Grinding Mechanism:** Use a small brush (e.g., a clean toothbrush) to remove any spice residue from the grinding mechanism.
- **Do NOT wash in a dishwasher.** The grinder is not dishwasher safe.

- **Do NOT immerse in water.** This will damage the electronic components.
- Ensure the grinder is completely dry before reassembling or storing.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not operate.	<ul style="list-style-type: none"> • Batteries are dead or incorrectly inserted. • Grinder is clogged. 	<ul style="list-style-type: none"> • Check battery polarity and replace if necessary. • Clear any blockages in the grinding mechanism.
Grinding is inconsistent or too slow.	<ul style="list-style-type: none"> • Low battery power. • Grinding mechanism is dirty or partially clogged. • Spices are too large or wet. 	<ul style="list-style-type: none"> • Replace batteries. • Clean the grinding mechanism thoroughly. • Ensure spices are dry and appropriately sized for grinding.
No spices are dispensed.	<ul style="list-style-type: none"> • Spice chamber is empty. • Grinding mechanism is completely clogged. 	<ul style="list-style-type: none"> • Refill the spice chamber. • Clean the grinding mechanism.

8. SPECIFICATIONS

Brand	Lamart
Model Number	LT7011
Color	Black
Product Dimensions (L x W x H)	6 x 6 x 23 cm
Item Weight	215 Grams
Material	Stainless Steel, Acrylic, Plastic
Operation Mode	Electric (Battery Operated)
Dishwasher Safe	No
International Article Code (EAN/UPC)	08590669180004

9. WARRANTY AND SUPPORT

Specific warranty information for the Lamart LT7011 Electric Grinder is not provided in this manual. Please refer to the retailer's return policy or contact Lamart customer service for details regarding warranty coverage and support.

For further assistance or inquiries, please visit the official Lamart website or contact your point of purchase.

