

[Manuals.plus](#) /

› [eSynic](#) /

› eSynic 2Pack Professional Walkie Talkies for Adults 5KM/3Miles Long Rang Walkie Talkies Best 16CH Walkie Talkies Rechargeable VOX Radio Walkie Talkies With Earpieces Wonderful Gifts For Adult Kids etc 2 Pack

eSynic ESYESY079

eSynic Professional Walkie Talkies User Manual

Model: ESYESY079

INTRODUCTION

The eSynic Professional Walkie Talkies are engineered for reliable and clear communication across distances up to 5 kilometers (3 miles) in open environments. Equipped with 16 channels, a VOX (Voice Operated Exchange) function for hands-free operation, and a robust, waterproof design, these devices are ideal for various outdoor activities and professional use. Each unit includes an original earpiece for improved audio clarity in noisy settings and a convenient built-in LED flashlight.



Image: Two eSync walkie talkies with their charging bases and included earpieces.

WHAT'S INCLUDED

- 2 × Walkie talkies
- 2 × Earpieces
- 2 × Li-ion Battery Pack
- 2 × USB Charger
- 2 × Belt Clip
- 2 × The Sling
- 1 × User's Manual
- 1 x eSync Logo in a Beautiful Box

SETUP

Battery Installation



Image: The eSync walkie talkies shown with their charging bases and various accessories.

The eSync walkie talkies utilize rechargeable Lithium-Ion battery packs. To install, carefully remove the battery cover on the back of the unit and insert the battery pack, ensuring it clicks securely into place. Replace the cover firmly.

Charging



Image: A diagram illustrating how to charge the eSync walkie talkie using its charging base and a USB power source. The walkie talkies offer two charging methods: either place the entire radio unit into the charging base, or remove the battery pack and place it directly into the charging base. Connect the USB charger to a compatible 5V power source such as a power adapter, phone charger, power bank, PC/laptop, or 5V car charger. The indicator light on the charging base will illuminate red during charging and turn green when the battery is fully charged.

Video: Demonstrates the charging process of the eSync walkie talkies and their battery packs.

OPERATING INSTRUCTIONS

Power On/Off and Volume Control



Image: A close-up view of the top knobs on the eSync walkie talkie, used for power, volume, and channel selection. To power on the walkie talkie, rotate the rightmost knob clockwise. A voice prompt will confirm "Power On" and announce the current channel number. Continue rotating this knob to increase the volume. To decrease volume and power off the device, rotate the knob counter-clockwise.

Video: Shows how to power on the walkie talkie and adjust its volume using the top knob.

Channel Selection

The eSync walkie talkies feature 16 available channels. To select a channel, rotate the left knob. A voice prompt will announce the selected channel number. For successful communication, both walkie talkies must be tuned to the exact same channel.

Push-to-Talk (PTT)

CONSIDERATE DESIGN UPGRADES



★★ Upgraded Noise Reduction

★★ Convenient Belt Clip

Image: A person holding the eSync walkie talkie, with the Push-to-Talk (PTT) button clearly visible on the side. To transmit your voice, press and hold the large "PTT" button located on the side of the walkie talkie. Speak clearly into the microphone. Release the button to switch back to receive mode and listen for incoming transmissions.

Video: Illustrates how to use the PTT button for communication on the walkie talkie.

VOX Function (Hands-Free Communication)

The VOX (Voice Operated Exchange) function enables hands-free communication. When activated, the walkie talkie will automatically begin transmitting when it detects your voice, eliminating the need to manually press the PTT button. Please refer to the detailed user manual for specific instructions on how to activate and adjust the VOX sensitivity.

Built-in LED Flashlight



Low Battery Indicator

Red: charging
Green: completed

1500MAH CAPACITY POWER BATTERY

Built-in large-capacity Li-ion battery and power saving function supports long usage and improves efficiency, making the communication safe and reliable

9hours	48hours	3hours
Working Time	Standby Time	Fully Charged

Image: The eSync walkie talkie with its built-in LED flashlight turned on, illuminating a dark area.

For added convenience in low-light conditions, the walkie talkie includes a built-in LED flashlight. Short-press the designated flashlight button (consult your user manual for its exact location) to toggle the light on or off.

Video: Demonstrates how to activate and use the built-in LED flashlight on the walkie talkie.

Earpiece Connection



Image: A close-up view of the eSync walkie talkie showing the earpiece securely connected to its port. For private conversations and enhanced audio clarity, especially in noisy environments, connect the provided earpieces to the audio jack located on the side of the walkie talkie. Ensure the plug is fully inserted for proper function.

Video: Demonstrates how to connect the earpiece to the walkie talkie for private listening.

MAINTENANCE

To ensure the longevity and optimal performance of your eSync walkie talkies, follow these maintenance guidelines:

- Keep the devices clean and dry. Wipe with a soft, damp cloth.
- Avoid exposing the walkie talkies to extreme temperatures, direct sunlight, or harsh chemicals.
- Store the devices and batteries in a cool, dry place when not in use.
- Do not attempt to disassemble or repair the unit yourself. Contact customer support for assistance.

TROUBLESHOOTING

Problem	Solution
No Power	Ensure battery is fully charged and correctly installed.
No Communication	Verify both walkie talkies are on the same channel and within range. Check volume levels.
Static or Unclear Audio	Move to an open area to improve signal. Check for obstructions. Ensure earpiece is properly connected if used.
Short Battery Life	Ensure batteries are fully charged before use. Battery life may vary based on usage and environmental conditions.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Item Weight	6.4 ounces
Product Dimensions	2.36 x 1.3 x 4.53 inches
Item Model Number	ESYESY079
Batteries	2 Lithium Ion batteries required (included)
Brand	eSynic
Color	2 PCS Walkie Talkies
Number of Channels	16
Special Feature	Noise Reduction, With Bright Flashlight Illumination, As Wonderful Gift for Kids and Adults
Frequency Range	FRS462MHz
Talking Range Maximum	5 Kilometer
Tuner Technology	UHF
Voltage	3.7 Volts
Water Resistance Level	Waterproof

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official eSynic website or contact their customer service directly. The user manual (PDF) is also available for download at: [eSynic User Manual PDF](#).