

Sony SCPH-77001

Sony PlayStation 2 Slim Console (SCPH-77001) User Manual

Model: SCPH-77001

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Sony PlayStation 2 Slim console, model SCPH-77001. Please read this manual thoroughly before using your console to ensure proper operation and longevity.

1. SETUP

1.1 Unpacking the Console

Carefully remove all components from the packaging. Ensure the following items are present:

- PlayStation 2 Slim Console (SCPH-77001)
- AC Adaptor and Power Cord
- AV Cable (Composite Video/Stereo Audio)
- DUALSHOCK 2 Analog Controller (may be sold separately)
- PlayStation 2 Memory Card (8MB) (may be sold separately)

1.2 Connecting the Console to a Television

Connect the AV cable to the AV MULTI OUT port on the back of the PlayStation 2 console. Connect the other end of the AV cable (yellow, white, red connectors) to the corresponding input jacks on your television. The yellow connector is for video, and the white and red connectors are for left and right stereo audio, respectively.



Image: Rear view of the PlayStation 2 Slim console, showing the AV MULTI OUT port and power input. This port is used to connect the console to a television using the supplied AV cable.

1.3 Connecting the AC Adaptor

Connect the AC adaptor cable to the DC IN 8.5V port on the back of the console. Plug the power cord into the AC adaptor, then plug the power cord into a standard electrical outlet.

1.4 Connecting Controllers and Memory Cards

Insert DUALSHOCK 2 analog controllers into the CONTROLLER ports on the front of the console. Insert PlayStation 2 Memory Cards into the MEMORY CARD slots on the front of the console. Ensure they are inserted correctly with the label facing up.

2. OPERATING INSTRUCTIONS

2.1 Powering On and Off

To power on the console, press the POWER button located on the front of the console. The indicator light will turn green. To power off, press the POWER button again. The indicator light will turn red.

2.2 Inserting and Removing Discs

Open the disc tray cover by sliding it to the right. Place a PlayStation 2 format disc (CD or DVD) onto the disc tray spindle with the label side facing up. Gently close the disc tray cover by sliding it to the left until it clicks into place. To remove a disc, open the cover and lift the disc carefully from the spindle.

2.3 Navigating the PlayStation 2 Browser

When the console is powered on without a game disc, the PlayStation 2 Browser screen will appear. From here, you can access Memory Card management, system configuration, and disc playback options. Use

the DUALSHOCK 2 controller's directional buttons and X button to navigate and select options.

2.4 Playing Games

After inserting a game disc and powering on the console, the game should automatically start. If it does not, select "Disc" from the PlayStation 2 Browser menu. Follow on-screen instructions for game-specific controls and saving procedures.

2.5 Saving Game Data

Game data is saved to a PlayStation 2 Memory Card (8MB). Ensure a memory card is inserted into one of the MEMORY CARD slots before attempting to save game progress. Most games provide an in-game option to save data.

3. MAINTENANCE

3.1 Cleaning the Console

Wipe the console's exterior with a soft, dry cloth. Do not use liquid cleaners, solvents, or abrasive materials. Keep ventilation openings clear of dust and debris to prevent overheating.

3.2 Disc Care

Handle discs by their edges. Keep discs clean and free from scratches. If a disc is dirty, gently wipe it from the center outwards with a soft, lint-free cloth. Do not use abrasive materials or solvents. Store discs in their cases when not in use.

3.3 Storage

Store the console in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid placing heavy objects on top of the console.

4. TROUBLESHOOTING

4.1 No Power

- Ensure the AC adaptor is securely connected to the console and the power cord is firmly plugged into a working electrical outlet.
- Verify the power outlet is functional by plugging in another device.

4.2 No Video or Audio Output

- Check that the AV cable is securely connected to both the console and the television.
- Ensure your television is set to the correct input source (e.g., AV1, Video 1).
- Verify the television's volume is not muted or set too low.

4.3 Disc Read Errors

- Ensure the disc is clean and free of scratches or smudges. Clean the disc if necessary (refer to Section 3.2).
- Verify the disc is inserted correctly with the label side facing up.
- Try a different game disc to determine if the issue is with the console or a specific disc.

4.4 Controller Not Responding

- Ensure the controller is firmly plugged into the CONTROLLER port.
- Try plugging the controller into the other CONTROLLER port.
- Test with a different controller if available.

5. SPECIFICATIONS

Feature	Detail
Model Number	SCPH-77001
Platform	PlayStation 2
Input Device	Gamepad (DUALSHOCK 2)
Connectivity Technology	AV, Ethernet
Resolution	480p
Compatible Flash Memory Type	Memory Stick (via adaptor, not standard PS2 memory card)
Color	Silver

Note: Specifications are subject to change without notice. For the most current information, refer to official Sony documentation.

6. WARRANTY AND SUPPORT

6.1 Product Warranty

This product may be covered by a limited warranty from Sony. Please refer to the warranty card included with your original purchase or visit the official Sony PlayStation support website for detailed warranty terms and conditions. Warranty coverage typically applies to defects in materials and workmanship under normal use.

6.2 Customer Support

For technical assistance, service, or questions regarding your PlayStation 2 Slim console, please contact Sony PlayStation customer support. Support contact information can usually be found on the official PlayStation website or in the documentation provided with the console.

When contacting support, please have your console's model number (SCPH-77001) and serial number ready.