

Domo DO8709P

Domo DO8709P Pancake/Crepe Maker User Manual

Model: DO8709P | Brand: Domo

INTRODUCTION

Welcome to the user manual for your new Domo DO8709P Pancake/Crepe Maker. This appliance is designed to help you easily prepare delicious pancakes and crepes. Please read this manual thoroughly before first use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- This appliance is for household use only.

Keep this manual for future reference.

PRODUCT OVERVIEW

The Domo DO8709P Pancake/Crepe Maker features a non-stick cooking surface with six individual pancake molds, a power indicator light, and an on/off switch. It comes with a dough ladle for easy batter portioning.

Components

- Main Unit with Non-Stick Cooking Surface
- Power On/Off Switch (with indicator light)
- Dough Ladle



The Domo DO8709P Pancake/Crepe Maker in use, showing a hand pouring batter into one of the six cooking molds. Several pancakes are already cooking on the non-stick surface.



The Domo DO8709P Pancake/Crepe Maker shown with its included dough ladle, positioned next to the appliance.



A detailed view of the red power on/off switch located on the side of the Domo DO8709P Pancake/Crepe Maker.

SETUP

1. Unpack the appliance and all accessories. Remove all packaging materials.
2. Wipe the cooking surface with a damp cloth and dry thoroughly.
3. Place the appliance on a stable, heat-resistant, and flat surface, away from walls or other heat-sensitive materials. Ensure there is adequate ventilation around the unit.
4. Ensure the on/off switch is in the "off" position before plugging in.

OPERATING INSTRUCTIONS

Before First Use

It is recommended to operate the appliance empty for about 5-10 minutes during the first use. This will burn off any manufacturing residues and may produce a slight odor or smoke. This is normal. Ensure the area is well-ventilated. After this initial run, unplug and allow to cool, then wipe the surface clean.

Making Pancakes/Crepes

1. Prepare your pancake or crepe batter according to your recipe.
2. Plug the appliance into a suitable electrical outlet. The power indicator light will illuminate, indicating the unit is heating up.
3. Allow the appliance to preheat for approximately 3-5 minutes. The non-stick surface will reach the optimal cooking temperature.
4. Using the provided dough ladle, pour batter into each of the six cooking molds. Fill the ladle to the guideline for consistent pancake size (approximately Ø 11.5 cm).
5. Cook for 1-2 minutes per side, or until golden brown and cooked through. Cooking time may vary based on batter consistency and desired doneness.
6. Use a non-metallic spatula to carefully flip the pancakes.
7. Once cooked, remove the pancakes and serve immediately or keep warm.
8. Repeat the process for additional batches.
9. After use, switch the appliance off by pressing the on/off switch and unplug it from the wall outlet.



The Domo DO8709P Pancake/Crepe Maker with six perfectly cooked, golden-brown pancakes on its non-stick surface, ready for serving.

Maintenance and Cleaning

Proper cleaning and maintenance will extend the life of your appliance.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Do not immerse the appliance in water or any other liquid.
3. Wipe the non-stick cooking surface with a soft, damp cloth or sponge. For stubborn residue, a small amount of mild dish soap can be used, but ensure it is thoroughly rinsed off with a damp cloth.
4. Do not use abrasive cleaners, scouring pads, or metal utensils on the non-stick surface, as this can damage the coating.
5. The exterior of the appliance can be wiped clean with a damp cloth.
6. The dough ladle can be washed with warm soapy water.
7. Store the appliance in a dry place once clean and dry.

Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet not working; On/off switch not pressed.	Ensure the appliance is securely plugged into a working outlet. Press the on/off switch. Check your household circuit breaker.
Pancakes stick to the surface.	Surface not properly cleaned; Damaged non-stick coating; Not enough preheating.	Ensure the surface is clean and dry before use. Allow sufficient preheating time. Avoid using metal utensils that can scratch the coating.
Pancakes are not cooking evenly.	Uneven batter distribution; Appliance not fully preheated.	Ensure batter is evenly distributed in each mold. Allow the appliance to fully preheat before adding batter.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. It should dissipate after a few minutes.

Specifications

Model: DO8709P

Brand: Domo

Power: 1000 W

Voltage: 230 V

Material: Non-stick, Plastic

Product Dimensions: 20.08 x 13.39 x 5.12 cm (approx. 13.4D x 20.1W x 5.1H cm)

Item Weight: 1.92 kg

Pancake Diameter: Ø 11.5 cm (approx.)

Features: Non-stick coating, Dough ladle included



Dimensions of the Domo DO8709P Pancake/Crepe Maker, indicating its length (20.1 cm), width (13.4 cm), and height (5.1 cm).

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in the product packaging or contact Domo customer support.

For technical assistance, spare parts, or any questions regarding your Domo DO8709P Pancake/Crepe Maker, please visit the official Domo website or contact their customer service department. Keep your proof of purchase for warranty claims.