

Excelvan EHD11

Excelvan EHD11 Mini LED Projector User Manual

Model: EHD11

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Excelvan EHD11 Mini LED Projector. Please read this manual thoroughly before using the projector to ensure proper operation and to extend the product's lifespan. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To prevent fire or electric shock, do not expose this appliance to rain or moisture. Observe the following safety precautions:

- Do not block any ventilation openings. Ensure adequate space around the projector for proper airflow.
- Do not place the projector on an unstable cart, stand, or table.
- Do not operate the projector near water or moisture.
- Use only attachments/accessories specified by the manufacturer.
- Unplug this projector during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.
- Avoid looking directly into the projector lens when the lamp is on.

3. PACKAGE CONTENTS

Please check that all items are present and in good condition:

- Excelvan EHD11 Projector
- Power Cable
- Remote Control

- AV Cable
- User Manual

4. PRODUCT OVERVIEW

4.1 Projector Front and Top View



Image 4.1: Front and top view of the Excelvan EHD11 projector, showing the lens, ventilation, and control buttons (Source, Menu).

4.2 Projector Rear View and Ports

Built-in 2x speaker Sound quality is excellent



Image 4.2: Rear view of the Excelvan EHD11 projector, highlighting the dual built-in speakers and various input/output ports including USB, HDMI, VGA, AV, and audio out.

4.3 Connectivity Options



Image 4.3: Diagram illustrating the wide range of devices compatible with the projector, such as PCs, smartphones, USB storage, TV set-top boxes, game consoles, DVD players, digital cameras, and external speakers.

5. SETUP

5.1 Placement and Projection Distance

Position the projector on a stable, flat surface. The projection distance directly affects the screen size. Refer to the diagram below for recommended distances and corresponding screen sizes.



Image 5.1: Chart detailing the relationship between projection distance (in meters) and screen size (in inches) for a 16:9 aspect ratio, ranging from 32 inches at 1.2 meters to 200 inches at 6 meters.

5.2 Power Connection

Connect the power cable to the projector's power input and then to a power outlet. The power indicator light will illuminate.

5.3 Connecting Input Sources

The projector supports multiple input sources. Connect your desired device (e.g., PC, DVD player, game console, USB drive) to the corresponding port on the rear of the projector using the appropriate cable (HDMI, VGA, AV, USB).

5.4 Focus and Keystone Adjustment

After powering on, adjust the focus ring around the lens until the image is clear. If the image appears trapezoidal, use the keystone correction dial to square the image. The projector supports a $\pm 15^\circ$ keystone adjustment.

Innovative trapezoidal correction and lens adjustment

Creative optical trapezoidal correction, the lens focusing, comfortable feel is the perfect fusion of buttons and the fuselage

$\pm 15^\circ$



Image 5.4: Visual representation of the $\pm 15^\circ$ trapezoidal correction and lens adjustment feature, showing how to correct distorted images.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the power button on the projector or the remote control to turn the unit on or off.

6.2 Source Selection

Press the 'Source' button on the projector or remote control to cycle through available input sources (HDMI1, HDMI2, USB1, USB2, VGA, AV, YPbPr, TV/DTV). Select the input corresponding to your connected device.

6.3 Menu Navigation

Press the 'Menu' button to access the projector's settings. Use the arrow keys on the projector or remote to navigate, and 'OK' or 'Enter' to confirm selections. Adjust settings such as picture mode, aspect ratio, sound mode, and language.

6.4 Audio Output

The projector features built-in speakers. For enhanced audio, connect external speakers to the 'Audio Out' port using a 3.5mm audio cable.

7. MAINTENANCE

7.1 Lens Cleaning

Use a soft, lint-free cloth and a specialized lens cleaning solution to gently wipe the projector lens. Avoid abrasive materials or excessive pressure.

7.2 Ventilation

Regularly check that the projector's ventilation openings are clear of dust and debris. Blocked vents can lead to overheating and affect performance. Do not place the projector on soft surfaces that may obstruct airflow.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No image on screen	Power cable disconnected; Incorrect input source selected; Input device not powered on or connected properly.	Check power connection; Select correct input source; Ensure input device is on and cables are secure.
Image is blurry	Focus not adjusted.	Adjust the focus ring on the projector lens.
Image is distorted (trapezoidal)	Keystone not adjusted.	Adjust the keystone correction dial.
No sound	Volume too low; Audio cables not connected; Incorrect audio output selected on source device; External speakers not connected or powered.	Increase volume; Check audio cable connections; Ensure source device is outputting audio; Connect external speakers if desired.
Input source needs to be set every time	Projector defaults to a specific input or does not save last setting.	Manually select the desired input source after powering on. Check menu settings for an 'Auto Source' or 'Last Input' option if available.

9. SPECIFICATIONS

- **Brand:** Excelvan
- **Model:** EHD11 (FBA_151224-F6)
- **Display Type:** LCD
- **Display Resolution:** 1920 x 1080 (Full HD supported)
- **Connectivity Technology:** HDMI, USB, VGA, AV
- **Special Feature:** 3D-Ready, Portable
- **Item Weight:** 6.49 pounds

- **Package Dimensions:** 16.9 x 13.1 x 8.5 inches
- **Manufacturer:** Excelvan
- **Date First Available:** November 8, 2014





10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.



© 2023 Excelvan. All rights reserved.

Related Documents - EHD11

 7021G 7inch Car MP5 Player User Manual	Excelvan 7021G 7-inch Car MP5 Player User Manual Comprehensive user manual for the Excelvan 7021G 7-inch car MP5 player, covering features, operation, settings, and troubleshooting. Learn how to install and use your device for enhanced in-car entertainment.
	Wireless Weather Station Instruction Manual WH1175/1176 Instruction manual for the WH1175/WH1176 Wireless Weather Station, covering setup, features, operation, troubleshooting, and specifications for home and office use.
	Produktkatalog: Haushaltsgeräte und Elektronik Umfassender Katalog von Haushaltsgeräten und Elektronikprodukten von führenden Marken wie Bosch, Siemens, Dyson und mehr, mit detaillierten Produktbeschreibungen und Preisen.
	Produktübersicht: Haushaltsgeräte und Elektronik von führenden Marken Umfassende Liste von Haushaltsgeräten und Elektronikprodukten, einschließlich Kaffeevollautomaten, Staubsauger, Kochfelder, Küchenmaschinen von Marken wie Siemens, Bosch, Dyson, Kenwood und AEG. Detaillierte Produktbeschreibungen, Modellnummern und Preise.

